INSTRUCTIONS

⚠ WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

⚠ **WARNING:** ELECTRIC PRODUCT. Keep away from children. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. To avoid the risk of electrical shock, always make sure the figure is unplugged from the electrical outlet before assembling, disassembling, or relocating.

⚠ **WARNING:** This product is to be assembled by adults only.

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

1. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This seasonal use product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
5. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
6. Do not let lamps rest on the supply cord or on any wire.
7. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
8. Do not use this product for other than its intended purpose.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
11. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
12. Do not place the product against carpeting, furniture, or any other fabric when in use.
13. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. Do not use an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.
14. This product employs overload protection (fuse). A blown fuse indicates an overload or a short-circuit condition. If the fuse blows, unplug the product from the outlet. Also unplug any additional string or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product markings for proper fuse rating) and check the product. If replacement fuse blows, a short-circuit may be present and the product should be discarded.
15. Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS

USE AND CARE INSTRUCTIONS

1. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connection, or exposed copper wire.
2. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.


INSTRUCTIONS


Congratulations! You're the proud owner of a Gemmy Airblown® Inflatable. Please read over the directions carefully before using your Gemmy Airblown® Inflatable.

CONTENTS

Airblown® Inflatable Unit	1 piece
Base Stakes	4 pieces
Tether Stakes	4 pieces
Nylon Tethers	4 pieces
Extra C-7 Light Bulb	1 piece
5 Amp, 125V Fuse	1 piece

GENERAL INSTRUCTIONS

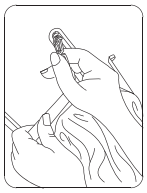
Illustration 1

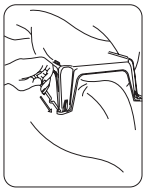
Illustration 2

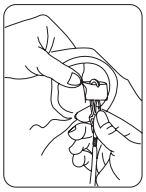

Illustration 3


Illustration 4

1. Remove contents from packaging. Lay out deflated Airblown® Inflatable in a clear area.
2. Locate four clips on the bottom of the fabric and attach to the plastic legs (See illustration 1).
3. Turn unit upright. Make sure the air intake is clear of fabric or other obstruction and zipper is fully closed.
4. Insert the base stakes through the plastic legs into the ground (See illustration 2).
5. Plug into receptacle or other outlet device to inflate your Airblown® Inflatable.
6. Once fully inflated, clip the tethers to each of the nylon loops on the side of the Airblown® Inflatable (See illustration 3).
7. Insert the tether stakes into the ground and attach the tethers (See illustration 4).
8. To deflate, unplug fan. For faster deflation, unzip zipper after unplugging fan. Do not unplug by pulling on cord.

USER SERVICING INSTRUCTIONS


Lamp Replacement

Disconnect the plug from the electrical outlet and allow the lamp to cool completely before replacing bulb. Do not touch the bulb when the power is "ON" as it is extremely hot and make cause electrocution.

1. Grasp plug and remove from receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open the zipper opening on the Airblown® Inflatable.
3. Open the protective light cover carefully by pressing down on the two locking side tabs simultaneously.
4. Replace lamp with same type 7W maximum, candelabra base, UL classified.
5. Do not over-tighten the lamp as this may damage the lamp or lamp holder.

CAUTION

Replace only with same type C7, 7 Watt Max Candelabra-base 120 Volt UL Classified lamps.

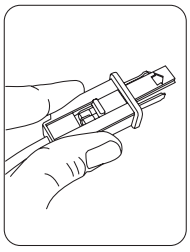

Fuse Replacement

WARNING: **Risk of Fire:** Replace only with same size and type of fuse.

WARNING: **Risk of Fire:** Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades. (See illustration)

INSTRUCTIONS

3. Remove fuse carefully.
4. Replace fuse only with 5 Amp Max, 125 Volt (provided with product).
5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

CAUTION

To reduce the risk of fire do not deliberately reposition either lamp holder contact.

Do not attempt to inflate your Airblown® Inflatable during unusually strong winds. If it becomes too windy for safe operation, simply allow your Airblown® Inflatable to deflate and wait for better conditions before re-inflating.
Protect the electric fan and power cord from direct exposure to water. This precaution will reduce the risk of electrical shock. When the temperature is below 14° F (-10° C), the motor may temporarily stop running. The motor will begin functioning again higher temperatures.

WARNING

Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

This item is not a toy and should be used for decorative purposes only.

TROUBLE SHOOTING CHECKLIST

If your Airblown® Inflatable is not inflating, the problem may be:
1. The power source is disabled or the cord may be unplugged.
2. Debris may be lodged in the motor.
3. The zipper may not be securely fastened, sealing the Airblown® Inflatable.
4. The temperature may be below 14° F (-10° C).

NOTE: ONCE FAN IS UNPLUGGED AND STOPS BLOWING, YOUR Airblown® Inflatable WILL DEFLATE.

FREQUENTLY ASKED QUESTIONS (FAQ's)

1. Can I continually run my Airblown® Inflatable?
Yes, you can run your Airblown® Inflatable during the day and at night. We recommend that you turn off your Airblown® Inflatable when leaving the immediate area and when retiring for the evening. Otherwise, your Airblown® Inflatable is designed to run continually as you see fit.

2. What happens if my Airblown® Inflatable becomes torn?
Rips in the Airblown® Inflatable can be sewn by hand (no special thread is required) or taped with clear packing tape.

3. How can I clean my Airblown® Inflatable?
Wipe clean with a damp cloth and allow to dry before storing away. Use mild detergent if necessary.

4. When I unplug my Airblown® Inflatable, it deflates. Why is this?
Your Airblown® Inflatable will not stay inflated unless it is plugged in and the fan is blowing air.

5. How much electricity does an Airblown® Inflatable consume?
It uses about as much energy as a standard string of holiday lights.

6. What is the best way to store my Airblown® Inflatable?
Store in a bag, box or other storage container and keep in a cool, dry location.

INSTRUCTIONS

THESE INSTRUCTIONS ARE FOR THESE ITEMS

19441	26039	26259	26596	26646
26647	26648	26651	26653	26691
26791	26851	26859	26860	26935
26936	26988	27013	27146	27147
27150	27154	60039	60040	60069
60163	60175	60623	60625	60725
60726	60783	60787	61060	81081
81086	81139	81157	81158	81159
81160	81597	81602	81798	82179
82193	82202	82231	82296	82297
82298	82299	82345	82394	82407
82448	82499	82627	82683	82722
82731	82731	82737	82738	82792
82793	82862	82863	82927	82928
82929	82932	82933	82934	82935
82936	82975	82977	82981	83012
83013	83053	83054	83087	83103
83107	83134	83326	83333	83423
83424	83425	83436	83437	83438
83439	83440	83441	83582	83665
83666	83667	83668	83688	83742
83809	83842	83843	83844	83845
83918	83959	83964	83965	83966
18758-10	18822-10	18863-10	19864-10	20269-10
20301-10	21257-10	23388-10	24895-10	26054-10
26445-10	26565-10	26702-10	26703-10	81144-10
81340-10	81342-10	81445-10	81510-10	81550-10
81600-10	81601-10	81606-10	81607-10	81608-10
81797-10	82188-10	12755-B	15688-B	17566-B
18822-B	19098-B	19591-B	20137-B	20171-B
21037-B	23391-B	24731-B	25663-B	26062-B
26260-B	26649-B	26651-B	26673-B	26947-B
60238-B	60356-B	60756-B	60792-B	61060-B
80651-B	80998-B	81074-B	81102-B	81157-B
81194-B	81333-B	81353-B	81522-B	81758-B
81926-B	81976-B	82009-B	82010-B	82195-B
82197-B	82201-B	82392-B	82395-B	82398-B
82401-B	82402-B	82410-B	82412-B	82417-B
82487-B	82546-B	82547-B	82548-B	82549-B
82683-B	82720-B	82762-B	82861-B	82862-B
82863-B	82880-B	82968-B	82982-B	83028-B
83103-B	83142-B	83278-B	83326-B	83346-B
83348-B	83350-B	83423-B	83424-B	83425-B
83433-B	83437-B	83438-B	83440-B	83579-B
83582-B	83660-B	83742-B	83756-B	83783-B
83809-B	83844-B	19596-E	19931-E	60791-E
81337-E	82396-E	82397-E	82404-E	82527-E
82569-E	82572-E	82653-E	82721-E	82733-E
82760-E	82765-E	82766-E	82768-E	82769-E
82791-E	82815-E	82942-E	83141-E	83142-E
83179-E	83213-E	83345-E	83347-E	83349-E
83439-E	83570-E	83582-E	83586-E	83660-E
83810-E	83843-E	83844-E	83809-E	83439-F
83441-F	27052-M1	81559-M1	83744-M1	81977-K3
83077-K3	83408-K3	83962-K3		

Visit WWW.GEMMY.COM ***for more information.***

©2010 GEMMY INDUSTRIES CORP.
COPPELL, TX 75019 U.S.A.
(972) 961-7000
MADE IN CHINA / PRINTED IN CHINA