Item # 1003 546 611
Model #L-FT1320PST

USE AND CARE GUIDE

42IN FIREPIT CHAT TABLE

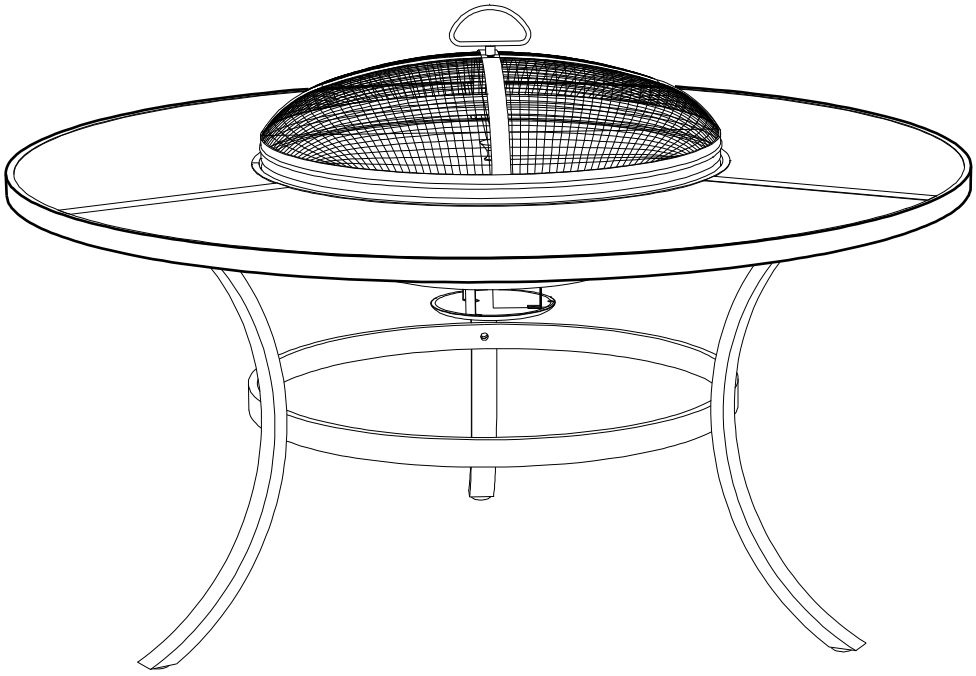

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

WWW.HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this fire pit. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents 2
Safety Information 2
Warranty 2
2 year WARRANTY 2
What is Covered 2
What is Not Covered 2
Pre-Assembly 3
Planning assembly 3
Hardware Included 3
ADDITIONAL HARDWARE 3
Package Contents 4
Assembly 6
Care and Cleaning 8

Safety Information

1. Some parts may contain sharp edges. Wear protective gloves.
2. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and usage.

DANGER: This unit is heavy! Do not assemble this item alone.

WARNING: The charcoal fire pit is HOT! DO NOT allow your children to play near it when fire pit is in use.

CAUTION: Do not touch the surface of the iron fire grate and the fire bowl while in use. It may cause burns.

NOTICE: For outdoor use only.

WARNING: This product can expose you to Carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www. P65Warnings.ca.gov

Warranty

2 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 2 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HAMPTONBAY.com

Production Number：20191540

Pre-Assembly

PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.



AA



BB



CC



DD



EE

FF

Part	Description	Quantity
AA	Nut M6	4
BB	Bolt M4*10	1
CC	Bolt M6*10	3
DD	Bolt M6*15	9
EE	Flat Washer M6	9
FF	Wrench M6	1

ADDITIONAL HARDWARE

Part	Description	Quantity
AA	Nut M6	1
BB	Bolt M4*10	1
CC	Bolt M6*10	1
DD	Bolt M6*15	1
EE	Flat Washer M6	1

Pre-Assembly (continued)

PACKAGE CONTENTS

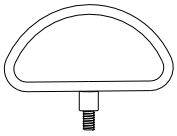

___A

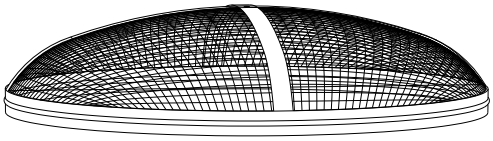

___B

___C



___D



___E

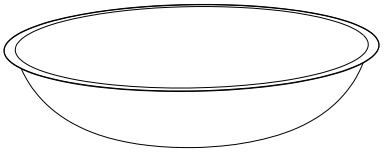

___F



___G



___H

___I

___K

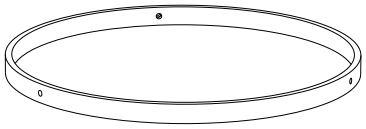

___J

Pre-Assembly (continued)

Part	Description	Quantity
A	Screen Handle	1
B	Screen	1
C	Lid Handle	1
D	Lid	1
E	Grate	1
F	Fire Bowl	1
G	Ash Tray	1
H	Table top	1
I	Leg	3
J	Support ring	1
K	Poker	1

Assembly

1 Attaching the Screen Handle

❑ Attach the Screen handle (A) to the Screen (B) using the nut (AA).

NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

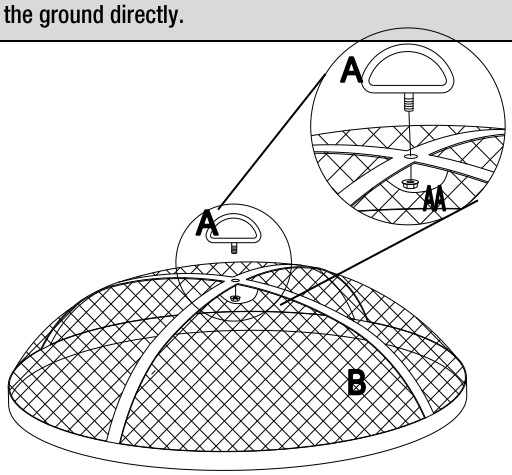

2 Attaching the Lid Handle

❑ Attach the Lid Handle (C) on the Lid (D) using the bolt (BB).

NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

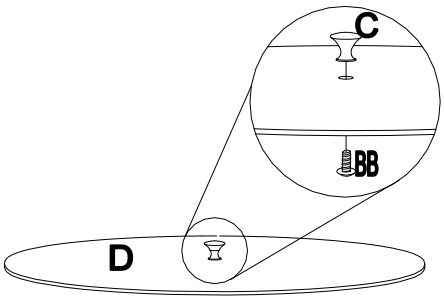

3 Attaching the Ash tray

❑ Attach the Ash tray (G) to the Fire bowl (F) using bolts (CC) and nuts (AA).

NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

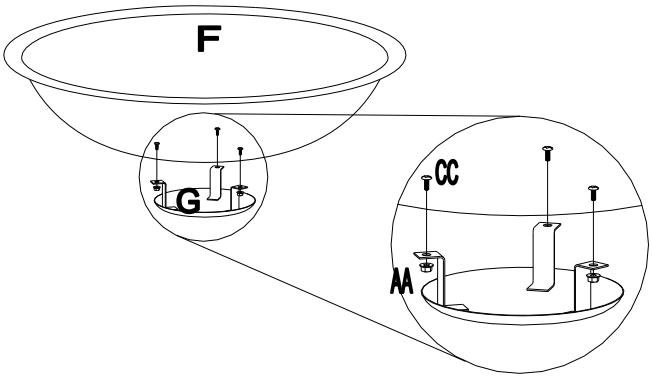

4 Attaching the Legs

❑ Connect the Legs (I) with the Support Ring (J) using the bolt (DD) and Flat washers (EE). Do not tighten the bolts at this step.

NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

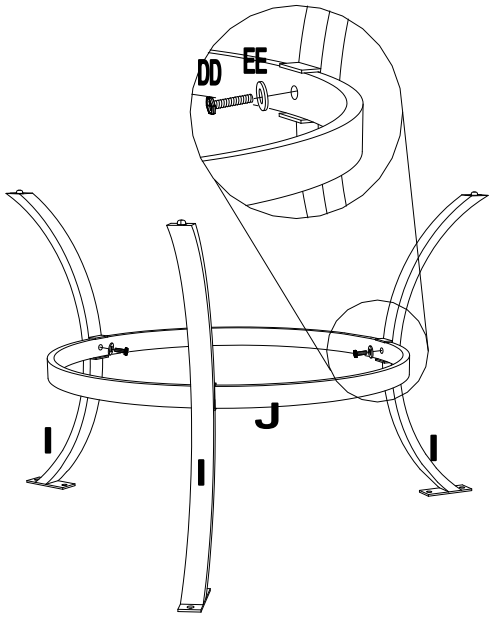

Assembly

5 Attaching the Table top

- ❑ Connect the assembled Legs (I) with the Table top (H) using the bolts (DD) and Flat washers (EE). Tighten all the bolts here.

NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

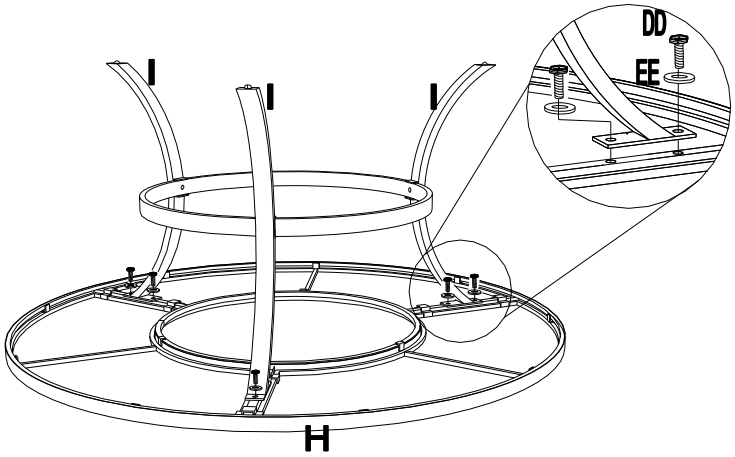

6 Completing the Assembly

- ❑ Place the fire bowl assembly on its legs and place the fire bowl (F) into the assembly. Then place the grate (E), Lid (D), and fire screen (B) onto the bowl (F). Place the poker (K) aside.

NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

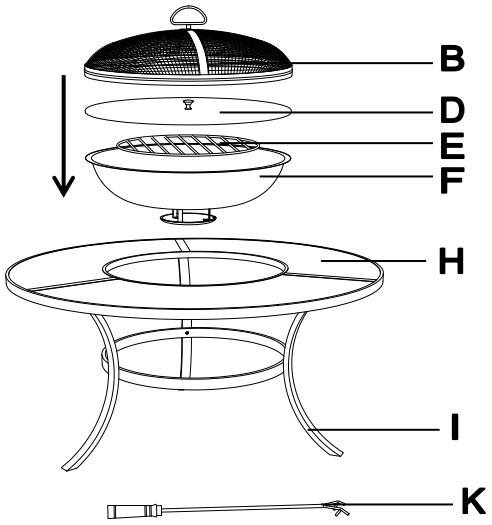

Care and Cleaning

- □ Before using, clean the fire pit completely with a soft dry towel.
- □ When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday- Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

WWW.HAMPTONBAY.COM

Retain this manual for future use.