
CE TECH™

Item #1000 000 000
Model #30651

USE AND CARE GUIDE

TILTING FLAT PANEL TV WALL MOUNT

(UNIVERSAL MOUNTING PATTERN 670 MM X 400 MM (26.38 IN. X 15.75 IN.), FITS VESA 100/200/300/400/600)

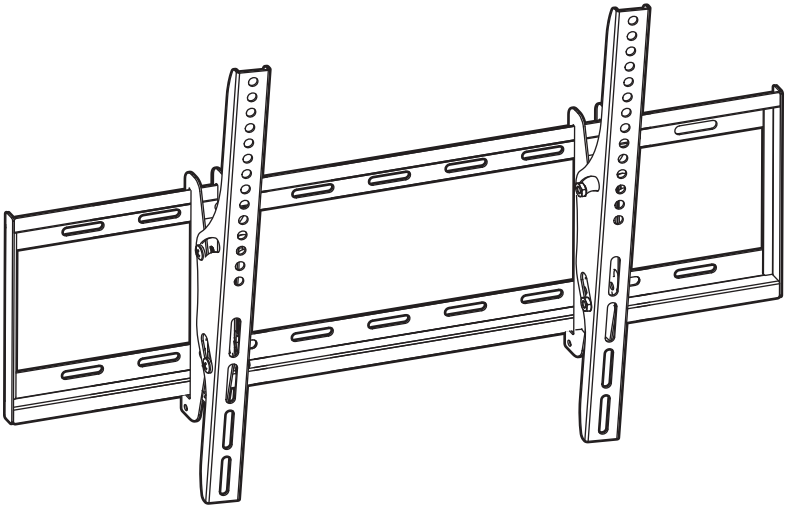

Questions, problems, missing parts? Before returning to the store,
call CE Tech Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in CE Tech through the purchase of this wall mounting system. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing CE Tech!

Table of Contents


Table of Contents.....2
Safety Information.....2
Warranty.....3
Pre-Installation 4
Installation 7

Safety Information

Before you begin, make sure you carefully read and understand the instructions in this manual. This bracket system incorporates a slip-on mount design. Please follow the instructions in the order presented in this manual and observe all warnings and cautions.

WARNING: A Warning alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A Caution alerts you to the possibility of damage to or destruction of the equipment if you do not follow the corresponding instructions.

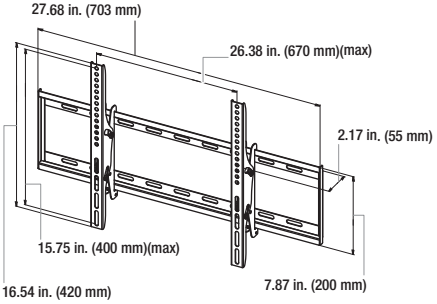

This mount has been tested to support television sizes between 26 in. and 65 in. (66 cm - 1.65 m), with a maximum weight limit of 90 lbs. (40.82 kg).

WARNING: This wall mount is intended for use only with the maximum weight indicated. Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury. This mount has been tested to support 90 lbs. (40.82 kg). Do not exceed this weight.

WARNING: Observe all safety measures at all times during the installation of this product. Use proper safety gear and tools during the installation process to prevent physical injury.

WARNING: Failure to provide adequate structural strength for this component can result in physical injury and/or damage to equipment. It is the installer's responsibility to make sure the structure to which this component is attached can support four times the combined weight of all equipment. Reinforce the structure as required before installing the component.

CAUTION: Do not install on a structure that is prone to vibration, movement or chance of impact. Doing so could result in damage to the flat panel display and/or mounting surface.

CAUTION: Do not install near a heater, fireplace, direct sunlight or any other source of direct heat. Doing so could result in damage to the flat panel display and could increase the risk of fire.

Warranty

The manufacturer warrants that it will replace or repair this item, free of charge, at the manufacturer's sole discretion, should it prove defective in materials or workmanship.

If a claim is made under this warranty, the mount should be returned, freight prepaid, with the original purchase receipt to your dealer.

This warranty does not apply to:

- □ Normal wear and tear
- □ Friction damage
- □ Coating defects
- □ Defects caused by loosened screws, nuts, or bolts
- □ Improperly mounting the bracket to the wall
- □ Improperly installing the bracket to the display
- □ Failure to properly follow installation instructions
- □ Modification or repairs not made or authorized by the manufacturer
- □ Loading beyond permitted load
- □ Intentional misuse

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Installation

PLANNING INSTALLATION

Compare all parts in the package with the Hardware Included and Package Contents lists in this manual. If any part is missing or damaged, do not install this wall mount system and call customer service at 1-877-527-0313 or visit www.HomeDepot.com.

PLANNING WALL PLACEMENT

CAUTION: Ensure the wall you select is a weight-bearing wall. Failure to observe this precaution can result in serious physical injury and/or property damage. Consult a professional installer or contact customer service if you have any questions.

When selecting a wall to mount your TV, keep the following in mind:

- □ Select a place with easy access to power outlets, cable input sources, and connections for speakers and accessories.
- □ Avoid direct sunlight, heat, and vibrations and do not place in direct flow of traffic.
- □ Select a weight-bearing wall. The wall must be able to safely support four times the combined load of the equipment and all attached hardware and components.

PLANNING MOUNTING HEIGHT

The optimal viewing height is to center the display at eye level when seated. Many people consider this to be too low for a wall mount, and commonly use the following rule for placement:

- □ Position the bottom of the display no higher than eye level when seated, and the top of the display no higher than eye level when standing. Anything within these limits should normally provide a comfortable viewing experience.


ENSURING WALL STABILITY

Carefully inspect the wall area you have selected. Examine the wall surface before you begin drilling.

WARNING: Do not drill near electrical wiring and water pipes.

- □ For concrete walls, check for damaged or loose concrete and do not drill in those areas.
- □ For brick wall, never drill into the mortar between blocks.

TOOLS REQUIRED (NOT INCLUDED IN THE PACKAGING)

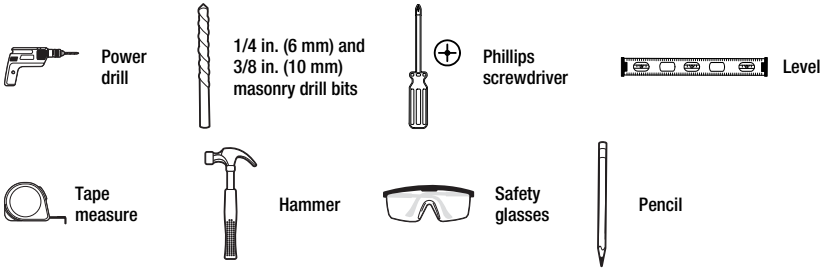


Pre-Installation (continued)

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.


NOTE: The hardware included is suitable for mounting to walls made of brick or solid concrete. If your mounting situation is different, please consult a qualified installer or contact customer service at 1-877-527-0313 or visit www.HomeDepot.com.

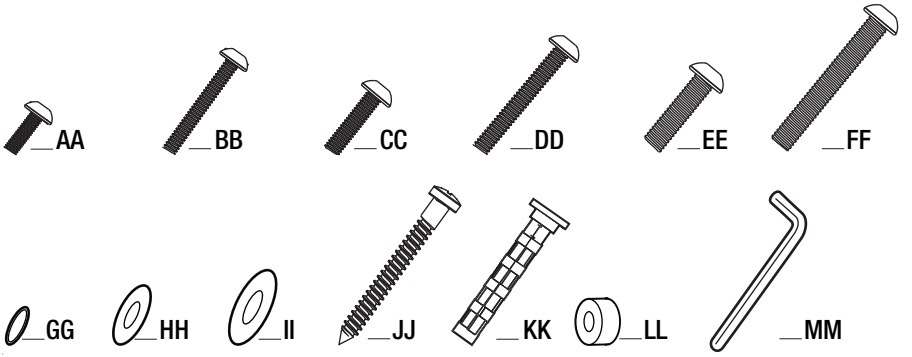

Part	Description	Quantity
AA	M5 x 12 mm bolt	4
BB	M5 x 20 mm bolt	4
CC	M6 x 12 mm bolt	4
DD	M6 x 20 mm bolt	4
EE	M8 x 16 mm bolt	4
FF	M8 x 30 mm bolt	4
GG	M5 washer	4
HH	M6 Lag bolt washers	6
II	M8 washer	4
JJ	Lag bolt	6
KK	Wall anchor	6
LL	Spacer	4
MM	Hex wrench 5/35 in. (4mm)	1

Pre-Installation (continued)

PACKAGE CONTENTS

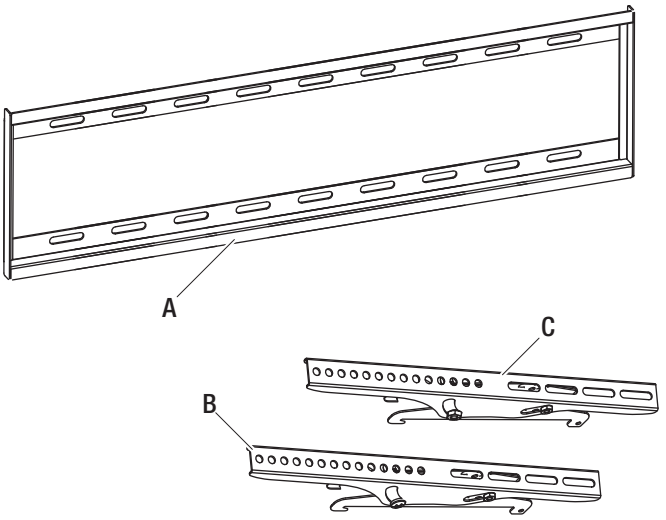


Part	Description	Quantity
A	Wall plate	1
B	Left display bracket	1
C	Right display bracket	1

1 Identifying the bolt diameter to use

To ensure proper mounting of the brackets to your TV, this mounting system includes several sizes of bolts (AA through FF) that can be used in various combinations. Combinations are determined by the back style of the TV (flat, curved, or recessed) and the diameter and depth of those holes.

- □ Select the bolt diameter to use by inserting the various sized bolts provided (M5, M6, and M8) into the mounting holes in the back of your TV.

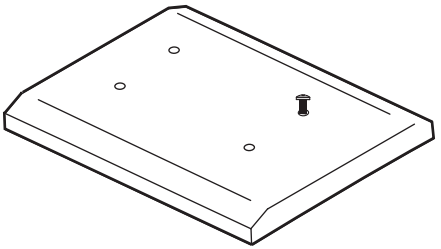





2 Identifying the bolt length to use

- □ Insert a straw or toothpick into one of the mounting holes on the back of your TV. If your TV is curved or recessed, place the spacer (LL) on top of one of the mounting holes first.
- □ Use a pencil to mark the depth of the mounting hole.
- □ Determine the proper bolt length to use by comparing the mark with the various bolts provided (AA – FF).


CAUTION: When the bolt is longer than the mark, choose a shorter bolt.

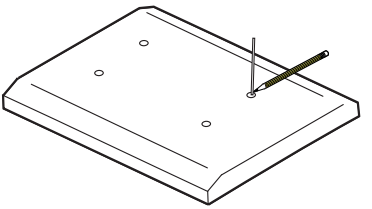


Flat

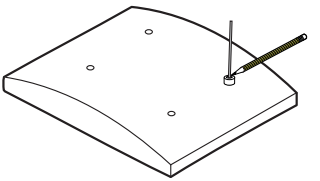

Curved

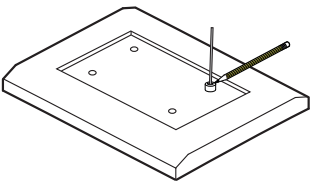



Recessed

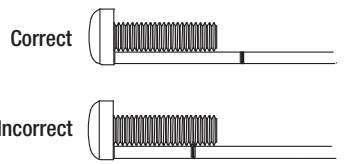

3 Testing the bolt length

- □ Test the selected bolt length by screwing them in by hand to ensure proper fit. Do not tighten. If there is any resistance, remove immediately and select another size of bolts (AA - FF) and washers (GG or II).

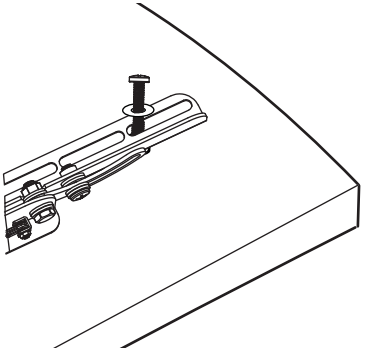


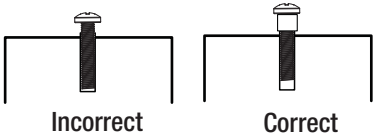

4 Attaching the brackets to the TV

- □ Center the brackets (B and C) vertically to the back of the TV. Ensure that the left and right mounting brackets (B and C) are no more than 26.38 in. (670 mm) apart.
- □ For curved or recessed backs, place the spacer (LL) over the mounting holes on the back of the TV.
- □ Attach the left and right brackets (B and C) to the back of the TV using the properly sized bolts and washers you chose in steps 1 and 2.

CAUTION: Tighten the bolts so the brackets are firmly attached. DO NOT OVERTIGHTEN. This may damage your TV.

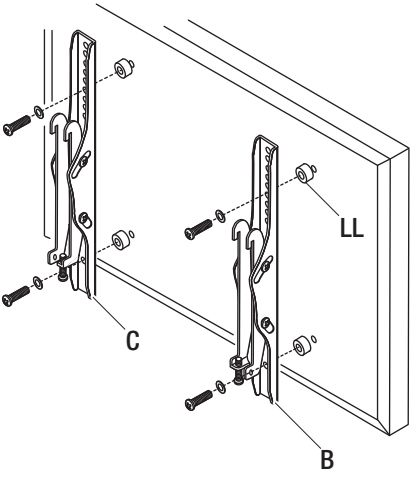


5 Preparing for wall plate installation


CAUTION: Avoid drilling near electrical wiring and water pipes. The mounting system must be attached to a weight bearing wall. Failure to observe all safety precautions can result in serious physical injury and/or property damage. Consult a professional installer or call customer service if you have any questions.

CAUTION: Do not drill into mortar between bricks or into loose concrete.

CAUTION: Never drill into hollow brick.

- □ Use the wall plate (A) as a template to mark the installation holes. Use a level to ensure the plate is level.
- □ Use a 1/4 in. (6 mm) masonry drill bit to slowly drill 3 in. (76 mm) pilot holes. Then use a 3/8 in. (10 mm) masonry drill bit to expand the pilot holes.
- □ Insert wall anchors (KK) into the holes. Ensure the wall anchors (KK) are completely flush to the concrete surface, even if covered by a layer of joint compound or other material.

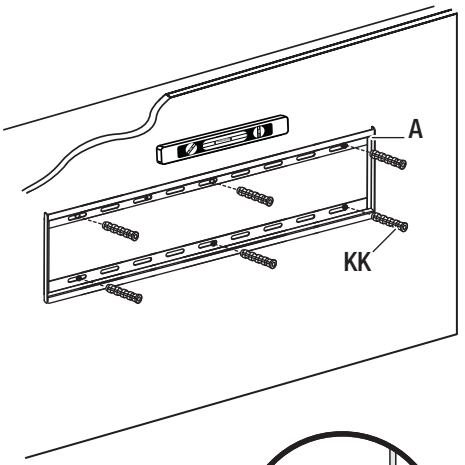


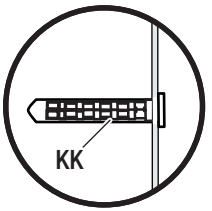


6 Installing the wall plate

- □ Position the wall plate (A) over the installation holes. Ensure that the wall plate (A) is level.
- □ Attach the wall plate (A) to the wall using the lag bolts (JJ) and M6 lag bolt washers (HH). Tighten the screws in a criss-cross pattern.

CAUTION: Tighten the screws so that the wall plate is firmly attached. Do not overtighten. Over-tightening can damage the screws, greatly reducing the holding power.

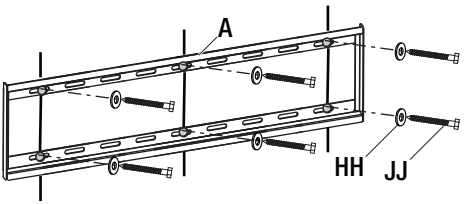

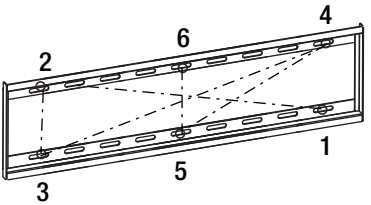


7 Mounting the TV to the wall plate

- □ Loosen the safety screws (1) pre-assembled to the left (B) and right (C) mounting brackets.
- □ Plug any cables into the TV, as they could be difficult to reach after the TV is mounted to the wall.
- □ Using two people, carefully lift the TV and align the brackets (B and C) with the wall plate (A).
- □ Gently lower the TV onto the wall plate (A), ensuring that the brackets (B and C) catch at the top edges of the wall plate (A).

CAUTION: Hold the TV in place until the safety screws are secured in step 8.

CAUTION: Use two or more people to complete this step.

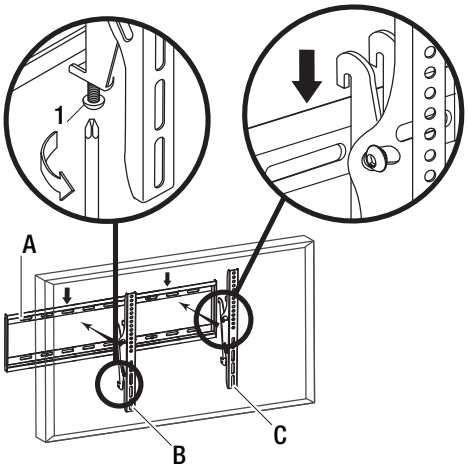


8 Securing the TV to the wall plate

- □ Tighten both safety screws (1) firmly with a screwdriver.

CAUTION: Do not over tighten the safety screws. This can damage the screws and greatly reduce their holding power.


IMPORTANT: Continue to hold the TV until it is secure.

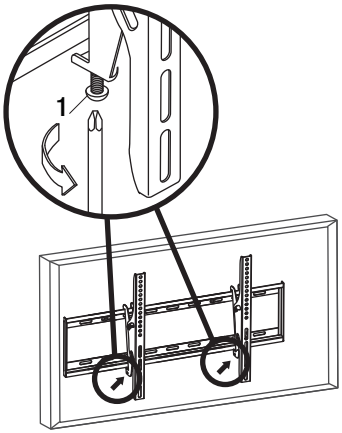

9 Adjusting the angle

CAUTION: Use two or more people to complete this step.

- ☐ While holding the TV, adjust the angle of the TV to the desired position and secure by tightening the screw (2) on the outside of each bracket (B and C). The maximum tilt angle is 15°.

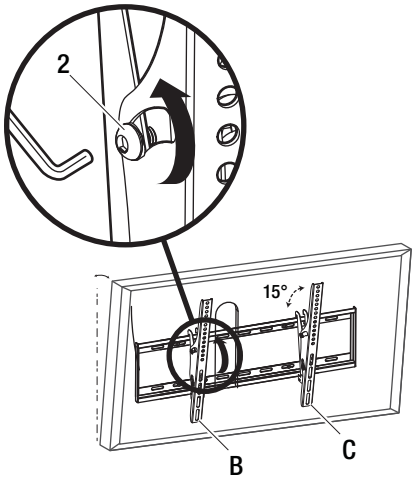



Questions, problems, missing parts? Before returning to the store,
call CE Tech Customer Service
8 a.m.- 6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.