

## Quick Start Guide

Appearance may vary depending on model.

### Using Your Top-Loading High Efficiency Low Water Washer

**1 SORT AND LOAD LAUNDRY**

**2 ADD HE DETERGENT & LAUNDRY PRODUCTS TO DISPENSERS\***

Remove inside tray for powder HE detergent.

Follow manufacturer's instructions to determine amount of laundry products to use.

**3 TOUCH POWER TO TURN ON THE WASHER**

**4 TOUCH SETTINGS FOR "WHAT TO WASH"**

**5 TOUCH SETTINGS FOR "HOW TO WASH"**

**6 ADJUST CYCLE MODIFIERS OR ADD OPTIONS\*, IF DESIRED**

**7 TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE**

\* NOTE: Not all cycles, settings or options are available with all models. Read "Cycle Guide" in Use and Care Guide before using washer for more information on your model's options and features.

WHAT TO WASH

• Mixed • Casuals • Whites • Delicates • Bulky/Sheets

• Clean Washer  
• Rinse & Spin• Oxi  
• Additives  
• Utility Tools

Add Garment

0:45

HOW TO WASH

• Normal • Quick • Cold • Deep Water • ColorLast

Cold • Hot • Light Heavy • None High

Temperature • Soil Level • Spin Speed • Extra Rinse • Presoak

cabrio

Hold to Start

Lid

steam

he

ENERGY STAR


## Guide de démarrage rapide

L'aspect peut varier  
selon le modèle.

### Utilisation de la laveuse à chargement frontal à haute efficacité et à faible consommation d'eau


1

**TRIER, PUIS CHARGER  
LE LINGE DANS LA  
LAVEUSE**

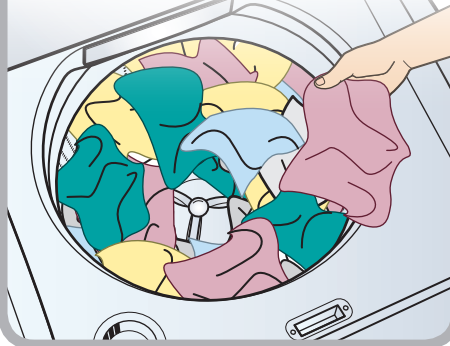


2

**AJOUTER LE DÉTERGENT ET LES PRODUITS DE LESSIVE  
HE DANS LES DISTRIBUTEURS\***

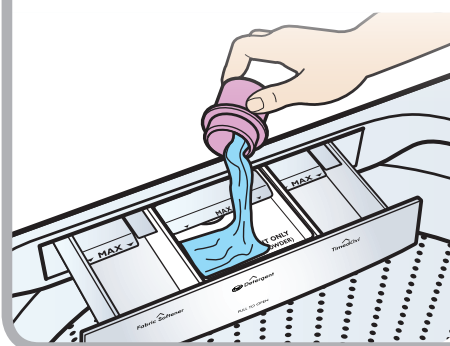

Retirer le plateau intérieur pour le détergent  
en poudre HE.

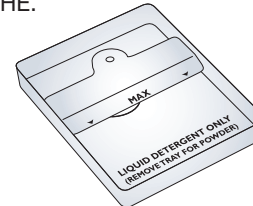

Suivre les instructions du  
fabricant pour déterminer la  
quantité de produits de lessive  
à utiliser.



3

**APPUYER SUR POWER  
(MISE SOUS TENSION)  
POUR METTRE LA  
LAVEUSE EN MARCHÉ**




4

**SÉLECTIONNER LES  
RÉGLAGES POUR "WHAT  
TO WASH" (ARTICLES À  
LAVER)**




5

**SÉLECTIONNER LES  
RÉGLAGES POUR "HOW  
TO WASH" (MÉTHODE  
DE LAVAGE)**

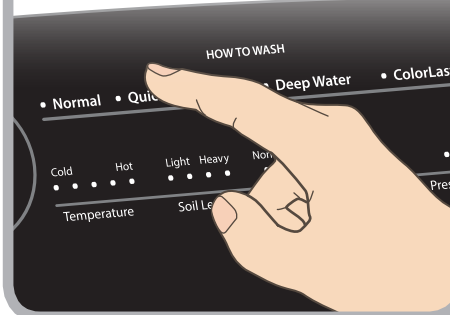

6

**RÉGLER LES  
MODIFICATEURS DE  
PROGRAMME OU  
AJOUTER DES OPTIONS\*,  
SI DÉSIRÉ**

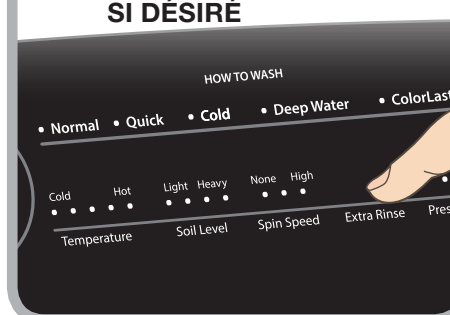

7

**APPUYER SANS  
RELÂCHER SUR START/  
PAUSE (MISE EN MARCHÉ/  
PAUSE) POUR DÉMARRER  
LE PROGRAMME**



\*REMARQUE : Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le "Guide des programmes" dans le Guide d'utilisation et d'entretien avant d'utiliser la laveuse pour plus d'informations sur les options et les caractéristiques de votre modèle.