

# BALDWIN®

## Prestige Series




www.baldwinhardware.com

### BEFORE YOU START


These steps show you how to change from the current key that operates the lock to a new key you want to operate the lock. For new purchases, the current key is the one that was supplied with the lockset.

**Be sure to install the product on the door first. Also, these steps should be done while the door is open.**


These instructions illustrate a deadbolt for demonstration purposes, but these SmartKey rekeying instructions also apply to keyed knobs, levers, and handlesets.

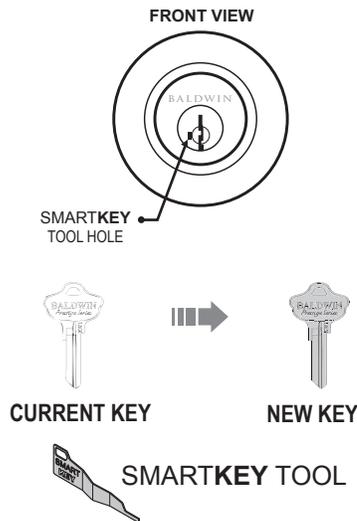

### 1 TURN TO LEARN POSITION

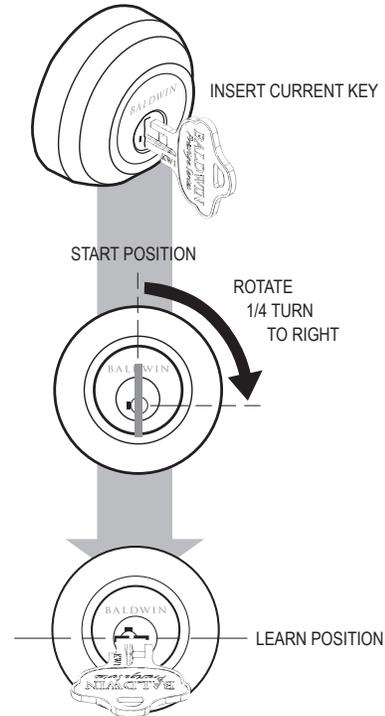


### 2 INSERT AND REMOVE SMART KEY TOOL

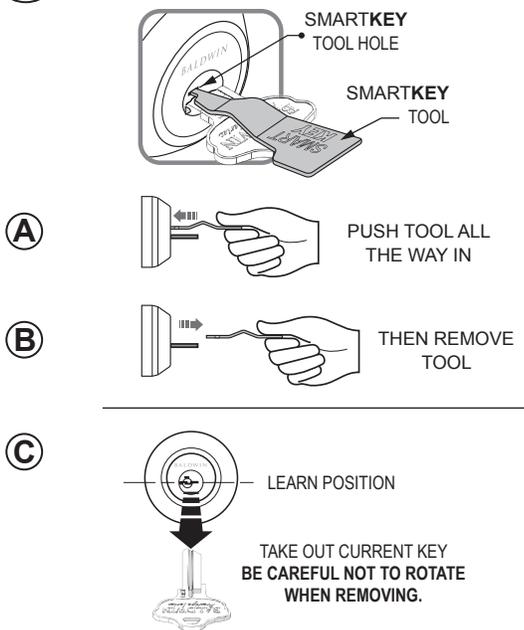

IF KEY DOES NOT PULL OUT, RETURN TO STEP 2A

### 3 LEARN NEW KEY

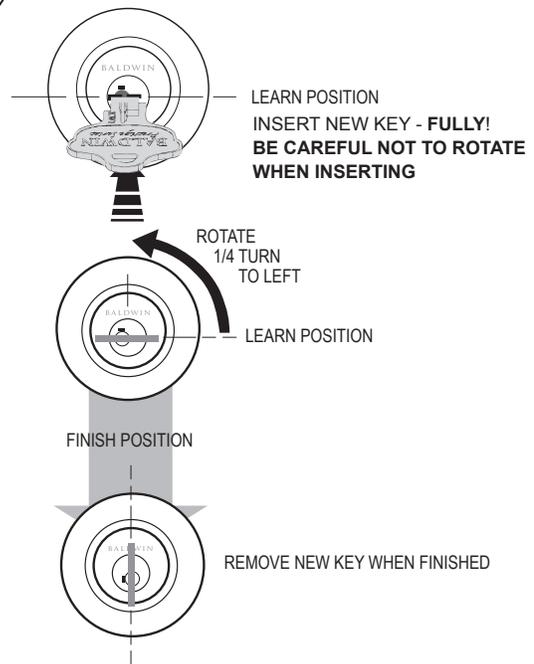


If problem persists, Call 1-877-315-7853

### ANTES DE EMPEZAR


Estos pasos le muestran como cambiar la llave actual que opera su cerradura a la nueva llave que usted desee que opere su cerradura. Para nueva compras, la llave actual es aquella que fue proveida con la cerradura.

**Asegúrese de instalar el producto en la puerta primero. Además, estos pasos deben ser realizados mientras la puerta esté abierta.**


Estas instrucciones ilustran un cerrojo para propósito de demostración, pero estas instrucciones de revaleo Smart Key también aplican para pomos, manijas y jaladeras de entrada.

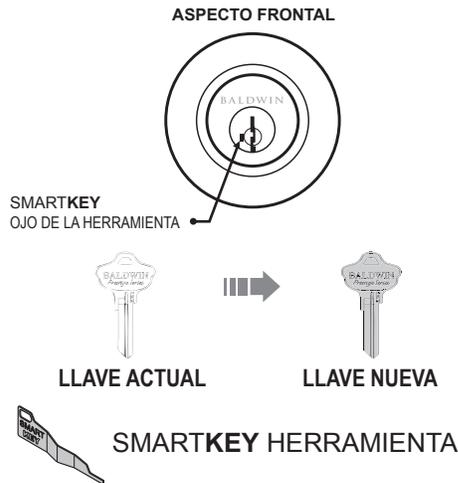

### 1 PONGALA EN LA POSICION DE APRENDER

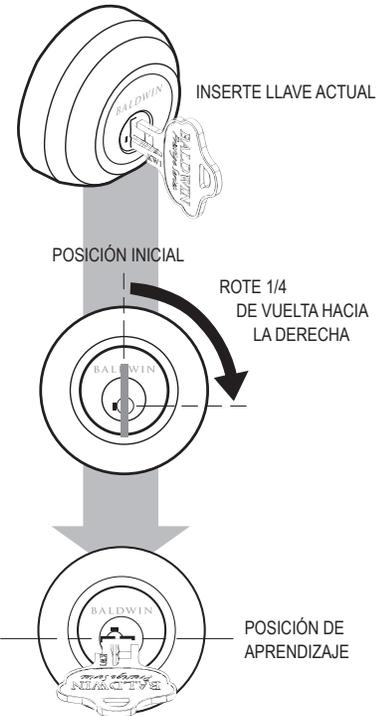

### 2 INSERTE Y SAQUE LA HERRAMIENTA SMARTKEY

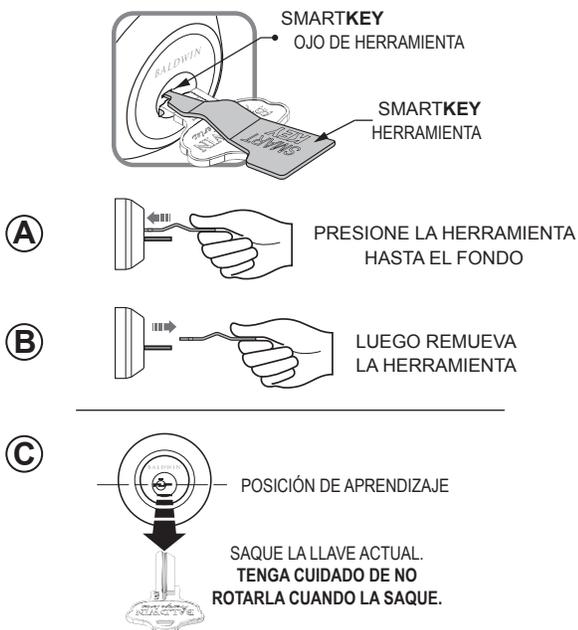

SI LA LLAVE NO PUEDE SACARSE, REPITA EL PASO 2A

### 3 POSICION DE APRENDER DE LA LLAVE NUEVA



Si persiste el problema: 1-877-315-7853