

Item #596-498
Model #EZCNDH



Use and Care Guide


Dryer Duct to Wall Connector



EVERBILT



TOOLS REQUIRED



Scissors



Phillips screwdriver

HARDWARE REQUIRED (NOT INCLUDED)




Screws (4)

Installation


1 SEPARATING THE CONNECTOR PIECES

- Separate the female wall connector from the male duct connector by pressing the two buttons on the sides and pulling the two pieces apart.

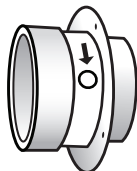


2 TRIMMING THE DUCT

- Use scissors or tin snips to cut the duct coming out of your wall so that it is flush with the wall surface.

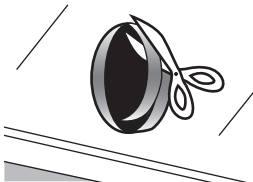


3 SECURING THE CONNECTOR TO THE WALL

- Insert the female wall connector into the duct, and secure the connector to the wall with the appropriate screws depending on your wall material.

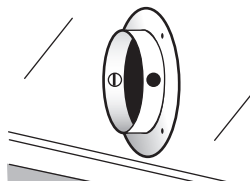


4 SECURING THE CONNECTOR TO THE DUCT

- Secure the end of the male duct connector onto the flexible duct coming from your dryer by turning the male duct connector counter-clockwise until it grips the duct firmly.

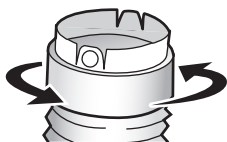


5 JOINING THE TWO CONNECTOR PIECES

- To complete the installation, push the male duct connector into the female wall connector until the buttons pop back into place.

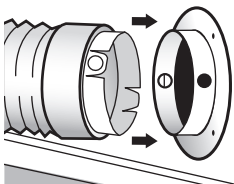

6 SEPARATING THE CONNECTORS

- When access is needed to clean and maintain the ductwork, separate the connectors as in step 1.

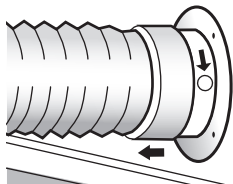

Important Information

This product can be used with aluminum foil or semi rigid aluminum ducts.

Warranty


WHAT IS COVERED

All merchandise is warranted to be free from defects in workmanship and material for one year from the date of purchase. This includes normal wear and performance failure on items. The manufacturer will replace or repair at their option.

WHAT IS NOT COVERED

This warranty only covers normal wear and performance failure. It does not cover any malfunction, performance failure, or defect arising from the misuse, abuse, neglect, or modification of the product. Any damage or malfunction inflicted upon the product by the user or other external sources, or any failure to comply with the warnings and instructions, is not covered.

For further assistance visit www.HomeDepot.com.

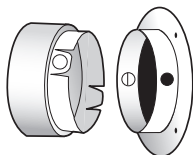

Artículo # 596-498
Modelo # EZCNDH

Guía de uso y cuidado

Conector de conducto a pared de la secadora

EVERBILT

HERRAMIENTAS NECESARIAS



Tijeras



Destornillador Phillips

MATERIAL Y HERRAJES NECESARIOS (NO SE INCLUYEN)




Tornillos (4)

Instalación


1 SEPARAR LAS PIEZAS DEL CONECTOR

- Separe el conector de pared hembra del conector del conducto macho presionando los dos botones ubicados a los lados y halando las dos piezas hasta separarlas.

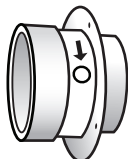


2 RECORTAR EL CONDUCTO

- Con una tijera o tijeras cortachapas, corte el conducto que sale de la pared, de modo que quede al nivel de la superficie de la pared.

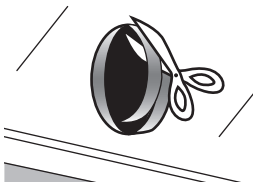


3 FIJAR EL CONECTOR A LA PARED

- Introduzca el conector de pared hembra en el conducto y fije el conector a la pared con los tornillos apropiados según el material de la pared.

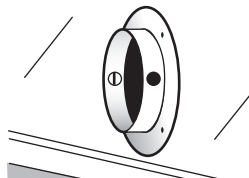


4 FIJAR EL CONECTOR AL CONDUCTO

- Fije el extremo del conector del conducto macho en el conducto flexible que sale de su secadora, girando el conector del conducto macho en sentido contrario a las agujas del reloj hasta que agarre firmemente el conducto.

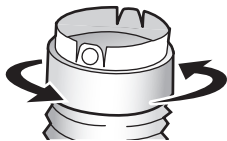


5 UNIR LAS DOS PIEZAS DEL CONECTOR

- Para completar la instalación, empuje el conector del conducto macho hacia el interior del conector de pared hembra, simplemente empujando hasta que quede en su sitio.

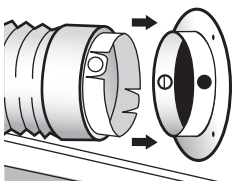

6 SEPARAR LOS CONECTORES

- Cuando se necesite tener acceso para limpiar y mantener los conductos, separe los conectores como se indica en el paso 1.

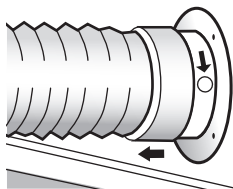

Información importante

Este producto puede usarse con conductos de lámina de aluminio o aluminio semirrígido.

Garantía

¿QUÉ SE CUBRE?

Toda la mercancía se garantiza contra defectos de fabricación y de los materiales durante un año a partir de la fecha de compra. Esto incluye el desgaste y las fallas en el desempeño normales de los artículos. El fabricante reemplazará o reparará el artículo a su criterio.

¿QUÉ NO SE CUBRE?

Esta garantía cubre únicamente el desgaste y las fallas en el desempeño normales. No cubre el mal funcionamiento, las fallas en el desempeño ni los defectos que surjan debido al mal uso, el abuso, la negligencia o la modificación del producto. No están cubiertos los daños ni el mal funcionamiento que se cause al producto por parte del usuario o otras fuentes externas, ni las fallas debidas al incumplimiento de las advertencias y las instrucciones.

Para obtener más ayuda visite www.HomeDepot.com.