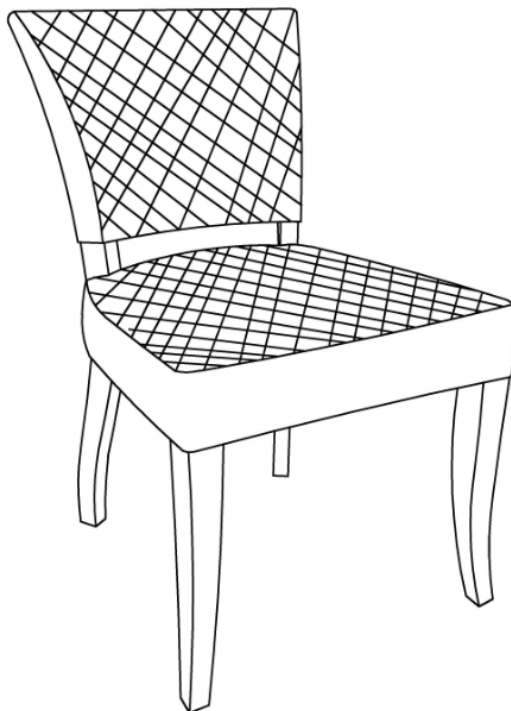# HOME
DECORATORS
COLLECTION

Model #:3188 Dining Chair

Item # :   1004248975
**   1004248974**

USE AND CARE GUIDE
3188 Dining Chair

Questions, problems, missing parts?
Before returning to the store, Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m.,
EST, Saturday

1-800-998-7021
HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU
We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.
Thank you for choosing Home Decorators Collection!

Safety Information

1. Make sure to assemble the product with two or more adults.

2. Suggest read the AI carefully before assembling and follow the steps and details.

3. Keep small parts away from the children during assembly.

⚠ WARNING: Keep the product on level surface, the product may become unstable and tip if stored or moved on an unlevel surface, which may cause personal injury or product damage.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED
Product defects, the defects include circumstances where the frame has broken under normal use and no longer performance its function.

WHAT IS NOT COVERED
This warranty does not cover commercial use, acts of nature, and abusive use.
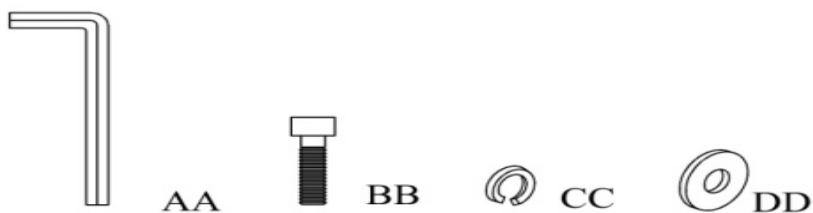
Pre-Assembly

PLANNING ASSEMBLY

Keep the children and pets away from build area, pay attention to the labels on the parts and don't throw away, othervise, maybe it will be difficult for you to assemble the prodct.
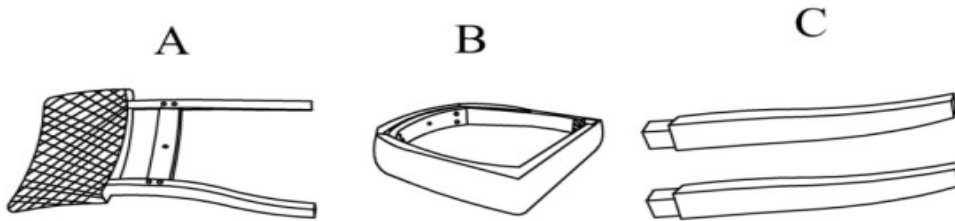
HARDWARE INCLUDED

Notes: AA, BB, CC,DD and EE are in the red hardware bag

Part	Description	Quantity
AA	Wrench Ø8*65	1
BB	Bbolt 8*60	9
CC	Spring washer	9
DD	Flat washer	9

Pre-Assembly

PACKAGE CONTENTS

Part	Description	Quantity
A	Back	1
B	Seat	1
C	Front leg	2

Assembly

Step 1: Assemble the Back(A) and seat (B) as the below photos shows
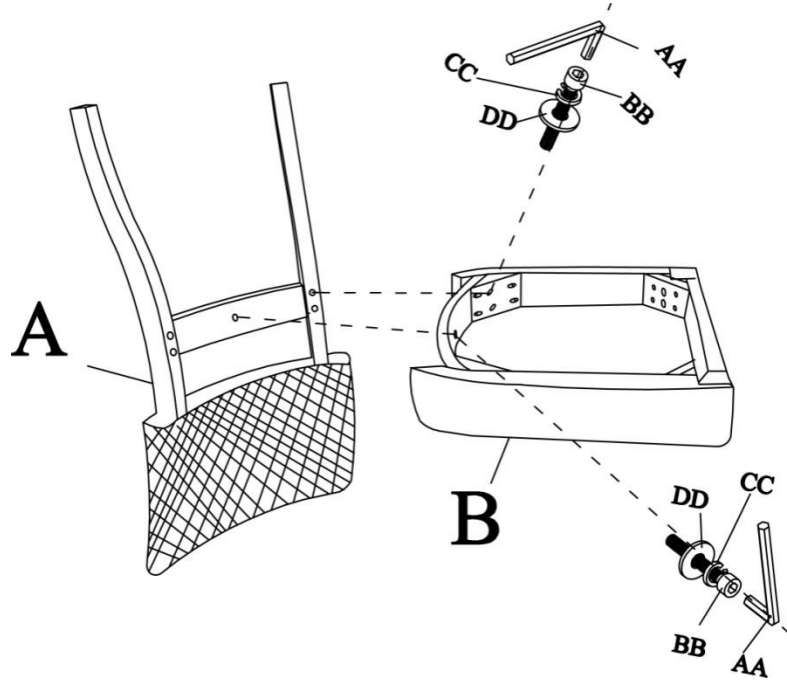
Step 2: Assemble the front legs(C) as the below photo shows