• IMUSA'S warranty covers this product from defects for a period of 30 days from the date of purchase. Proof of purchase is required when presenting for a return or exchange. This DOES NOT COVER normal wear and tear. If the product is misused or unassembled, we will not cover any defects.

• Garantizamos que este producto sera libre de defectos en el material y en la fabricación por un período de 30 días. Para cambiar o devolver producto, se exige el recibo o factura de compra original. La garantia no cubre daños normales por uso o daños en el recubrimiento antiadherente.

For more information:
IMUSA USA LLC,
Doral Florida 33178
1-800-825-2501
www.imusausa.com

Sandwich Panini Press
Instruction Manual

Sanduchera Panini Press
Manual de Instrucciones

THIS UNIT IS FOR HOUSEHOLD USE ONLY FOR 120V
To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider that the other). This plug fits a polarized outlet only one way; if the plug does not insert fully in the outlet, reverse the plug. If it still fails to fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ESTA UNIDAD ES SOLO PARA USO DOMÉSTICO PARA MERCADOS DE 120V
Para reducir el riesgo de descarga eléctrica, este aparato tiene un enchufe polarizado (una clavija es más ancha que la otra). Este enchufe entra en un toma-corriente polarizado de una sola manera; si el enchufe no entra completamente en el tomacorriente, voltee el enchufe. Si todavía no entra, comuníquese con un electricista competente. No desactive esta función de seguridad.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precaution should always be followed including following:

- Read and save all instructions.
- Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
- To protect against risk of an electrical shock, do not immerse the cord, plug, or unit in water or any other liquid.
- Do not touch hot surfaces and handles.
- Children should not use this appliance.
- Close supervision is necessary when any appliances is used near children.
- Unplug from outlet when not in use and before cleaning. Allow to Cool before cleaning or storing this appliance.
- Never pull the cord with abrupt force to disconnect the IMUSA® Sandwich Maker/ Panini Press from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not operate any appliance if the cord is damaged. Do not use the IMUSA® Panini Maker if the appliance malfunctions or has been damaged in any way. In order to avoid the risk of an electric shock, never try to repair the appliance yourself. Take it to an authorized service center for examination and repair. An incorrect re-assembly could present a risk of electric shock when the IMUSA® Sandwich Maker/ Panini Press is in use.
- The use of replacement parts or accessories not recommended by the manufacturer may cause fire, electrical shock or injury.
- Do not use outdoors or for commercial purposes.
- Do not use this appliance for any purposes other than its intended use.
- Do not let the electrical cord hang over the edge of the table or countertop, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, heated oven or microwave.
- Use on a heat-resistant, flat, level surface only.
- Extreme precaution must be used when moving any appliance containing hot oil or other liquids.
- Do not operate in the open position.
- When using this appliance, provide adequate room above and on all sides for air circulation.
- Do not leave the IMUSA® Sandwich Maker/ Panini Press unattended during use.
- Use with wall receptacle only.
- When using this appliance, make sure there are no flammable materials close to it, such as curtains, paper, plastic, etc.

NOTAS

NOTAS

HINTS FOR BEST RESULTS

- Always preheat the IMUSA Sandwich Maker/Panini Press before use.
- Be careful when biting into sandwiches containing fillings such as cheese, tomato, or jam, as they retain heat and can burn if eaten too quickly.
- It is not necessary to butter the outside of the bread, as the IMUSA Sandwich Maker/ Panini Press has a non-stick cooking surfaces. However, to encourage even browning of bread, spreading a small amount of butter or margarine is recommended.

BEFORE USING YOUR IMUSA SANDWICH MAKER/PANINI PRESS

Before using the IMUSA Sandwich Maker/Panini Press for the first time, clean and season the non-stick cooking surfaces:

- With the appliance unplugged, clean the cooking surfaces with a cloth or sponge dampened with hot, soapy water. Do not immerse unit in water. Rinse with a dampened cloth or sponge and wipe dry.
- To season the cooking surfaces, plug the appliance into an electrical outlet. The red power on indicator light and the green ready indicator light will both illuminate. Allow the IMUSA Sandwich Maker/Panini Press to pre-heat until the green ready indicator light turns off. Wipe a small amount of butter or margarine onto the cooking surfaces. Rub lightly and wipe away any excess.
- Note: When using your IMUSA Sandwich Maker/Panini Press for the first time you may notice a fine smoke haze being emitted from the unit. This is normal. It is due to initial heating of internal components

CARE AND CLEANING

- Unplug and allow the unit to cool completely before cleaning.
- Clean cooking surfaces with a cloth or sponge. Dampened with hot soapy water. Do not inmerse the unit in water or any other liquid, do not place the IMUSA Sandwich Maker/Panini Press in a dishwasher.
- To remove cooked-on food, use a nylon scrubber or non-abrasive cleaner. A steel wool pad or other abrasive cleansers may damage the non-stick surface.
- To clean the exterior, simply bring th cooking surfaces together and press the security latch located on the side of the cast-metal arm. This will lock the cooking surfaces togeter. the unit stands on end for convenient storage.
- Do not use metal utensils or sharp metal objects such as a knife, as this will damage the non-stick coating.
- Do not cut food on top of the IMUSA Sandwich Maker/Panini Press.

USING YOUR IMUSA SANDWICH MAKER/PANINI PRESS

- Plug the power cord into an electrical outlet, the red indicator light will turn on and remain lit when appliance is plugged in.
- Release security latch.
- Pre-heat until the green indicator light turns off.
- Place the food to be grilled or pressed on the cooking plates.
- Gently lower the top cooking surface. The floating hinge system will adjust automatically to lie evenly on your food.
- Allow the food to grill until done. The IMUSA Sandwich Maker/Panini Press will heat both sides at the same time.
- Note: the green indicator light may turn on and off during cooking.This indicates that the thermostat is maintaining the proper cooking temperature.
- The cooking plates are coated with a non-stick coating. If any food will melt and stick to the surface, use a plastic spatula or wooden spoon to remove it. Never use a sharp object that may harm the non-stick coating.
- After you have finished using your IMUSA Sandwich Maker/Panini Press, unplug from the electrical outlet.

FEATURES OF THE IMUSA® SANDWICH MAKER/ PANINI PRESS

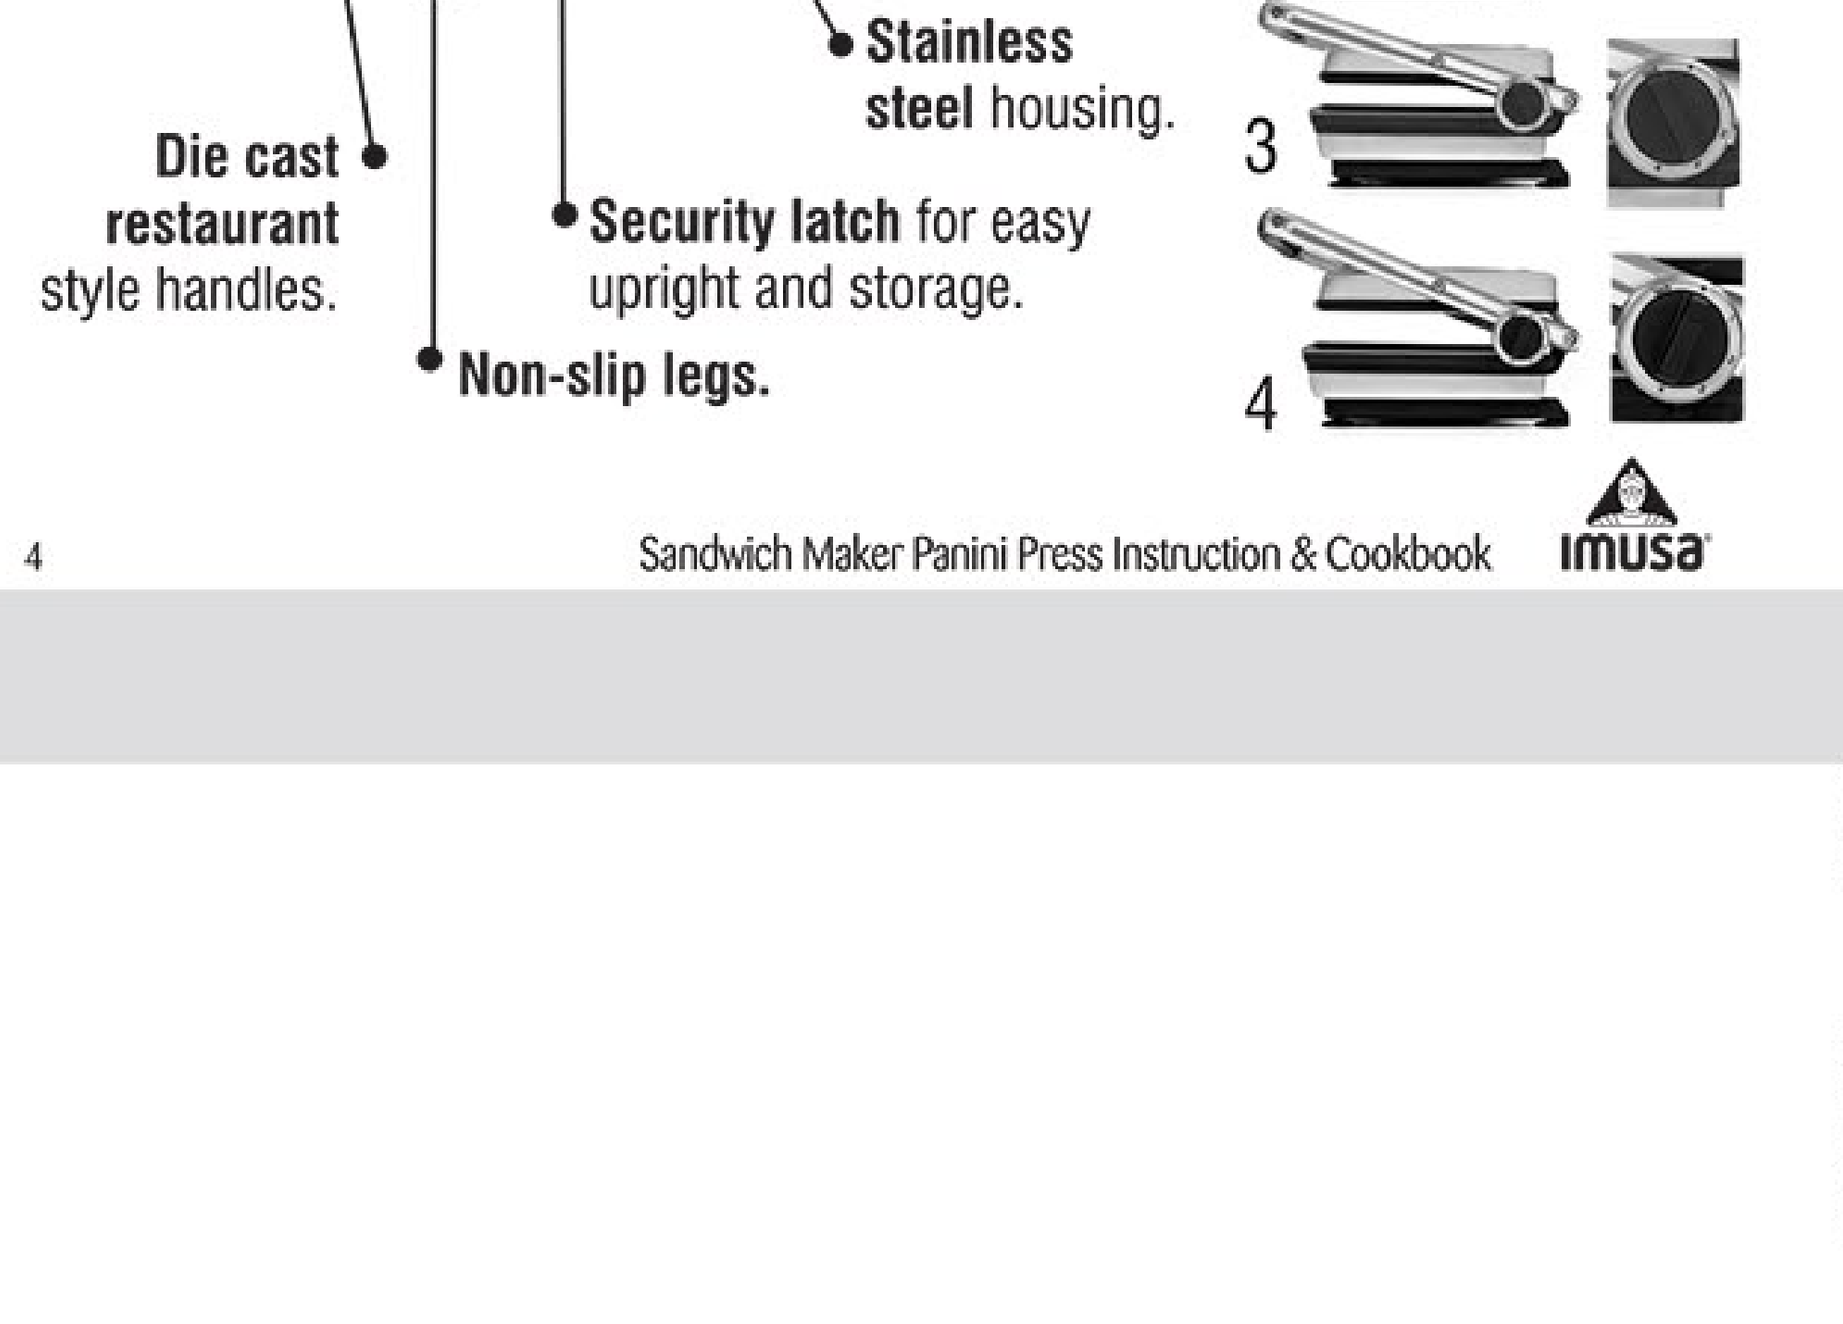

RECETA

PANINI A LA FLORENCIANA
2 rebanadas de pan francés o italiano
2 cucharadas de aceite de oliva o mantequilla derretida
2 onzas de queso mozzarella
2 onzas de prosciutto finamente cortado
4 tomates pequeñitos (cherry tomatos)
1 taza de lechuga, arúgula, albahaca Vinagre Balsámico

Unte los dos lados de las rebanadas de pan francés o italiano con el aceite de oliva o la mantequilla derretida. Ponga el pan, la mozzarella y el prosciutto, coloquelo en su Sánduchera/ Panini Press IMUSA® y cocine hasta que este listo.

Abra el sánduche y ponga la lechuga, arugula y albahaca, y los tomate, ponga un poco de aceite de oliva y un poco de Vinagre Balsámico.

USANDO SU PLANCHA SANDWICHERA IMUSA

- Conecte el aparato en el toma-corriente. La luz roja se iluminará y permanecerá encendida mientras el aparato quede conectado.
- Desbloquee la Sanduchera/Panini Press IMUSA® usando la perilla de alturas ajustables ubicada en la parte lateral del asa de metal fundido.
- Permita que el aparto se caliente previamente, hasta que la luz verde se apague.
- Una vez que usted haya preparado el alimento a ser cocinado, colóquelo sobre la superficie de cocción.
- Cierre la unidad uniendo las superficies de cocción (use el mango "Cool Touch" no se calienta). El sistema de altura ajustable de los platos de cocción se ajustará automáticamente a la altura necesaria para asegurar que la superficie caiga plenamente sobre el alimento y lograr una cocción perfecta en cada ocasión.
- Nota: Es posible que la luz verde se encienda y apague mientras esté cocinando. Esto indica que el termostato está manteniendo la temperatura de cocción correcta para asegurar una perfecta preparación de sus platos.
- Su Sanduchera/Panini Press IMUSA® tiene una superficie antiadherente de larga durabilidad. Aún asi, algunos ingredientes, como el queso por ejemplo, pueden derretirse y pegarse a las superficies, use una espátula plástica o una cuchara de madera para remover los residuos de comida, nunca use utensilios de metal, cuchillos o estropajos.

CARACTERISTICAS DE SU SANDUCHERA/ PANINI PRESS IMUSA®

RECIPE

VEGETABLE FOCACIA

12 slices of eggplant, about 1/4-inch thick
Salt
Freshly ground black pepper
1/2 cup olive oil
Foccacia Bread
Drizzle extra-virgin olive oil
1/2 pound Fontina cheese, thinly sliced
2 roasted medium red peppers, peeled, seeded and julienne

Season both sides of the eggplant with salt and pepper. Let sit for 2 minutes. In a large sauté pan, over medium-high heat, add 1/4 cup of the oil. Pan-fry the slices of eggplant in batches until golden brown on each side, about 2 to 3 minutes. Remove and drain on paper towels. Using a paper towel, wipe out the sauté pan and repeat the above process with the remaining oil and eggplant.

Lightly brush both sides of the foccacia with the extra virgin olive oil. Season both sides with salt and pepper and place on Panini Press. Place 3 slices of the eggplant over each slice of bread. Lay a couple slices of cheese over the eggplant. Top the cheese with some of the peppers. Grill until the cheese melts and serve warm.

PRECAUCIONES IMPORTANTES

Cuando se utilizan electrodomésticos, se deben tener en cuenta algunas precauciones básicas de seguridad, incluyendo las siguientes:

- Lea y conserve las instrucciones.
- Asegúrese de que el voltaje del toma-corriente es el mismo que el voltaje indicado en la placa del aparato.
- Para protegerse contra riesgo de descargas eléctricas, no sumerja el cable, el enchufe o el aparato en agua o en otros líquidos.
- No toque las superficies calientes, use el mango.
- Los niños no deben utilizar este aparato.
- Tenga cuidado cuando utilice cualquier aparato en presencia de niños.
- Desconecte su Sanduchera/ Panini Press IMUSA® del toma-corriente cuando no la esté usando o cuando vaya a limpiarla. Permita que se enfrié antes de limpiarla o guardarla.
- Nunca hale el cable eléctrico para desconectar el aparato del toma-corriente. Es mejor halar el enchufe para desconectar la unidad.
- No utilice ningún electrodoméstico si tiene dañado el cable eléctrico.
- Para evitar el riesgo de una descarga eléctrica, no use la Sánduchera/ Panini Press IMUSA® si no está funcionando correctamente o cuando esta se haya caído o maltratado de alguna forma.
- Jamás trate de reparar la Sánduchera/ Panini Press IMUSA® por sí mismo: llévela a un centro de servicio técnico autorizado para que sea revisada y reparada. Si la Plancha ha sido montada incorrectamente puede existir el peligro de descargas eléctricas cuando se utilice.
- El uso de accesorios o partes no recomendadas por el fabricante puede ocasionar fuego, choques eléctricos, o daños a las personas.
- No es para uso comercial.
- No permita que el cable eléctrico cuelgue en el borde de la mesa o superficie de trabajo, ni que esté en contacto con alguna superficie caliente.
- No coloque el electrodoméstico encima o cerca de una estufa eléctrica o de gas que este caliente, ni sobre un horno caliente o un horno de microondas.
- Unicamente utilice el aparato sobre una superficie nivelada que sea resistente al calor.
- Tenga mucho cuidado al mover cualquier aparato que contenga aceite caliente u otros líquidos.
- Cuando esté usando este aparato, deje suficiente espacio libre por la parte superior y por los lados para que circule el aire.
- No deje nunca el aparato sin supervisión mientras esté en funcionamiento.
- Use el aparato solo en una toma-corriente de pared.
- Asegúrese de que no haya ningún material inflamable como cortinas, papel, plásticos, etc., mientras el aparato esté funcionando.

ANTES DE USAR SU PLANCHA IMUSA POR PRIMERA VEZ

- Debe lavar y acondicionar las superficies de cocción:
- Desconecte el aparato del toma-corriente y lave las superficies de cocción con una esponja o paño húmedo. No sumerja el aparato en agua. Enjuague con una esponja o paño húmedo y seque.
- Para acondicionar las superficies de cocción, enchufe el aparato en un toma-corriente. La luz roja y la luz verde se iluminarán. Permita que la luz verde se apague. Engrase ligeramente las superficies de cocción con una pequeña cantidad de mantequilla o margarina y limpie cualquier exceso.
- Nota: Es posible que cuando utilice la Sanduchera/ Panini Press IMUSA® por primera vez detecte una pequeña cantidad de humo. Esto es muy normal y se debe al calentamiento inicial de los componentes internos.

CUIDADO Y LIMPIEZA

- Desconecte el aparato del toma-corriente y permita que se enfríe completamente, antes de limpiar.
- Limpie las superficies de cocción con una esponja o paño húmedo. Nunca sumerja el aparato en agua. No coloque la Sanduchera/Panini Press IMUSA® en el lavaplatos automático.
- Para eliminar restos de comida utilice un cepillo o limpiador no abrasivo. No utilice ningún tipo de químico, fibras de lana o limpiadores abrasivos porque podrán dañar la superficie antiadherente.
- Para limpiar la superfice exterior pase un paño húmedo y luego seque con un paño suave y seco.
- Guarde la Sanduchera/Panini Press IMUSA® en posición cerrada. Cierre la Plancha uniendo las superficies de cocción y presione el cierre ubicado en la parte lateral del mango. Esto asegurará que el aparato se mantenga cerrado. El aparato puede ser almacenado en posición vertical para ocupar menos espacio.
- Nunca corte comidas directamente sobre la superficie de cocción.

RECOMENDACIONES

- Siempre deje que el aparato se caliente previamente antes de usarlo.
- Tenga mucho cuidado cuando prepare sánduches que contengan relleno como queso, tomate o mermelada, ya que éstos retienen el calor y pueden quemar si se comen muy rápido.
- Para lograr un tostado dorado, se recomienda cubrir el pan ligeramente con mantequilla.