CHIC OLOGY HOME

INSTRUCTION
For Cordless Roller Shade

1 Check package for the complete set of parts.

wall anchor **4 x**

screws **4 x**

brackets **2 x**

⚠️ **Do not** remove the plastic tape before install.
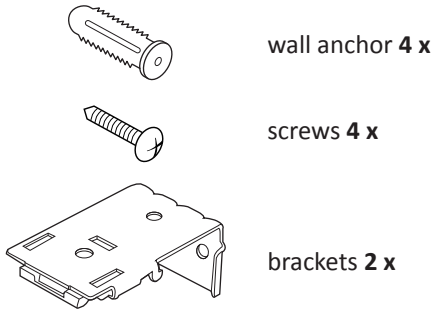
2 Install brackets as wall or ceiling mount according to your preference.

OR

Wall mount   Ceiling mount

Make sure the brackets are level.
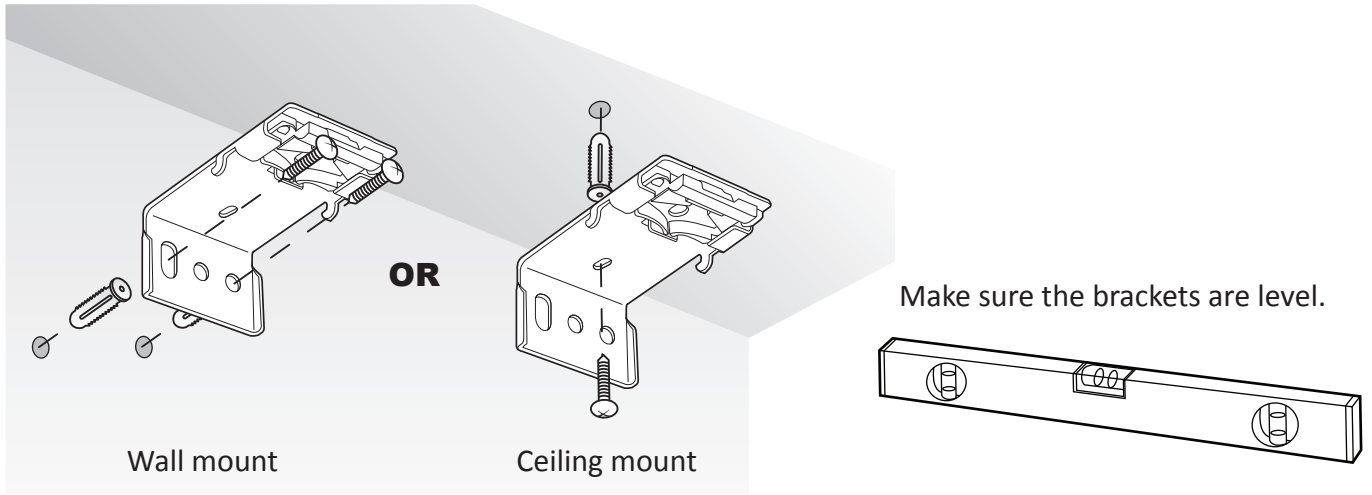
3 "Place the front groove on the top of head rail into the bracket (as shown below).
Then push in order to clip the rear head rail groove into the bracket."
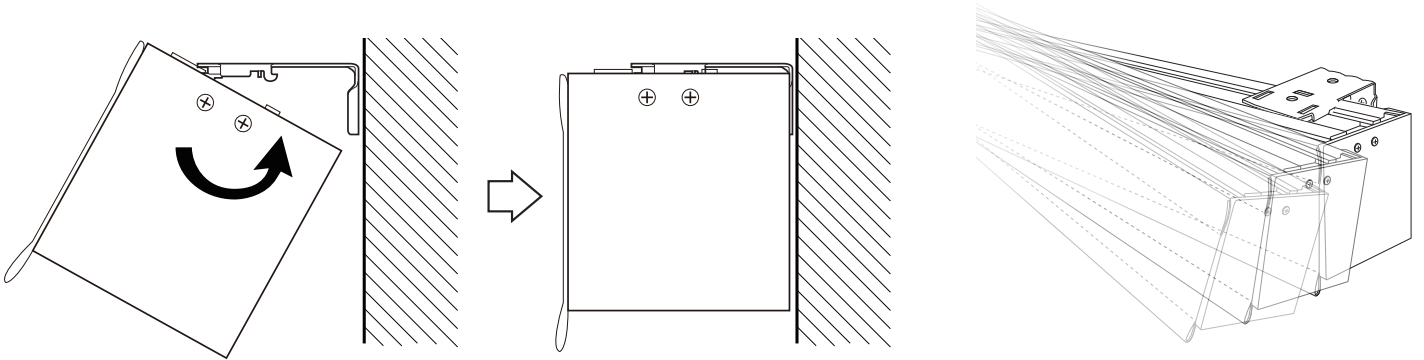
4 Remove the plastic tape and raise the shade up and down straight by holding the bottom handle.