


The below serves only as an installation guide for Everbilt™ molded sump and sewage basins. Please refer to your state and/or local plumbing or onsite wastewater treatment and disposal regulations for details pertaining to your systems design, installation and maintenance requirements.

1. Inspect all parts and materials supplied by The Home Depot to assure that no shipping damage occurred.
2. Excavate hole large enough to accommodate basin, backfill material and inlet piping.
3. Add 4" - 6" of clean backfill material or concrete to the bottom of the hole. Assure that it is level, compacted and smooth.
4. Place the basin in the hole making sure that it is level.
5. Carefully backfill with naturally rounded gravel or stone, larger than 3/8" and smaller than 3/4" diameter, around the periphery of the basin.
6. Connect all piping as required.
7. Finish floor around the basin as required.

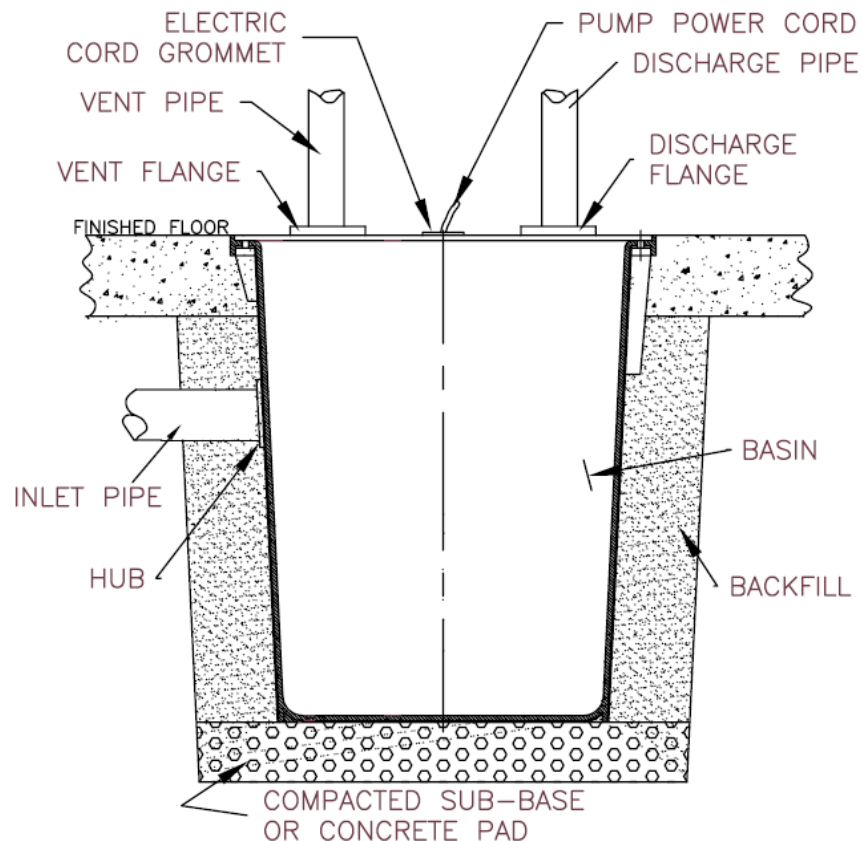

Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m. - 7 p.m. EST, Monday - Friday and Saturday 9 a.m. - 6 p.m. EST

1-877-297-6069

HOMEDEPOT.COM