

GRACE ICE & WATER SHIELD® HT

Self-adhered roofing underlayment for high temperature applications

Product Description

Grace Ice & Water Shield® HT is a premier membrane designed to deliver premium in-place performance for high temperature applications. It is composed of two waterproofing materials—an innovative and proprietary rubberized asphalt adhesive combined with a high performance polymeric film with UV barrier properties. The rubberized asphalt surface is backed with a foldless release paper that protects its adhesive quality. During application, the release paper is easily removed, allowing the rubberized asphalt to bond tightly to the roof deck. In addition, embedded in the membrane is a split release on demand feature called Ripcord®.

Features & Benefits

Today's sloped roof designs utilize more insulation, incorporate long-lasting roof coverings and tend to have lengthy construction cycles. The many variables that contribute to roof top temperatures; insulation, facing, pitch, color, etc., make it difficult to predict what kind of heat profile the roof top will experience. Choosing an underlayment that will perform under all of these demanding conditions is essential to a successful roof design.

Grace Ice & Water Shield HT was specifically designed to meet the challenge of these high-temperature applications. It is an environmentally conscious solution that provides both confidence and design flexibility.

High temperature resistance—Rubberized asphalt will not flow, even at temperatures as high as 240°F.

Extended exposure—Can be left exposed for up to 120 days.

Superior adhesion—The self-adhered membrane bonds firmly to the roof deck without heat or special adhesives.

Ripcord is a unique, patented feature that makes Grace Ice & Water Shield HT easier to apply by giving the applicator a split release on demand. Faster application of the membrane in the straight-aways, as well as ease of membrane positioning in detailed areas (valleys, around dormers, etc.), are just some of the benefits.

Foldless release paper—The foldless release paper provides multiple performance enhancements: fewer edge catches, 180° pull-back, ease of membrane cutting (single cuts) and membrane positioning, quicker “one-man installs” resulting in an easier, more productive release.

Seals around nails—The rubberized asphalt layer in Grace Ice & Water Shield HT seals around roofing nails, resisting leakage caused by water back-up behind ice dams or wind-driven rain.

Dual barrier protection—Rubberized asphalt is combined with polymeric film to form two waterproofing barriers providing maximum protection.

Membrane will not crack, dry out or rot—Grace Ice & Water Shield HT resists attacks from fungus and bacteria; maintains its integrity for long lasting protection.

Protects under all standard sloped roof coverings—Grace Ice & Water Shield HT protects under slate, tile, cedar shakes, metal and conventional asphalt shingles.

Slip resistant surface—Grace Ice & Water Shield HT has a slip resistant embossed surface to maximize traction and improve safety.



Reroofable—Unlike some granular surfaced membranes, Grace Ice & Water Shield HT will not adhere to the underside of the exposed roof covering. It can be applied over the old Grace underlayment (except over Grace Basik[®] except over Grace Basik[®], Grace Tri-Flex[®] and Grace Tri-Flex[®] Xtreme[™]) in retrofit applications, making reroofing easier, less costly, more durable and environmentally friendly (as the structural deck remains intact avoiding the need to purchase additional wood decking).

Grace technical support—Grace Ice & Water Shield HT is backed by a team of local technical support personnel that help ensure every application goes smoothly.

Guidelines for Use

Grace Ice & Water Shield HT is a waterproof underlayment designed for use on sloped roof decks and is suitable under most traditional roof coverings, including metal and shingles for both commercial and residential applications. Grace Ice & Water Shield HT resists water penetration due to water back-up behind ice dams or wind driven rain. It also offers leak protection in trouble prone spots like valleys, skylights, protrusions and other flashing areas.

Ice Dams

Grace Ice & Water Shield HT should be used in conjunction with designs which minimize ice dam formation. In cold climates, it is particularly important to provide proper insulation and ventilation to reduce the size of ice dams and to avoid interior condensation. Cathedral ceilings must include ventilation between rafters to allow for air flow to a ridge vent. Well ventilated cold roof designs are particularly important in alpine regions to reduce the size of ice dams which could contribute to structural damage.

Several variables will influence the height of ice dams and the membrane coverage required.

- 1. Climate**—The annual snow fall will affect the amount of membrane needed.
- 2. Slope**—On a low slope, ice dams will extend farther inward from the roof edge.
- 3. Overhang**—A wide overhang will require more membrane to reach the appropriate point on the roof.
- 4. Insulation and ventilation**—A very well insulated building with a cold, well ventilated attic will have smaller ice dams.
- 5. Valleys**—Any valleys formed by projections such as dormers or roof direction changes are likely to trap more snow and cause larger ice dams.
- 6. Exposure**—A northern exposure or shaded areas will generally contribute to larger ice dams. While gutters may make it easier for an

ice dam to start, large dams can occur on roofs with no gutters.

Removing snow from a roof edge or installing heat cables may not prevent ice dam formation, but may shift the location of the ice dam. Under certain conditions, a dam can form at the edge of the remaining snow.

Local building codes should be consulted for specific requirements.

Installation Procedure

Surface Preparation

Install Grace Ice & Water Shield HT directly on a clean, dry, continuous structural deck. Some suitable deck materials include plywood, wood composition, wood plank, metal, concrete, or gypsum sheathing. Remove dust, dirt, loose nails, and old roofing materials. Protrusions from the deck area must be removed. Decks shall have no voids, damaged, or unsupported areas. Wood planks should be closely butted together. Repair deck areas before installing the membrane.

Prime concrete, masonry surfaces and DensGlass Gold[®] with Perm-A-Barrier[®] WB Primer. Prime wood composition and gypsum sheathing with Perm-A-Barrier WB Primer if adhesion is found to be marginal (refer to Technical Letter 12, *Use on Oriented Strand Board (OSB) Roof Sheathing*). Apply Perm-A-Barrier WB Primer at a rate of 250–350 ft²/gal (6–8 m²/L). Priming is not required for other suitable surfaces provided that they are clean and dry.

Membrane Installation

Apply Grace Ice & Water Shield HT in fair weather when the air, roof deck, and membrane are at temperatures of 40°F (5°C) or higher. Apply roof covering material at temperatures of 40°F (5°C) or higher.

Cut the membrane into 10–15 ft (3–5 m) lengths and reroll loosely. Peel back 1–2 ft (300–600 mm) of release liner, align the membrane, and continue to peel the release liner from the membrane. Press the membrane in place with heavy hand pressure. Side laps must be a minimum of 3.5 in. (90 mm) and end laps a minimum of 6 in. (150 mm). For valley and ridge application, peel the release liner, center the sheet over the valley or ridge, drape, and press it in place. Work from the center of the valley or ridge outward in each direction and start at the low point and work up the roof.

Alternatively, starting with a full roll of membrane, unroll a 3–6 ft (1–2 m) piece of membrane leaving the release liner in place. Align the membrane and roll in the intended direction of membrane application. Carefully cut the release liner on top of the roll in the cross direction being careful not to cut the membrane. Peel back about 6 in. (150 mm) of the release liner in the opposite direction of the intended membrane application

exposing the black adhesive. Hold the release liner with one hand and pull the roll along the deck with the release liner, leaving the applied membrane behind. Use the other hand to apply pressure on the top of the roll. Stop frequently to press the membrane in place with heavy hand pressure. When finished with the roll go back to the beginning, reroll and pull the remaining release paper from the material, finishing the installation.

For successive membrane courses, align the edge of the release liner with the dashed line provided on the surface of the membrane to achieve the 3.5 in. (90 mm) side lap.

Consistent with good roofing practice, install the membrane such that all laps shed water. Always work from the low point to the high point of the roof. Apply the membrane in valleys before the membrane is applied to the eaves. Following placement along the eaves, continue application of the membrane up the roof. The membrane may be installed either vertically or horizontally.

Use smooth shank, electro-plated galvanized nails for fastening shingles to get the best seal. Hand nailing generally provides a better seal than power-activated nailing. If nailing of the membrane is necessary on steep slopes during hot or extreme cold weather, backnail and cover the nails by overlapping with the next sheet.


Extend the membrane on the roof deck above the highest expected level of water back-up from ice dams and above the highest expected level of snow and ice on the wall sheathing on vertical side walls (dormers) and vertical front walls for ice dam protection. Consider a double layer of membrane in critical areas, such as along the eaves or in valleys and in climates where severe ice dams are anticipated. Apply the membrane to the entire roof deck for wind-driven rain protection. Apply a new layer of Grace Ice & Water

Shield HT directly over the old Grace underlayment in retrofit applications following the standard membrane application procedure.


Precautions & Limitations

- Slippery when wet or covered by frost.
- Consistent with good roofing practice, always wear fall protection when working on a roof deck.
- Release liners are slippery. Remove from work area immediately after membrane application.
- Do not leave permanently exposed to sunlight. Cover within 120 days.
- Place metal drip edges or wood starter shingles over the membrane.
- Do not fold over the roof edge unless the edge is protected by a drip edge, gutter or other flashing material.
- Do not install on the chamfered edges of wood plank.
- Do not install directly on old roof coverings.
- Certain product applications are prohibited in hot desert areas in the southwestern United States. Check with your Grace Construction Products representative.
- Check with the manufacturer of the metal roofing system for any special requirements when used under metal roofing. Do not install directly under roof coverings especially sensitive to corrosion, such as zinc, without providing proper ventilation.
- Do not install under copper, Cor-Ten®, or zinc metal roofing in high altitudes. These roofs can reach extremely high temperatures due to the low reflectivity, high absorption, and high conductivity of the metals. Use Grace Ultra for these roof types. Check with your Grace Construction Products representative.


Ice Dams

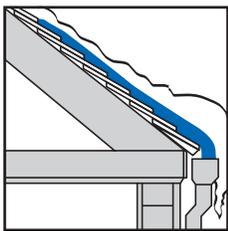

Water from melting snow over the heated portion of the house runs down the roof. It freezes at the cold eave and an ice dam begins to form preventing drainage.

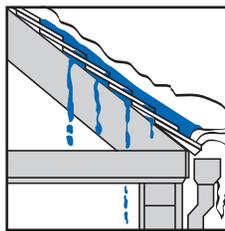


As the ice dam grows, water is trapped behind it and backs up under the shingles. Eventually it reaches the roof deck and leaks through, damaging the interior of the structure.

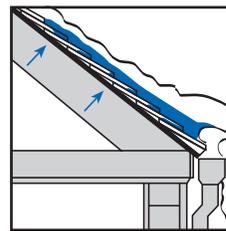


Grace Ice & Water Shield HT resists this leakage because of the seal around the fasteners, ability to make watertight laps, and the membrane's bond to the deck.


Wind-Driven Rain

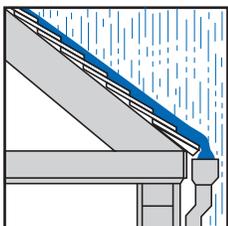

Sloped roofs are not waterproof. They protect structures by shedding rain water.

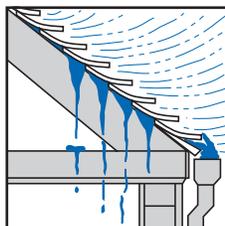

Storm-driven winds can cause sloped roof coverings to lift. Rain can then be easily driven under the roof covering directly to the unprotected roof deck where it causes leaks and damage to the interior of the structure.

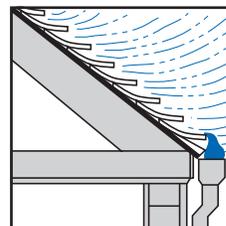

Grace Ice & Water Shield HT applied beneath the sloped roof covering helps prevent wind-driven rain from entering the structure.

- Provide proper roof insulation and ventilation to help reduce ice dams and to minimize condensation. Grace Ice & Water Shield HT is an air and vapor barrier.
- Repair holes, fishmouths, tears, and damage to membrane with a round patch of membrane extending past the damaged area 6 in. (150 mm) in all directions. If fasteners are removed leaving holes in the membrane, they must be patched. The membrane may not self-seal open fastener penetrations.
- Do not install fasteners through the membrane over unsupported areas of the structural deck, such as over the joints between adjacent structural panels.
- Due to its slight asphaltic odor, do not apply where the membrane is exposed to interior living space. Refer to product literature for more complete information.
- Not compatible with EPDM or TPO; use Grace Ultra for tie-ins (refer to Technical Letter 5, *Chemical Compatibility*).
- Not compatible with polysulfides, flexible PVC, or high concentrations of resin (pitch). For more information, refer to Technical Letter 5.

Code Compliance

Grace Ice & Water Shield HT meets all key code performance requirements for self-adhered underlayments.

- Underwriters Laboratories Inc. R13399- Class A fire classification under fiber-glass shingles and Class C under organic felt shingles (per ASTM E108/UL 790)
- Underwriters Laboratories Inc. Classified Sheathing Material Fire Resistance Classification with Roof Designs: P225, P227, P230, P237, P259, P508, P510, P512, P514, P701, P711, P717, P722, P723, P732, P734, P736, P742, P803, P814, P818, P824
- Meets ICC-ES AC 48 and ASTM D1970
- ICC Approval Pending according to ICC-ES AC 48 *Acceptance Criteria for Roof Underlayments for use in Severe Climate Areas*.
- Miami-Dade County Code Report NOA 10-0415.02
- Florida State Approval Report No. FL14166.1

Product Data

Roll length	75 ft (22.9 m)	66.6 ft (20.2 m)
Roll width	36 in. (914 mm)	36 in. (914 mm)
Roll size	225 ft ² (20.9 m ²)	200 ft ² (18.6 m ²)
Packaging	Corrugated cartons	Corrugated cartons
Roll weight	61.4 lbs (27.9 kg)	56 lbs (25.4 kg)
Rolls per pallet	35	35

Performance Properties

Property	Value	Test Method
Color	Gray-black	
Thickness, membrane	40 mil (1.02 mm)	ASTM D3767 method A
Tensile strength, membrane	MD 33 lbf/in., CD 31 lbf/in.	ASTM D412 (Die C modified)
Elongation, membrane	250%	ASTM D412 (Die C modified)
Low temperature flexibility	Unaffected @ -20°F (-29°C)	ASTM D1970
Adhesion to plywood	5.0 lbs/in. width (525 N/m)	ASTM D903
Permeance (max)	0.05 Perms (2.9 ng/m ² s Pa)	ASTM E96
Material weight installed (max)	0.22 lb/ft ² (1.3 kg/m ²)	ASTM D461

www.graceconstruction.com

For technical assistance call toll free at 866-333-3SBM (3726)

Grace Ice & Water Shield, Ripcord, Basik and Perm-A-Barrier are trademarks of W. R. Grace & Co.—Conn. registered in the United States and other countries.

Cor-Ten is a registered trademark assigned to USX Corporation.

DensGlass Gold is a registered trademark of Georgia-Pacific Corporation.

We hope the information here will be helpful. It is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us. No statement, recommendation or suggestion is intended for any use which would infringe any patent or copyright. W. R. Grace & Co.—Conn., 62 Whittemore Avenue, Cambridge, MA 02140. In Canada, Grace Canada, Inc., 294 Clements Road, West, Ajax, Ontario, Canada L1S 3C6.

This product may be covered by patents or patents pending.
GIWS-210D Printed in U.S.A. 12/10

Copyright 2010. W. R. Grace & Co.—Conn.
FA/PDF

GRACE