

Installation & Assembly Instructions

LB18-CK, BKit, BKKit, TKit Instruction Sheet – (2) 18" x 36" LocBoard® Pegboards, 28 Hooks, 2 Bins

Read all instructions completely before installing. Should you have any questions about your installation, please call Customer Service at 440-248-5480

Review Carton Contents: (1 Box Makes Up This Kit)

- 2 Pcs. LocBoard Pegboard 18" x 36" (BKit= Blue, BKKit=Black, TKit=Tan)
- 28 Pcs. Assortment of LocHook® Pegboard Hooks
- 2 pcs. Small Bin (205) 3-5/8" L x 3-7/8" W x 1-3/4" H
- 1 pk. Wall Mounting Hardware Packet

- Boards can be positioned side by side or in separate location in vertical or horizontal mounting positions.
- Pegboards fasten directly to concrete, solid wood and hollow wall structures without the use of furring strips.
- Pegboards are designed with internal mounting flanges that keep mounting hardware hidden from sight and add to the board's structural integrity and holding power.
- If installing to bare studs you will need to install wood headers before completing installation.

Tools needed for Installation (not supplied with kit)

Level, marker, 7/32" standard or masonry drill bit, 7/64" drill bit for wood studs, #2 Phillips head screw driver, power drill.

For drywall, hollow concrete wall installation: Use (12 each) plastic drywall anchors and #8 Phillips head wood screws (SUPPLIED WITH THIS SYSTEM). If installing to bare studs you will need to install wood headers before completing installation using wood screws only. NOTE: Always install one board at a time.

1. (IMPORTANT!) Select wall location for your LocBoards and the desired vertical or horizontal mounting pattern you wish to mount in. When selecting a location for mounting always make sure that mounting locations do not fall in line with, are adjacent to or interfere with any internal or external electrical wiring, wall mounted or built-in electrical appliances, heaters, gas lines, ductwork or plumbing inside of wall, or are located on the opposite side of any wall surface from where you are mounting. If you are unsure, please consult a professional before proceeding with installation.
2. There are three screw holes in each mounting flange on the back of your LocBoard that are accessible through the square holes on the front (see images on back).
3. Place one LocBoard with mounting flanges flat against wall surface, while using a level to make sure your board is straight and squared. Mark the centers of all 6 screw holes onto your wall surface. Note: Installation for first board should be completed before marking mounting holes for the second board.
4. Pre-drill holes for #8 wall anchors marked in Step 3 using 7/32" standard or masonry drill bit depending on wall surface. If you hit a wood stud stop drilling and using a 7/64" drill bit create a pilot hole for the wood screw, Note: avoid over-drilling holes. (Plastic wall anchors should fit snug.)
5. Insert plastic wall anchors in each hole drilled in Step 4 except where you drilled 7/64" pilot hole for wood stud.
6. Align mounting holes in wall surface with screw holes in back flanges. Insert wood screws through the front square opening and into pre-installed plastic wall anchors. Tighten all screws. The head of each screw should not be visible and will be tight against inside surface of each mounting flange.
7. Repeat Steps 2-6 for second LocBoard installation.



Installation & Assembly Instructions

Hook Installation: Insert hook's back locking tabs into front square openings of tool board, slide securely into place and complete by installing the required number of LocScrews.

Each LocHook has the unique capability of being securely mounted vertically or horizontally.

LocBoards must be securely fastened to sound wall structures to support heavy loads.

For questions or installation help Contact Triton Products Directly at 440-248-5480

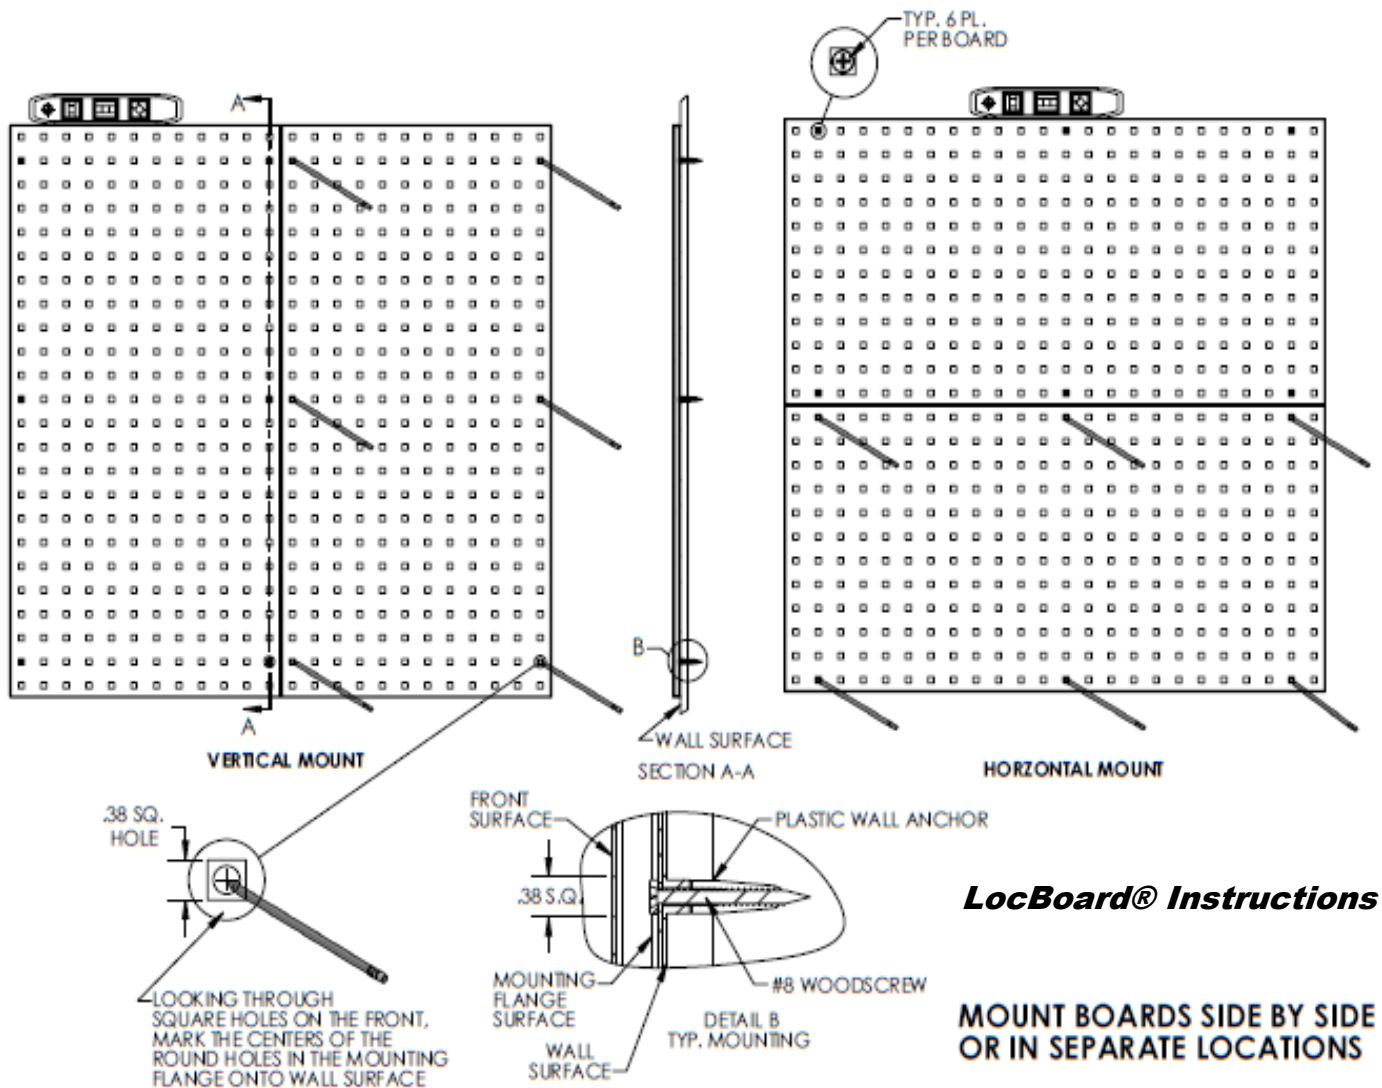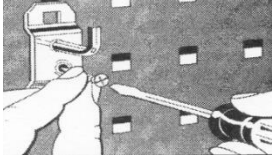

LocBoard® Instructions

MOUNT BOARDS SIDE BY SIDE OR IN SEPARATE LOCATIONS