


## BUFFORD 3 SHELF OPEN BOOKCASE

## Assembly Instructions

HDC#:9484600210 MFG#:B3239B


Please read over the instructions; it will be a time-saver in the long run.

Note:before assemble, please be sure to work on a soft flat surface to avoid any damage to the finish.

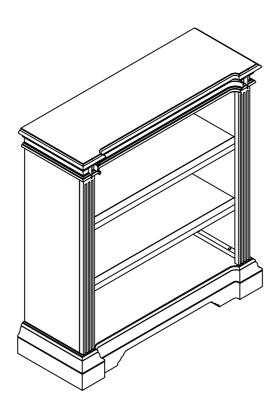


## Parts Check List

Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

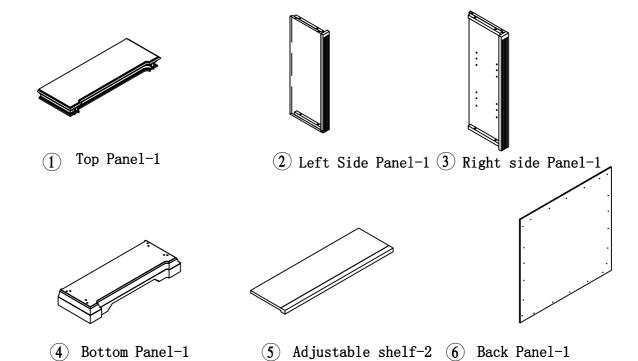


## Hardware Check List


Please take all the hardware listed below out of the hardware bag.

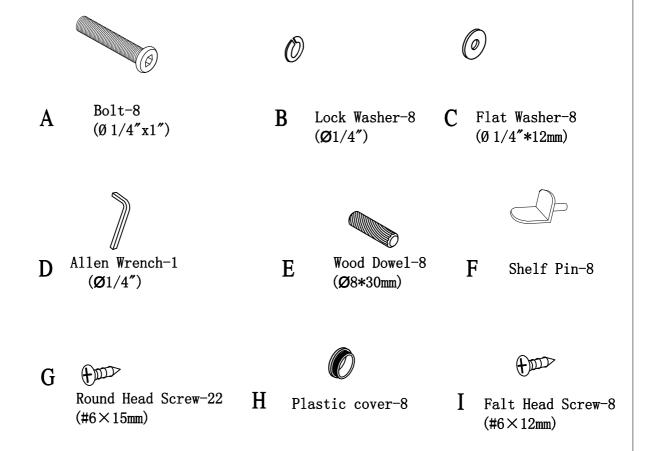


Step 1. First, insert wood dowels (E) to the bottom panel(4) as shown. Now, attach left side panel (2) and right side panel (3) with bolt (A) through lock washer (B) and flat washer (C) by allen wrench (D). Then, attach the plastic cover(H).

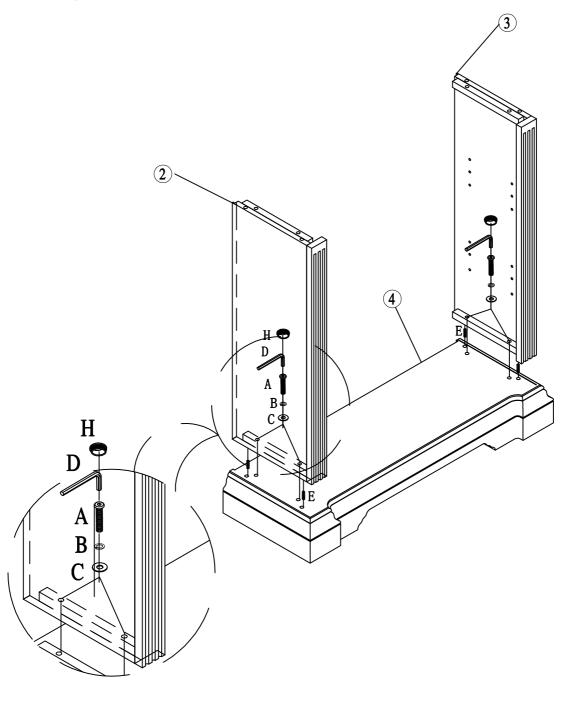

Step 2. First, insert wood dowels (E) to the left side panel(2) and right side panel (3) as shown. Now, attach the top panel (1) with bolt (A) through lock washer (B) and flat washer (C) by allen wrench (D). Then, attach the plastic cover(H).

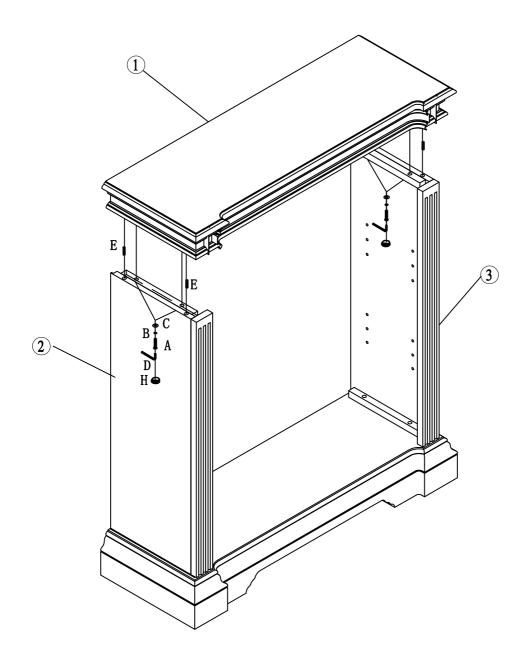


Step 3. Attach back panel (6) with screw (G) as shown. See figure below:

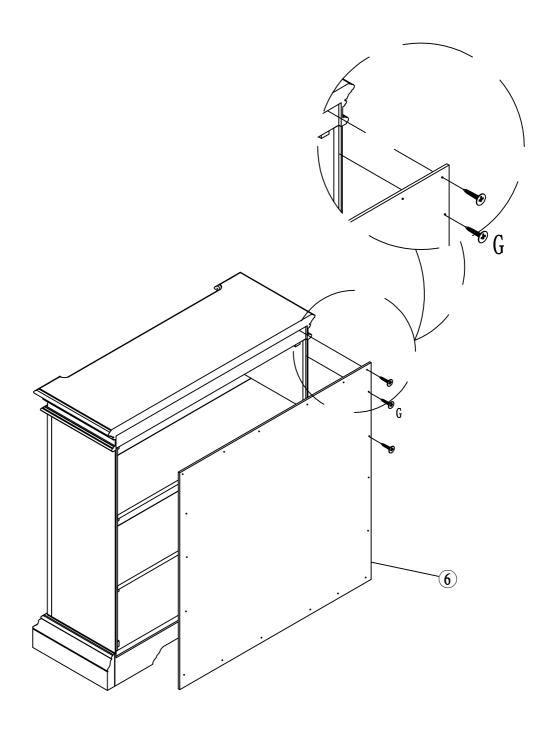


Step 4. Place adjustable shelves (5) onto shelf pins (F) as shown.

See figure below:

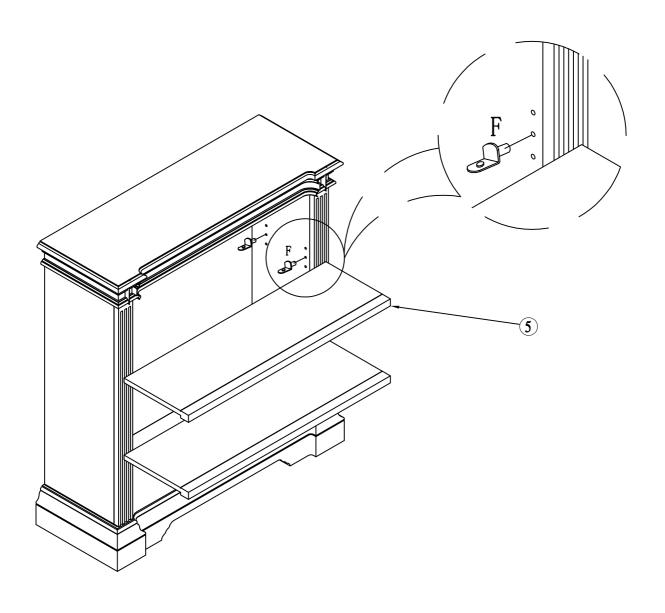

Step 5. Using a Phillips head screwdriver, secure shelf pin to shelving with 1 screw (I) as shown.

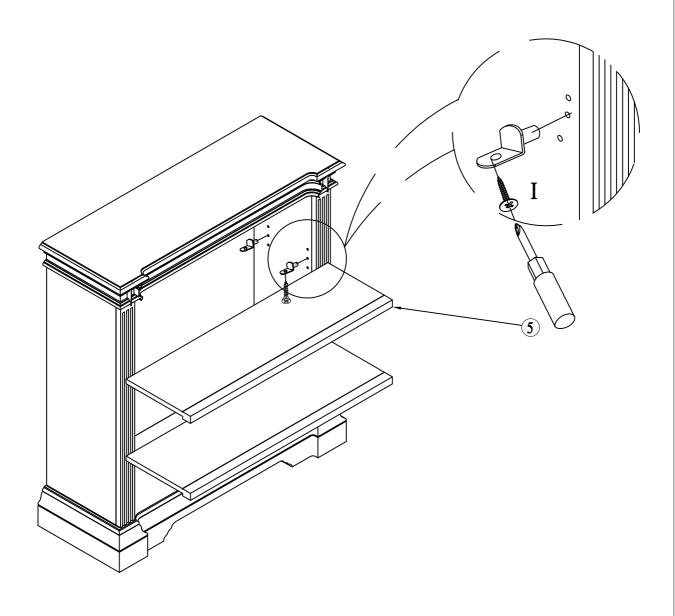

Step 6. Anti-tip hardware kit must always be used to prevent the bookcase from tipping as shown.

