




Clean the surface of dust and remember that if your work is over paint, wallpaper, drywall or plywood, always use metal mesh to ensure adhesion.

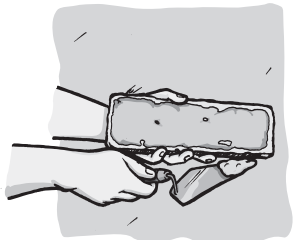


1. Clean the surface and place the adhesive, Type S or Type N, on the back of the stone/brick evenly.

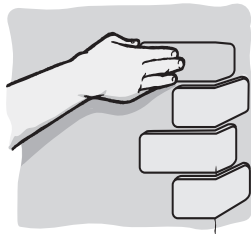

2. Mix several boxes to achieve a more natural application. Always begin installing the stone/brick with corners.

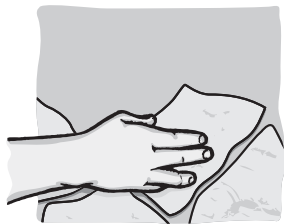


3. If cuts are needed use a masonry saw. Press the pieces firmly against the surface to ensure adhesion.

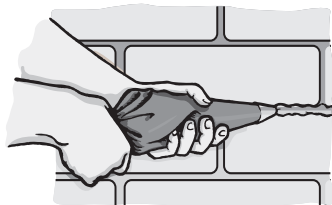

4. Always use a grout bag and apply grout uniformly, careful not to drain.



5. Remove excess grout with a brush handle and detail with the bristles from the same brush. Never use a metal brush.

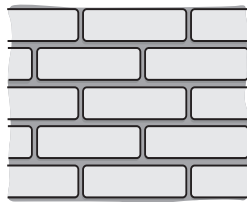

6. Your wall is ready. You can use sealants, antigraffiti, or water repellents to give the desired finish.

Note: Check building codes that apply in each region and/or country. Compliance with these regulations is the sole responsibility of the user and installer.