

installation instructions:

EnduraPanels

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, paint manufacturers' instructions, and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- Power Grab Adhesive
- Utility Knife, Circular Saw, or Table Saw
- Paint Brush or Roller
- Measuring Tape
- Sand Paper
- Sheetrock Compound (Optional, see instructions.)
- Putty Knife (Optional, see instructions.)

SPECIAL INSTRUCTIONS AND NOTES

- Thoroughly read through the install instructions to familiarize yourself with the process before beginning installation.
- Before installing, acclimate the panels in the room where you will be installing them.
- In most applications you will have to trim some panels. Cut them with a standard utility knife or power tool, such as a table saw. Sand cut edge to remove debris.
- Depending on your installation, you will have to choose the correct adhesive.

STEP BY STEP INSTRUCTIONS

1. Prepare installation surface with sandpaper by removing excessive bumps or texture. Wipe clean and apply primer to ensure proper adhesion.
2. Mark the installation points using a straight edge and level.
 - a. On a wall with one corner start at the end wall and work towards the corner (Diagram A)
 - b. For a wall with two corners start at the center and work out (Diagram B)
3. Apply adhesive to the back of the panel and the installation area. (Follow adhesive manufacturer's instructions for proper application)
 - a. Install panels side by side. (These panels are designed to minimize the appearance of seams.) (Diagram C)
 - b. For a seamless appearance, leave a 1/16 inch gap between each panel. After the panels have dried, apply a layer of primer over the surface. Once the primer has dried, go over the seams with sheetrock compound. This may take two or more applications. Be sure to sand between each application. (Diagram D)
4. Once installed, you can leave the product with its' white factory finish, or prime and paint any desired color.

EXAMPLE INSTALLATION DIAGRAMS

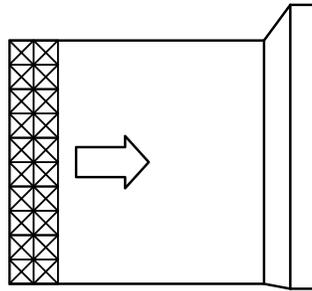


Diagram A

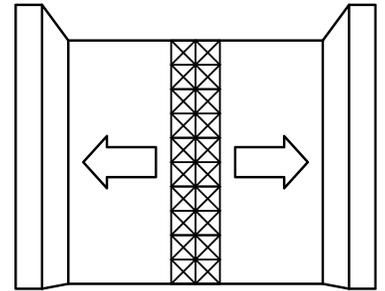


Diagram B




Diagram C

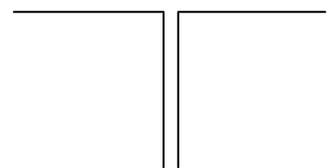


Diagram D