




MC Smart Controls

FL-1000 Quick Installation

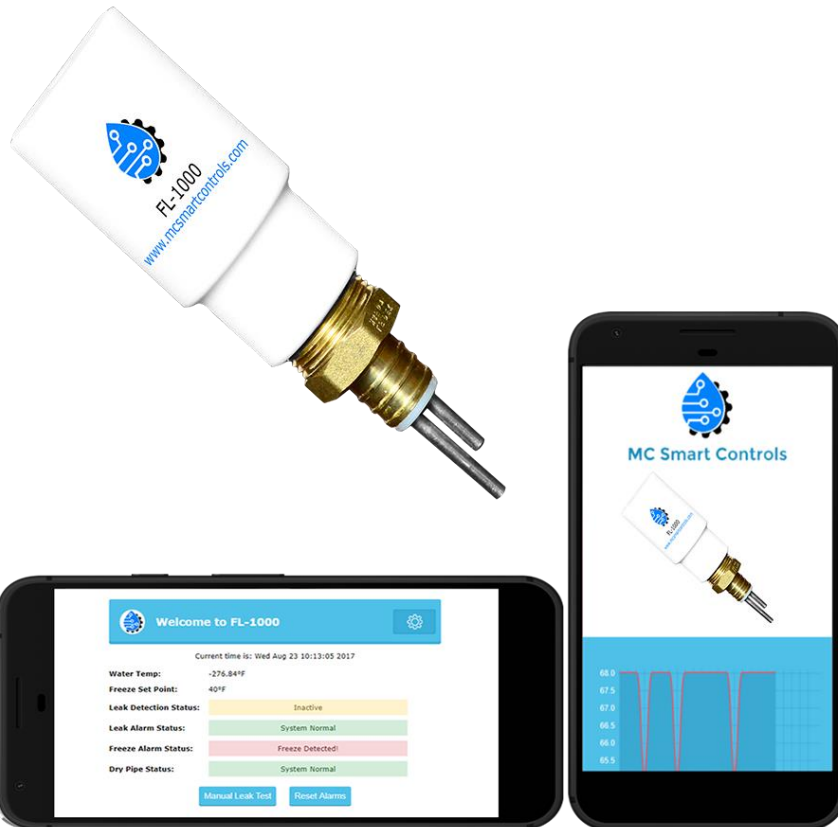

Installation

Location

- Select a location at least 6 inches or more after the main shutoff for the installation of the FL-1000 sensor. Make sure that the location you select in the main line after the shutoff valve is before the pipe branches off.

Mounting and Installation *(It is Strongly advised to contract a certified plumber)*

1. Shut off the main valve that feeds the water to the house. *See diagram 1*
2. Cut a one inch piece out of the PEX water pipe. *See diagram 2*
3. Slip the Shark Bite Model# U3370LFA push tee fitting on to one end of the cut water pipe(PEX, Copper, PVC) . *See diagram 3*
4. Slip the other end of the water pipe on to the tee. *See diagram 4*
5. Take out the FL-1000 leak detector for its package. *See diagram 5*
6. Install the FL-1000 leak detector into the top of the tee.. *See diagram 6*
7. Turn the main water valve back on and check for leaks.

Connect Line Power

- Let the water run for a few minutes. If there are no leaks plug the AC power supply into the wall outlet.

