

FRONT  
OF FRAME

SIDE  
OF FRAME

STEP 1:  
SCREW LEG BOLT  
INTO T-NUT BRACKET  
ON BOTTOM CORNER  
OF FRAME



3" ROUND  
PLASTIC LEG

FRAME-LEG ASSEMBLY


DATE: 3-25-13

DRAWN BY: M. MILES

FRONT  
OF FRAME

SIDE  
OF FRAME

STEP 1:  
SCREW LEG BOLT  
INTO T-NUT BRACKET  
ON BOTTOM CORNER  
OF FRAME

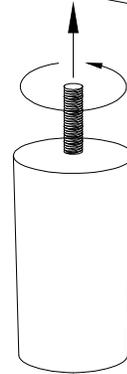

3" ROUND  
PLASTIC LEG

FRAME-LEG ASSEMBLY


DATE: 3-25-13

DRAWN BY: M. MILES

FRONT  
OF FRAME

SIDE  
OF FRAME

STEP 1:  
SCREW LEG BOLT  
INTO T-NUT BRACKET  
ON BOTTOM CORNER  
OF FRAME

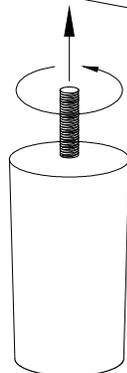

3" ROUND  
PLASTIC LEG

FRAME-LEG ASSEMBLY


DATE: 3-25-13

DRAWN BY: M. MILES

FRONT  
OF FRAME

SIDE  
OF FRAME

STEP 1:  
SCREW LEG BOLT  
INTO T-NUT BRACKET  
ON BOTTOM CORNER  
OF FRAME

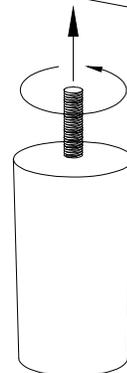

3" ROUND  
PLASTIC LEG

FRAME-LEG ASSEMBLY

DATE: 3-25-13

DRAWN BY: M. MILES