

# The Artifactory

## WINDOW HARDWARE INSTALLATION INSTRUCTIONS 80" – 160 SET CONSISTS OF TWO 80" SETS Professional Installation Recommended

### BEFORE STARTING

Read instructions carefully.

Determine the proper height for the rod by taking into consideration how the panel will drape and where brackets should be installed.

Have the rod and bracket items at hand and the tools as indicated below on this instruction sheet.

### COMPONENTS – MAY BE PACKAGED SEPARATELY:

(An 80" – 160" set is made by combining two 44"- 80" sets)

- Two Finials
- Two large diameter rods
- Two small diameter rods (may be inside large diameter rods)
- Two plastic bushings
- Six Brackets
- Rubber Rod Caps

### RECOMMENDED TOOLS FOR INSTALLATION

TO INSTALL on brick, concrete, stone or tile:

Phillips screw driver, metal tape measure, level, power drill and masonry bit, pencil, appropriate anchors, stepladder.

NOTE obtain anchors for masonry from building supply store

TO INSTALL on wallboard with metal studs

Phillips screwdriver, metal tape measure, level, power drill and drill bit for metal, pencil, sheet metal screws [obtainable at building supply store], stepladder.

TO INSTALL on drywall with wood studs

Phillips screw driver, metal tape measure, level, power drill and wood bit, pencil, stepladder.

### IMPORTANT

To ensure years of enjoyment and safety, hardware brackets should be attached to wood or metal studs or a structural wood support.

When an attempt is made to install brackets into WALL BOARD without a stud [for light weight fabrics or sheers only] it is absolutely necessary to use both screws with anchors for each bracket installation.

Improper installation or misuse can cause draperies to fall causing potential danger.

### INSTALLATION

1. The brackets should be placed approximately 1 1/2" from the end of your drapery rod to allow for finials. It is advisable to use a level to determine the vertical position of each bracket so that drapery will hang evenly. Placement of brackets will depend on the practical aspects of the window treatment and adjusting the panels for best usage.

2. Using a pencil, mark the appropriate location of the brackets. Drill holes where marked using a 3/16" drill bit. Screw/tap anchors into holes. *Mount brackets using the enclosed screws with the set screw on the bottom.*


Rods should be connected by placing the bushing in the middle of the larger rod and sliding the smaller rod through the opening. Please leave at least a six inch overlap at the joint to prevent the rod from drooping or falling.

3. Remove rods from brackets to attach draperies. To attach, feed the rod pocket, tab-top or rings through the rods and then feed the rods back through the brackets.

4. Loosen the set-screws at the base of each finial. If you are attaching a finial to a large diameter rod, you will need to remove the rubber cap on the rod. If you are attaching the finial to a smaller diameter rod, you will need to keep the rubber cap attached to the rod. Place the finial over top of the rod or rubber cap and tighten set-screw to attach the finial to the rod.

5. Ensure the rods and draperies are installed as desired, and then tighten the set-screws in each bracket to prevent rod movement.

**Extension rod available – as a separate item.**

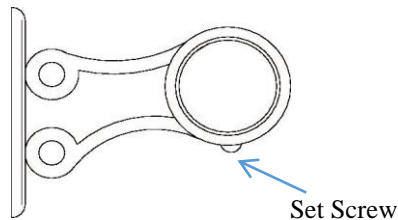

**Rings available:**

#8971 set of 12 with fixed grommets

