






ASSEMBLY INSTRUCTIONS

OF MC-001-LV

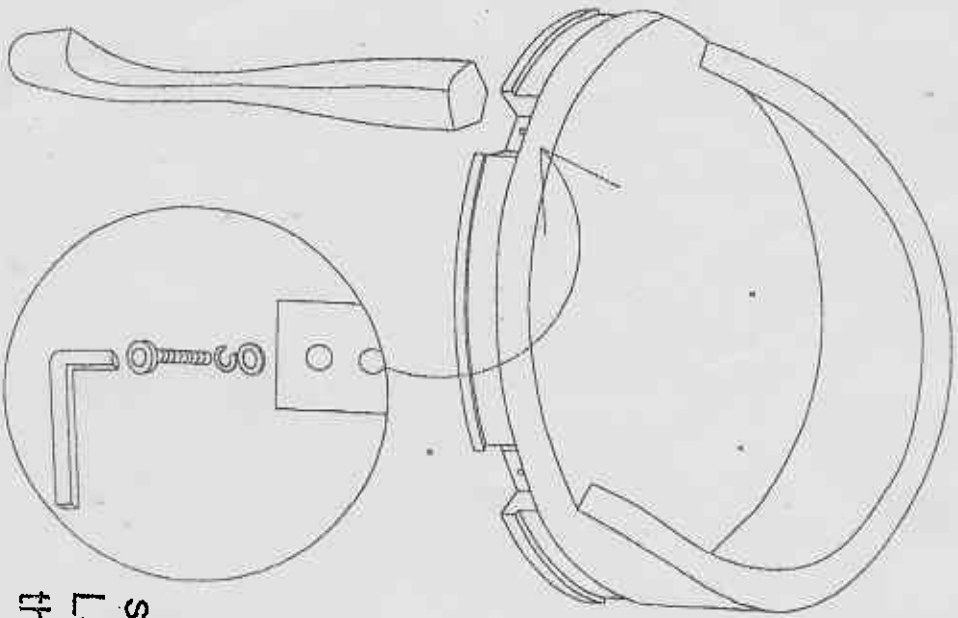

	BOLT	Ø6*60MM	8PCS
	WASHER		8PCS
	LOCK		8PCS
	KEY		1PC

step:
Locate the legs and screw them into the bottom of the seat as shown.

