

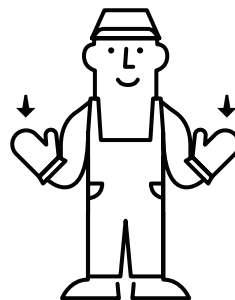
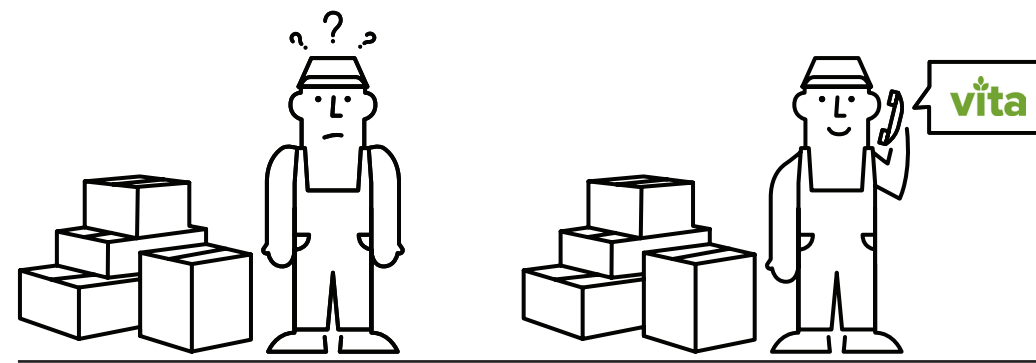
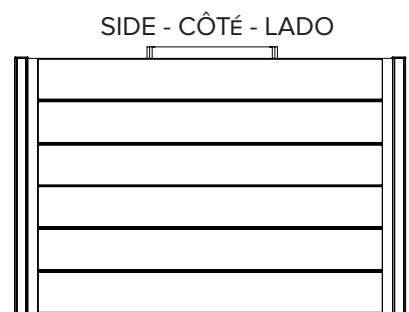


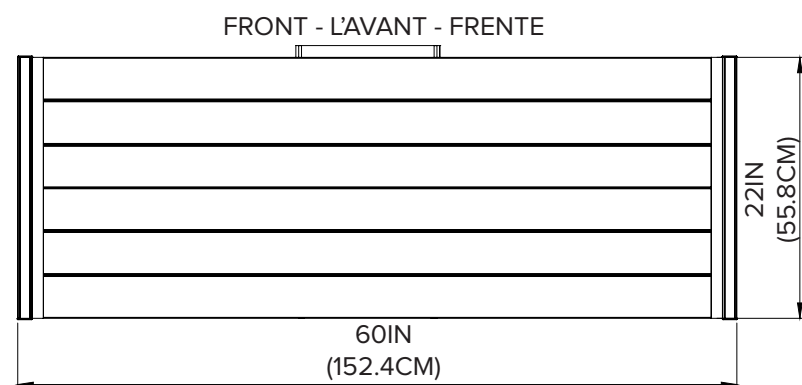

3x5 Keyhole Garden
JARDIN DE TROU DE SERRURE 3X5
JARDÍN DE LA CERRADURA 3X5
VT17502 ESPRESSO/VT17602 SLATE

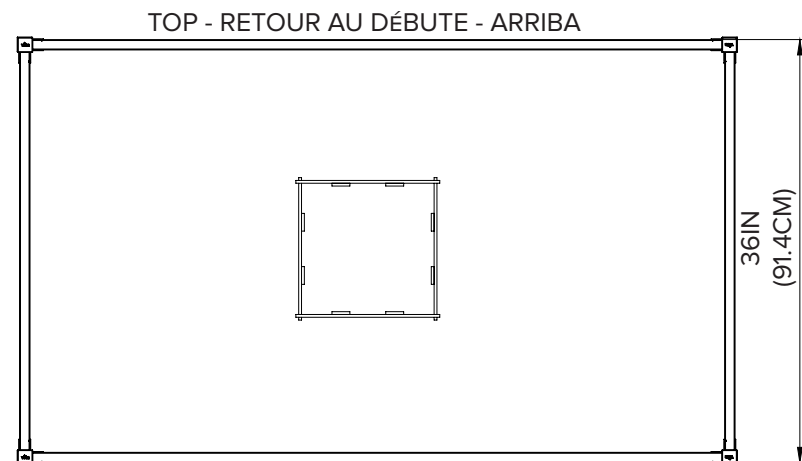

1-844-880-8482

(44) 2038 687160



8: 00 AM - 4: 00 PM EST




WWW.VITAGARDENS.COM



SOS@VITAGARDENS.COM



ASSEMBLY GUIDE
 GUIDE DE MONTAGE
 GUIA DE MONTAJE

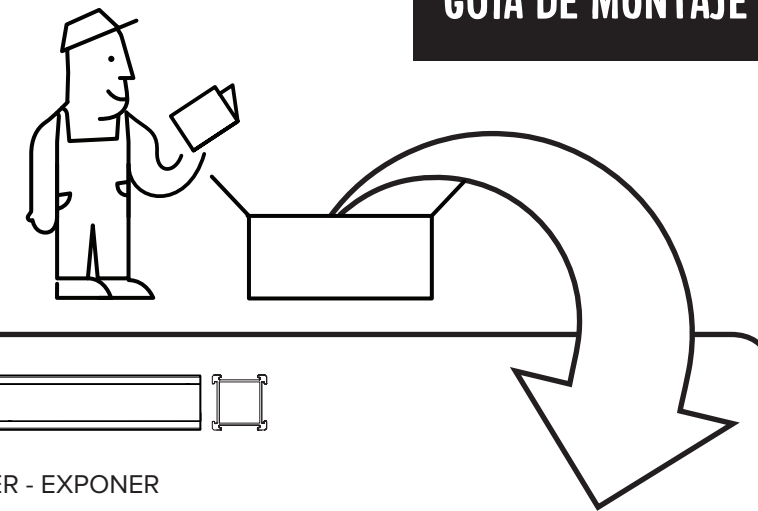

16002
POST - PUBLIER - EXPONER
 X4

16037
C-CHANNEL - CHAÎNE - C-CANAL
 X8







16003
POST CAP
 TETE DE POTEAU
 TAPON
 X8

16015 SLATE /15015 ESPRESSO
BOARD (B) - PLANCHE (B) - TABLA (B)
 X4


16014 SLATE /15014 ESPRESSO
BOARD (A) - PLANCHE (A) - TABLA (A)
 X4

16004 SLATE/17004 ESPRESSO
BASKET PANEL
 PANNEAU DE PANIER
 CESTA PANEL
 X4


16067
LOCKING TAB
 ONGLET DE VERROUILLAGE
 PESTAÑA DE BLOQUEO
 X2

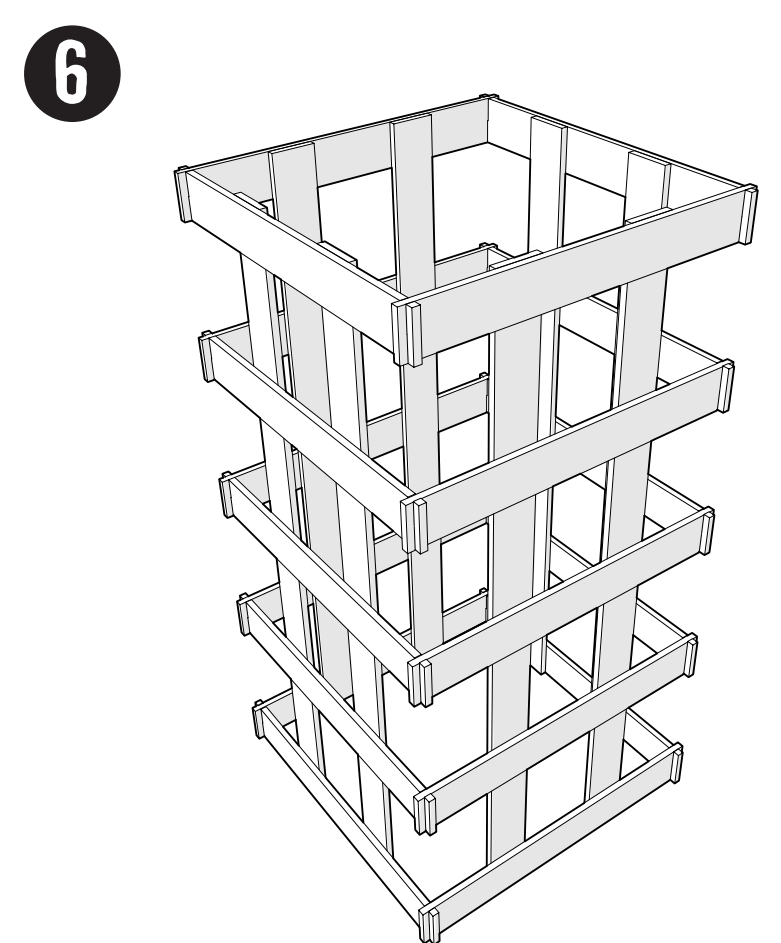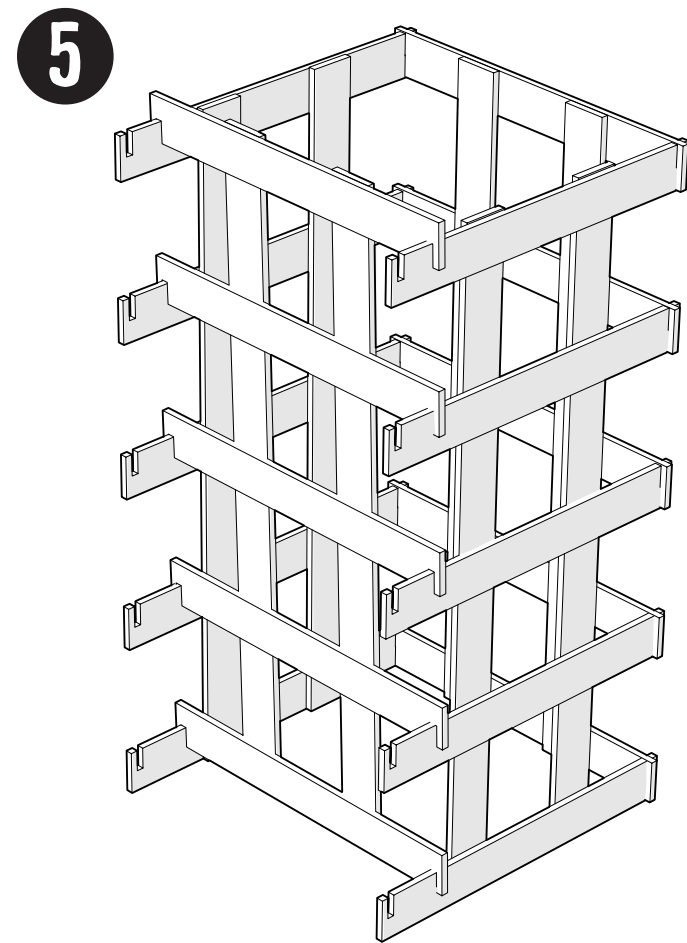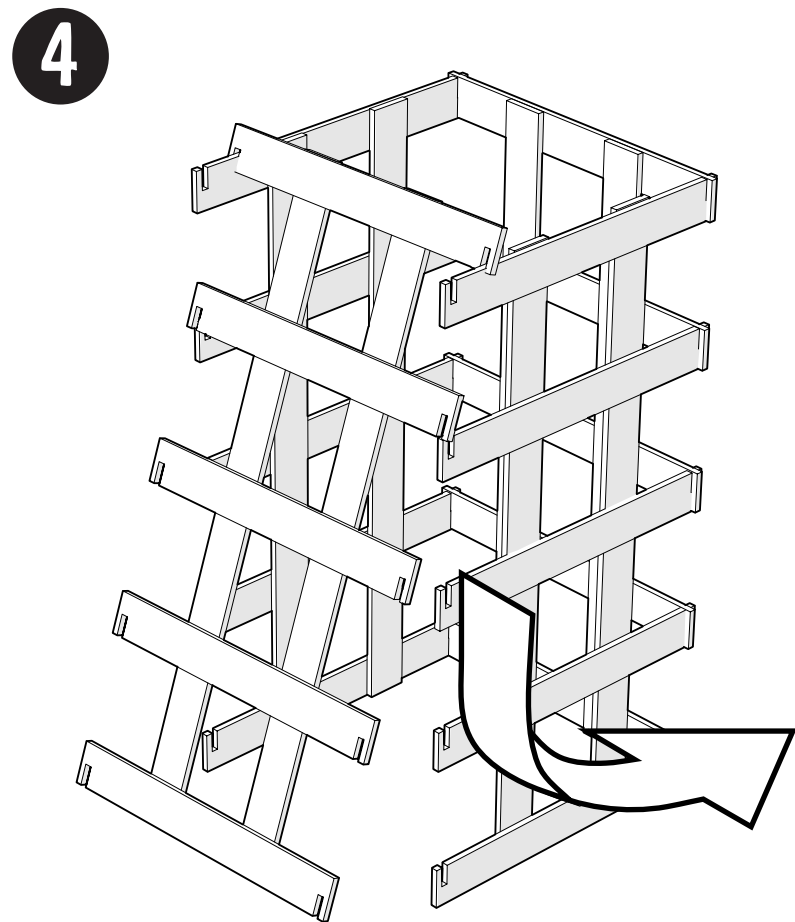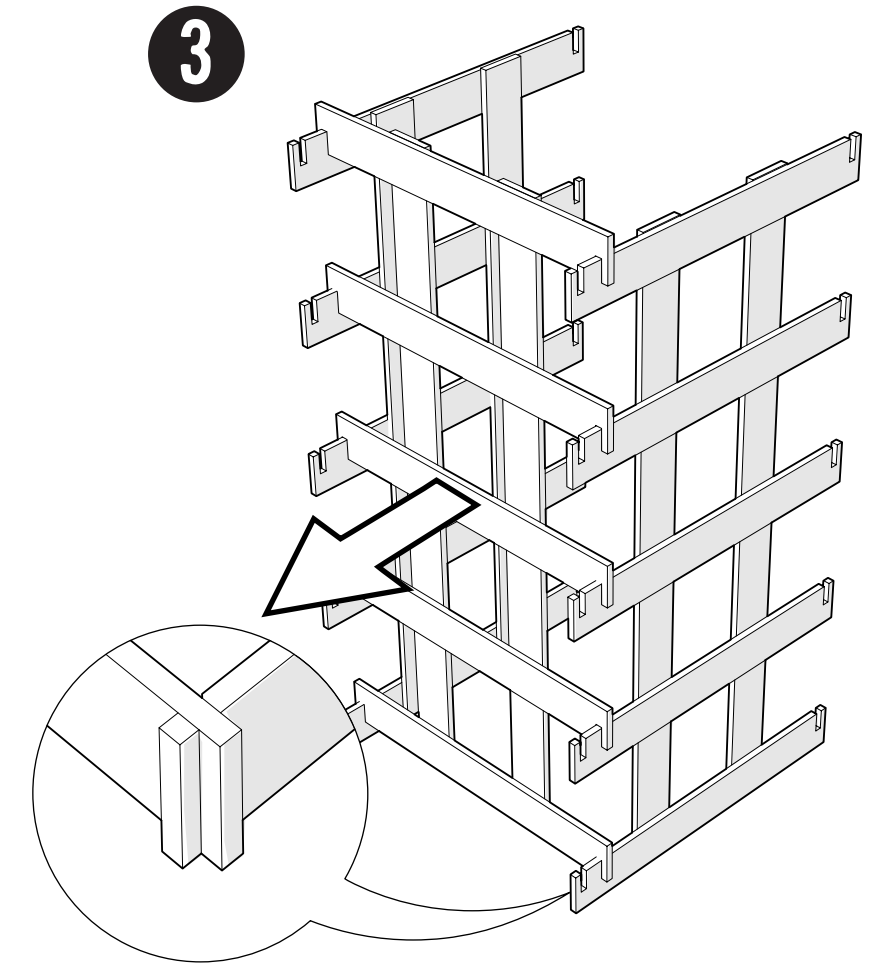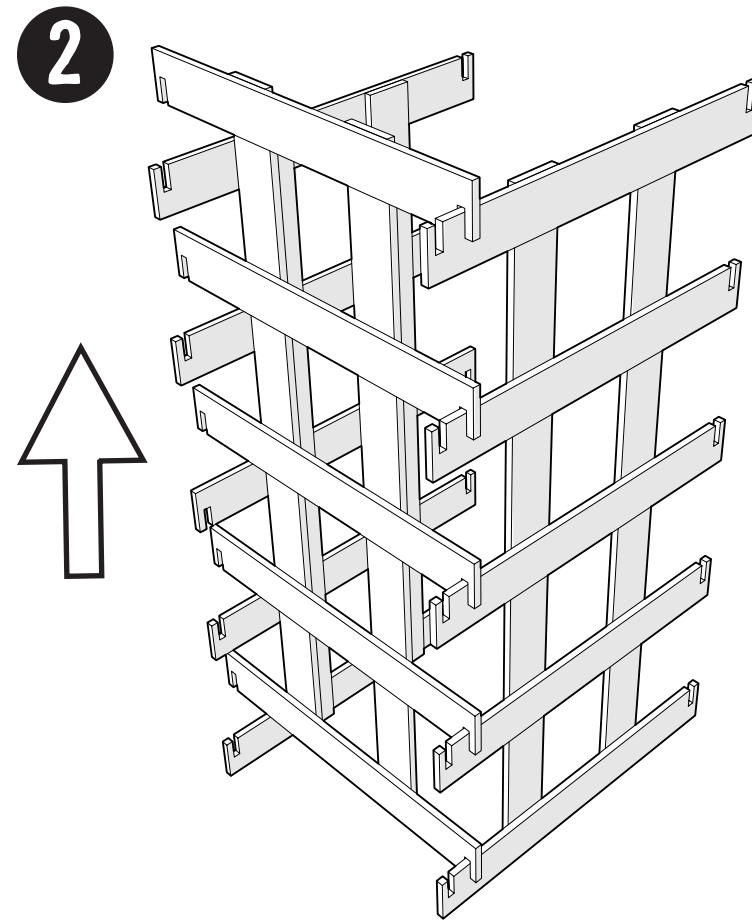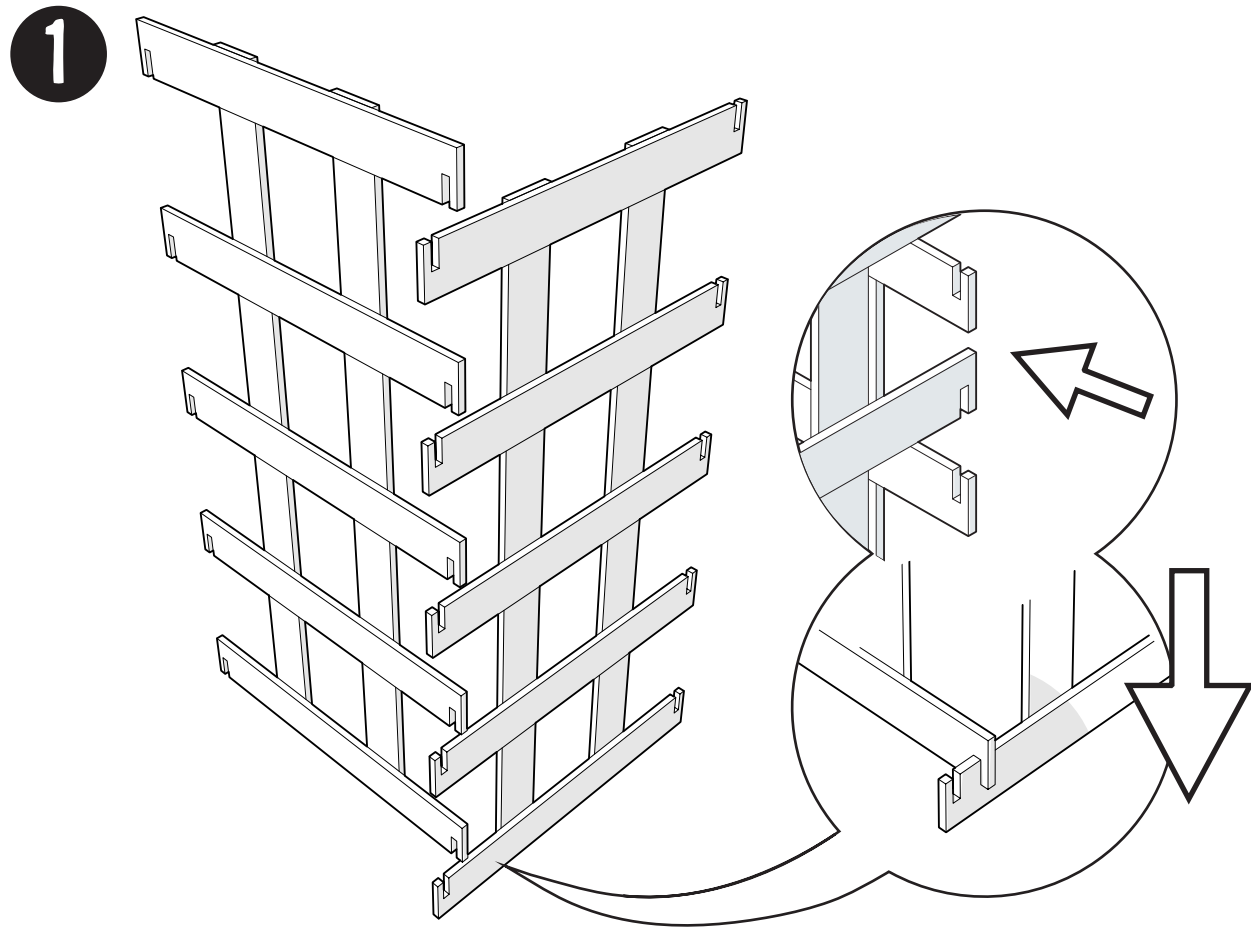


1

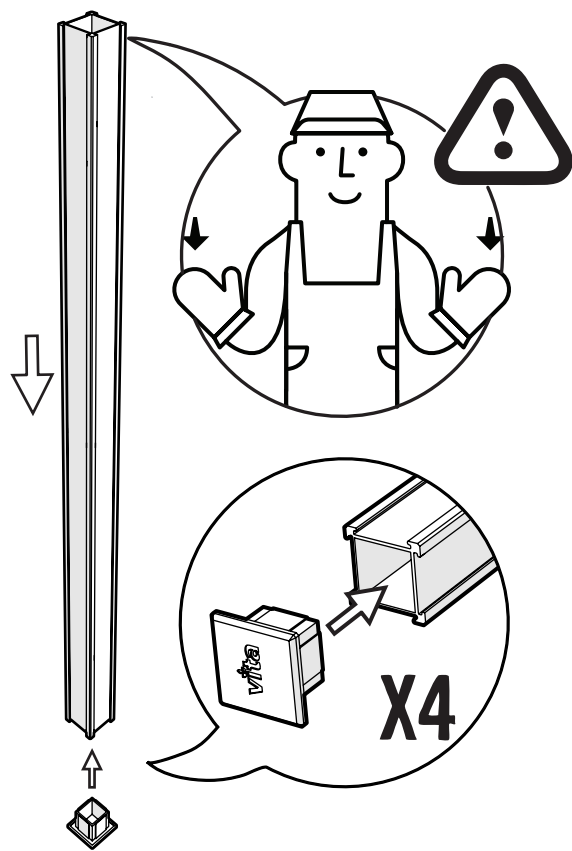


2

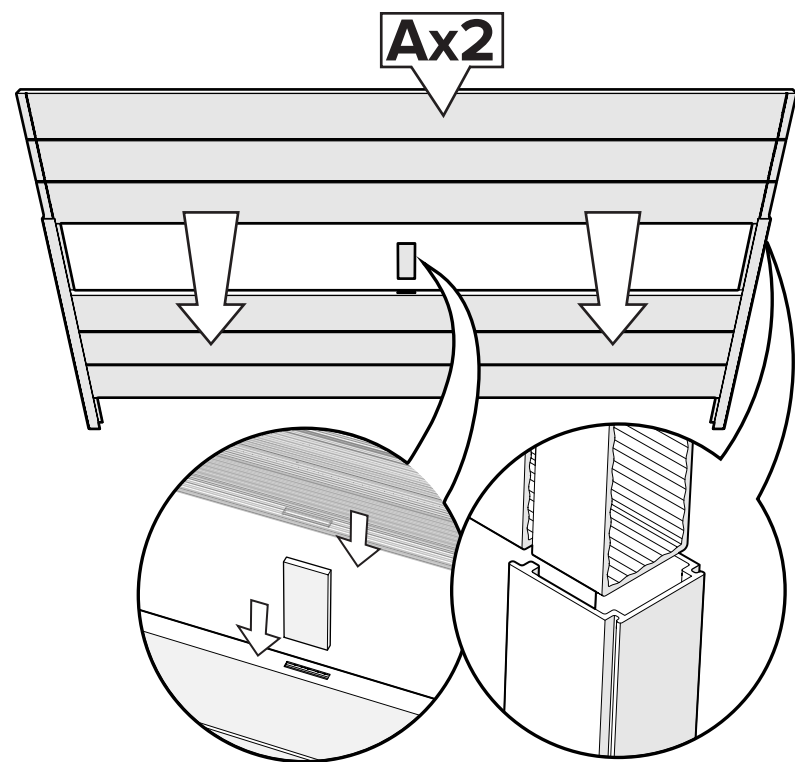


3

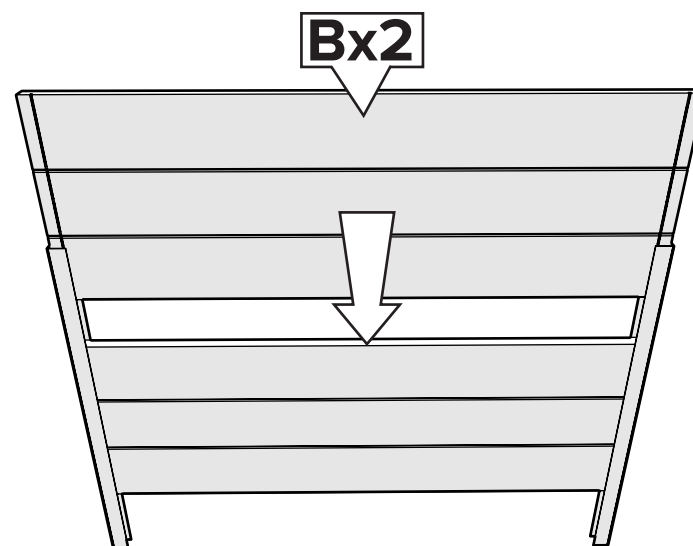


4

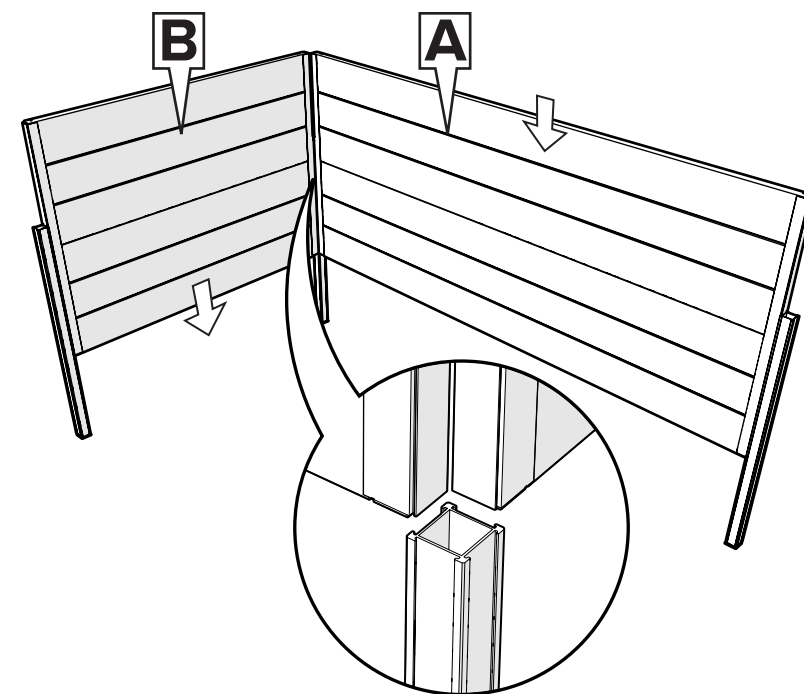


5

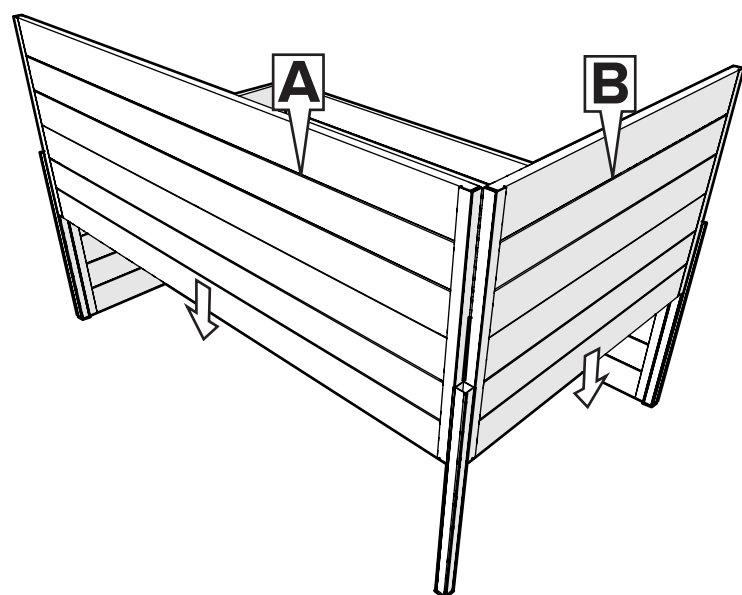

6

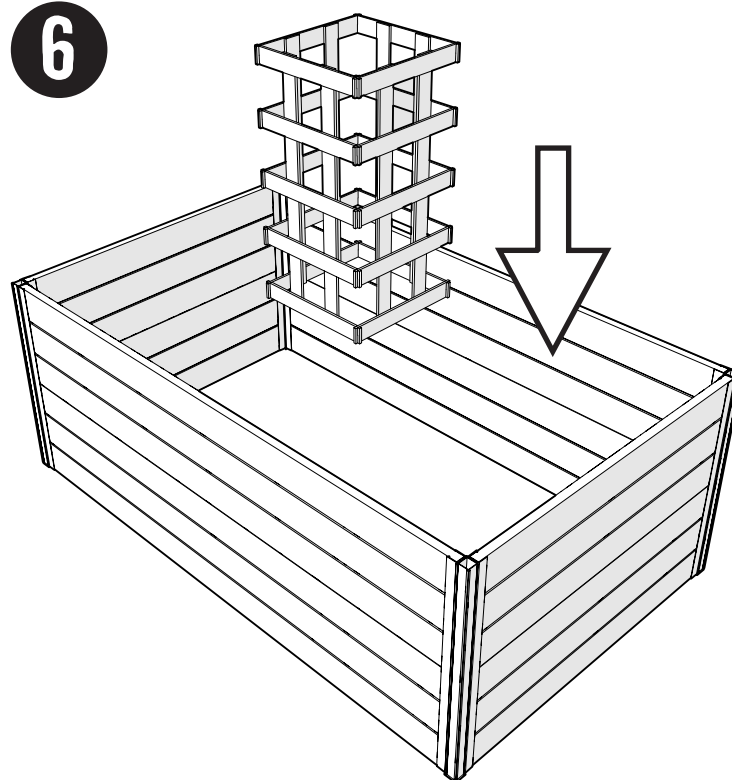


7

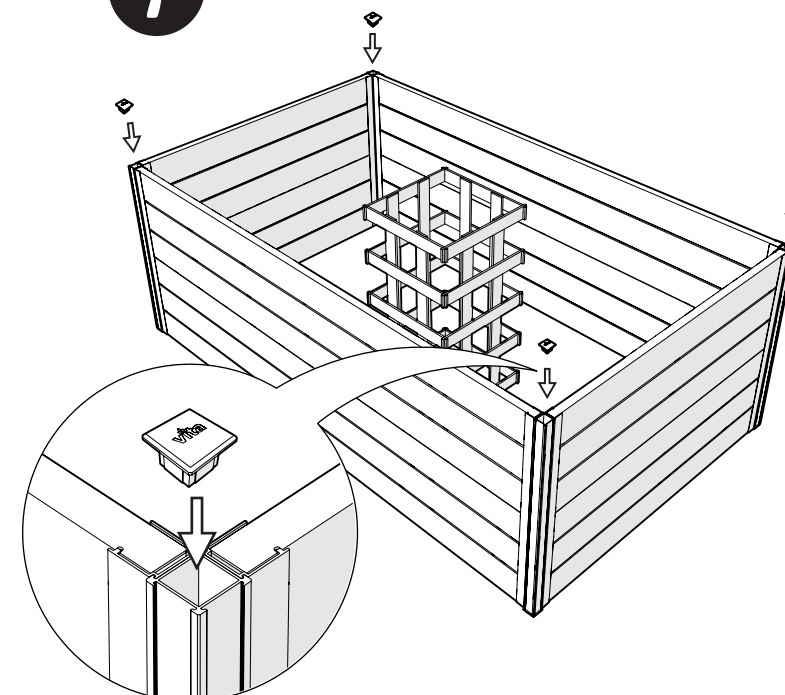


A

FILL WITH SOIL!
MIT ERDE FÜLLEN!
RIEMPI CON TERRA!
REMP LISSEZ-LE DE TERREAU!
ILLENAR CON LA TIERRA!

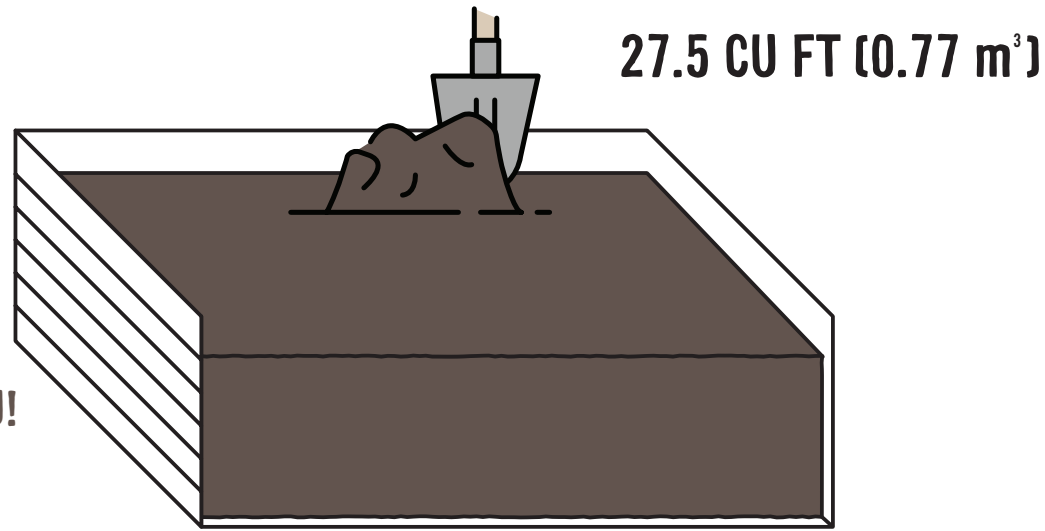

NITROGEN





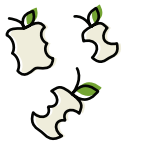


N




B

MAKE YOUR OWN SOIL!
PRODUZIEREN SIE EIGENE ERDE!
PRODUCI LA TUE TERRA!
CRÉEZ VOTRE PROPRE TERREAU!
ICREA TU PROPRIA TIERRA!

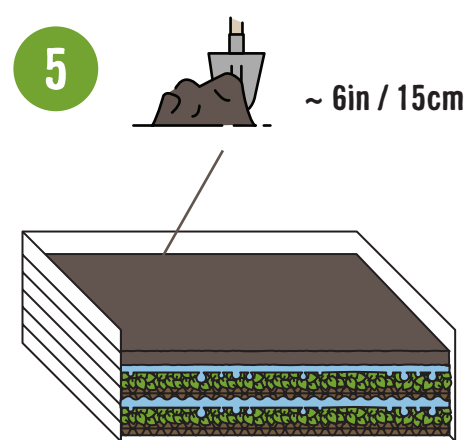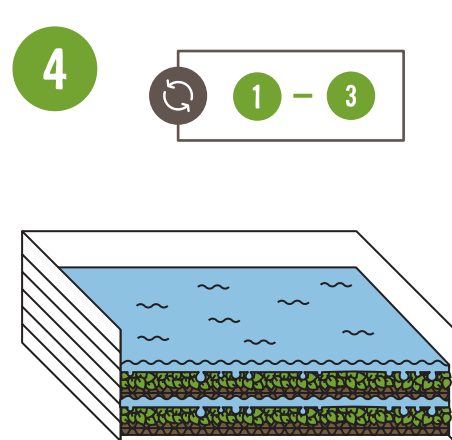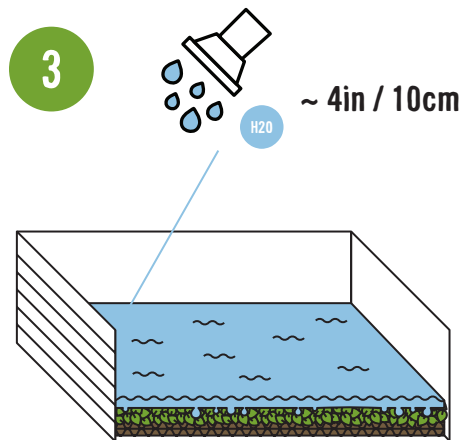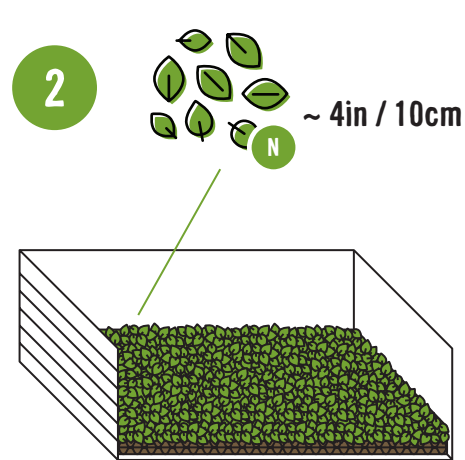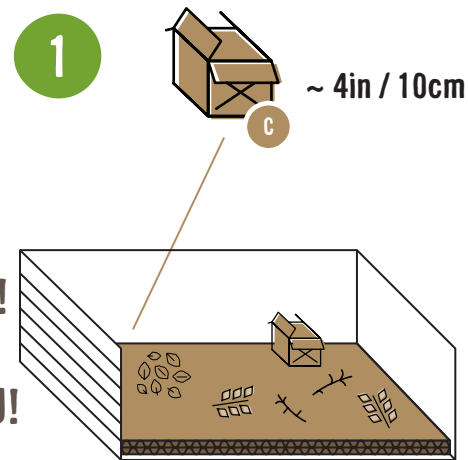

CARBON

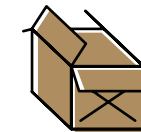

C

