




ASSEMBLY INSTRUCTIONS

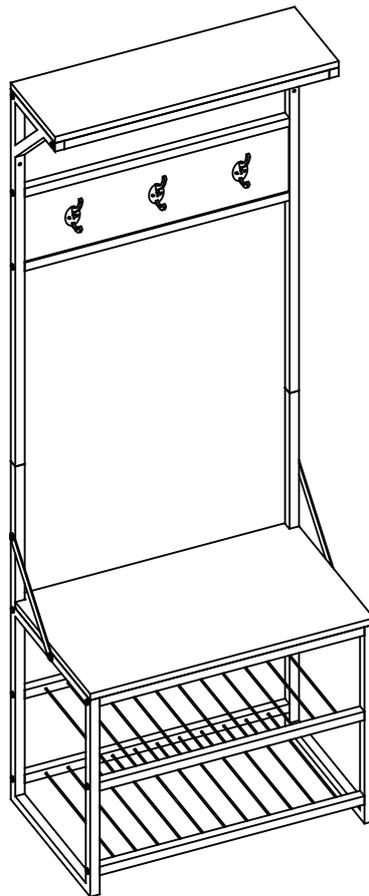

RiverRidge® Afton Metal Frame Hall Tree

ITEM #:16-036

ADULT ASSEMBLY REQUIRED

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

WARNING SEE FULL WARNING ON PAGE 2

Young children can be seriously injured or killed if furniture tips over.
Don't use this item for a TV stand or place heavy objects on top of item.
Always use angle-braces or anchors to secure furniture to the wall.

THIS SHELF UNIT WILL HOLD UP TO 15 POUNDS PER SHELF AND 5 POUNDS PER HOOK FOR A TOTAL OF 45 POUNDS. BENCH SEATING WEIGHT CAPACITY IS 200 POUNDS. DO NOT LOAD SHELVES WITH MORE THAN 15 POUNDS, HOOKS WITH MORE THAN 5 POUNDS OR SEATING WITH MORE THAN 200 POUNDS. OVERLOADING WITH MORE THAN 15 POUNDS PER SHELF, 5 POUNDS PER HOOK OR 200 POUNDS PER SEATING MAY CAUSE DAMAGED TO THE SHELF UNIT OR SERIOUS INJURY OR DEATH.




WARNING

SERIOUS OR FATAL INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves**
- **Do not set TV's or other heavy objects on the top of this product**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**

PARTS LIST

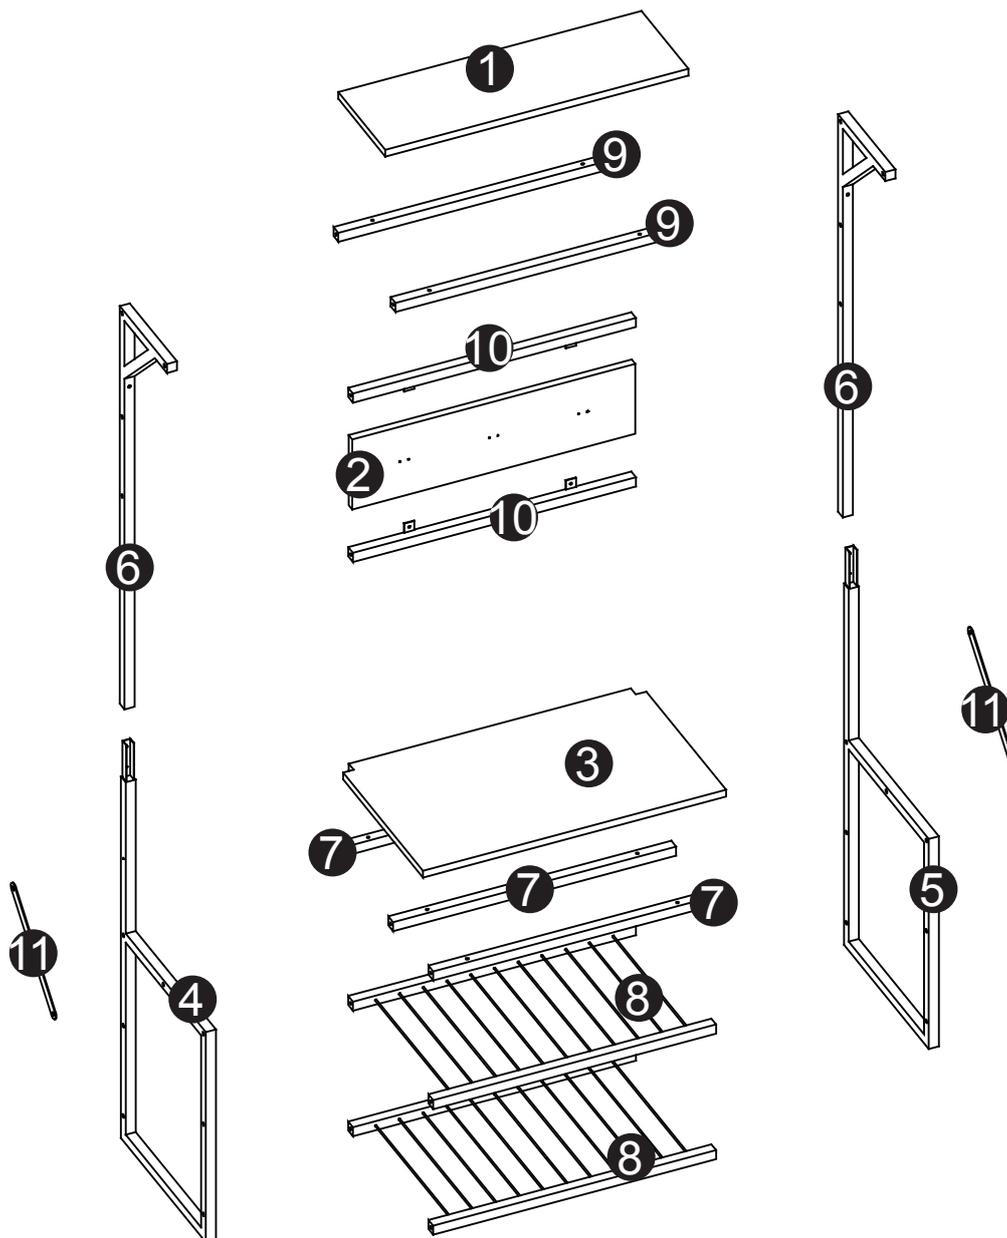

NO	QTY	DESCRIPTION
1	1PC	Top Board
2	1PC	Back Panel
3	1PC	Shelf
4	1PC	Lower Left Metal Side Frame
5	1PC	Lower Right Metal Side Frame
6	2PCS	Upper Metal Side Frame
7	3PCS	Metal Cross Bar
8	2PCS	Bottom Metal Frame
9	2PCS	Metal Cross Bar
10	2PCS	Metal Cross Bar
11	2PCS	Support Bar


PARTS LIST

NO	PARTS	QTY	DESCRIPTION
A		22PCS	Machine Screw (6x35mm)
B		6PCS	Screw (4x12mm)
C		6PCS	Screw (3x12mm)
D		3PCS	Coat Hook
E		4PCS	Machine Screw (6x15mm)
F		10PCS	Machine Screw (6x30mm)
G		2PCS	Plastic Anchor
I		2PCS	Screw (4x55mm)
J		2PCS	Screw (4x60mm)

**TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED)
THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY
DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED**


To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.

STEP 1

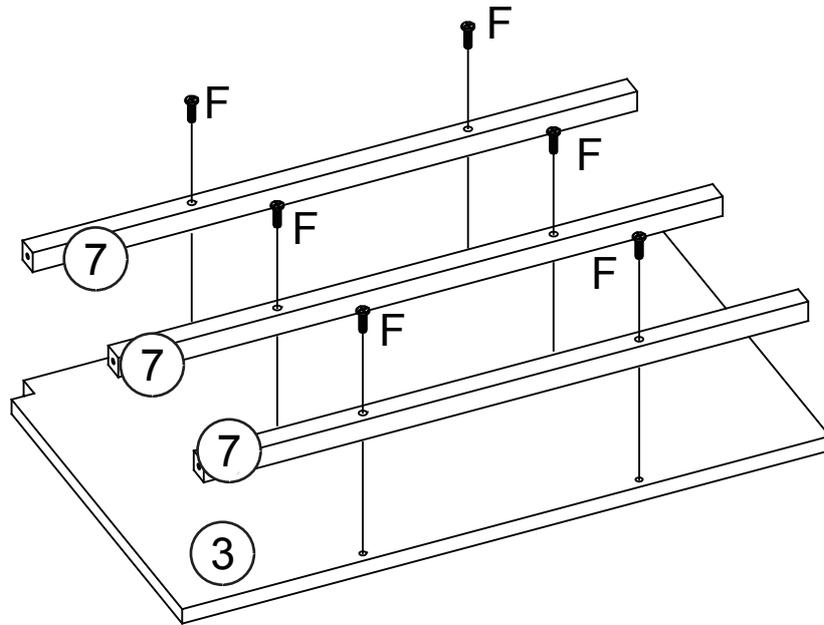


1. Attach 3 metal cross bars (7) to shelf (3) by inserting 6 machine screws (F) through holes on metal cross bars (7), then tighten to shelf (3).

STEP 2

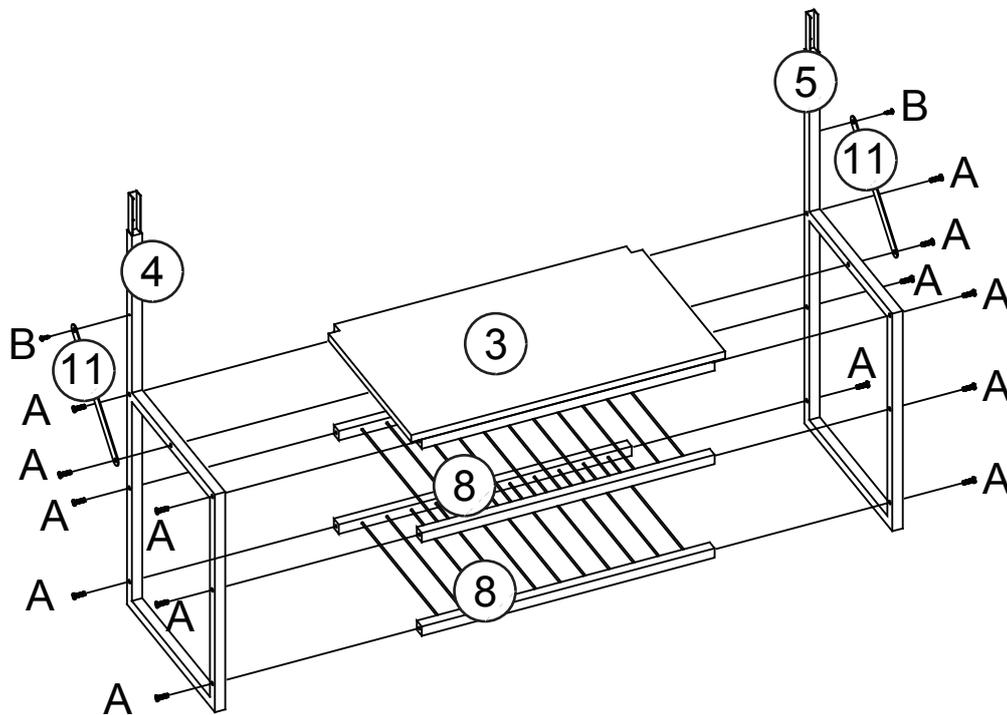


1. Attach lower left side frame (4) and support bar (11) to shelf (3) and bottom metal frames (8) by inserting 7 machine screws (A) and screw (B) through holes on lower left side frame (4) and support bar (11), then tighten to shelf (3) and bottom metal frame (8).
2. Attach lower right side frame (5) and support bar (11) to shelf (3) and bottom metal frames (8) by inserting 7 machine screws (A) and screw (B) through holes on lower right side frame (5) and support bar (11), then tighten to shelf (3) and bottom metal frame (8).

STEP 3

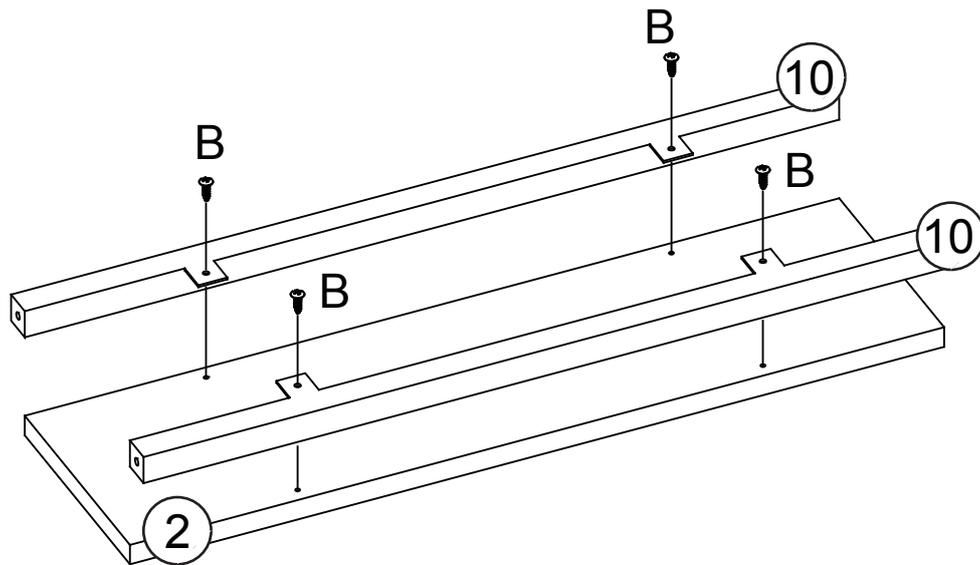


1. Attach 2 metal cross bars (10) to back panel (2) by inserting 4 screws (B) through holes on metal cross bars (10), then tighten to back panel (2).

STEP 4

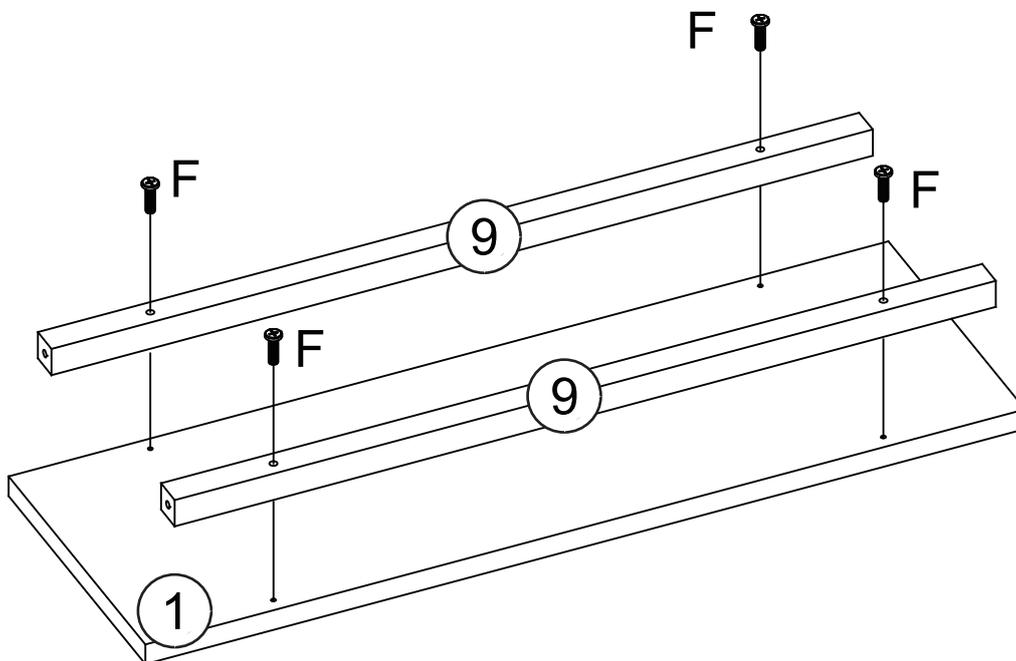


1. Attach 2 metal cross bars (9) to top board (1) by inserting 4 machine screws (F) through holes on metal cross bars (9), then tighten to top board (1).

STEP 5

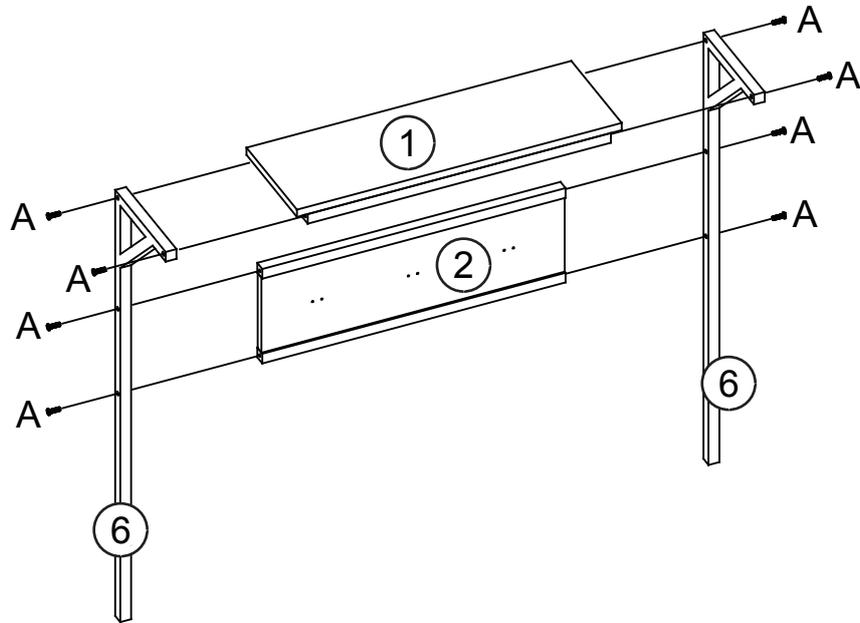


1. Attach 2 upper metal side frames (6) to top board (1) and back panel (2) by inserting 8 machine screws (A) through holes on upper metal side frames (6), then tighten to top board (1) and back panel (2).

STEP 6

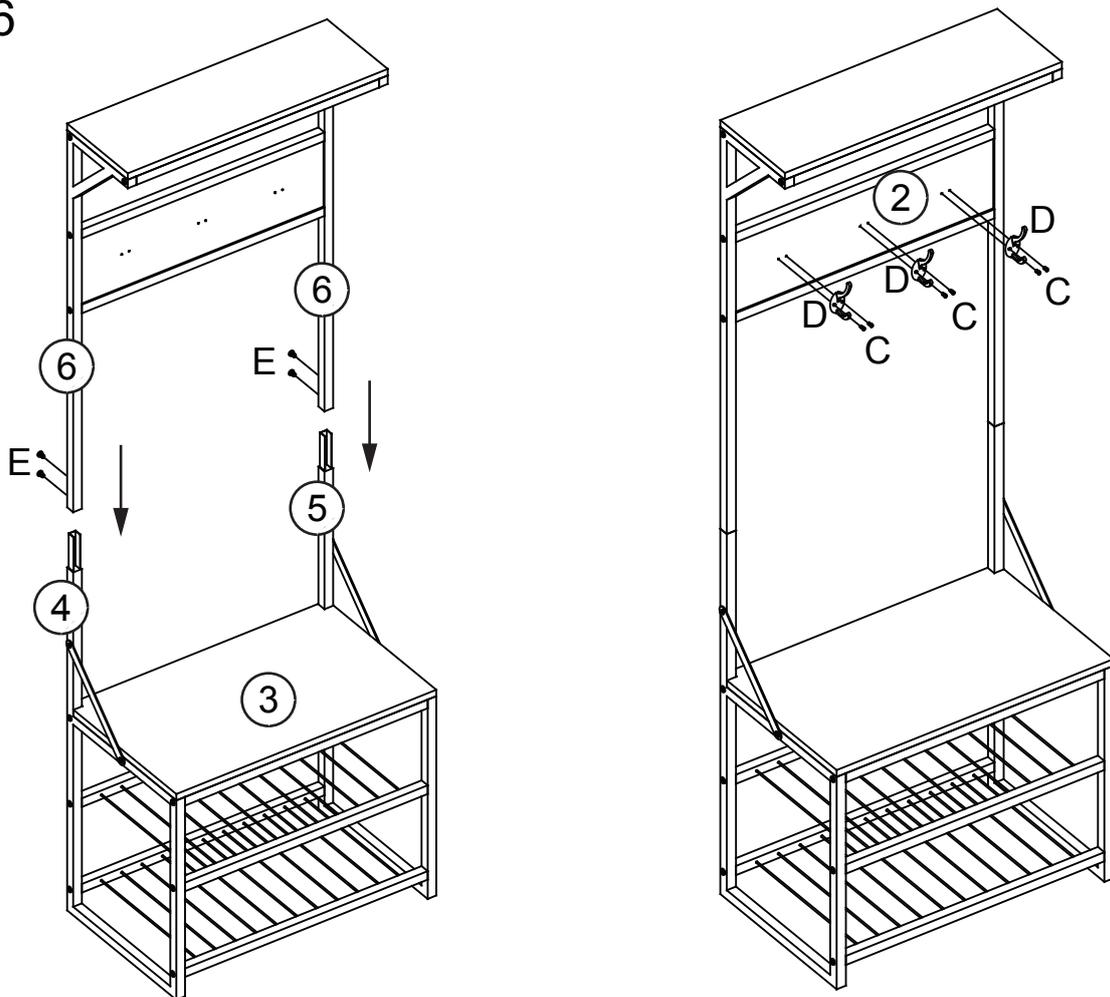

1. Place upper unit onto lower unit. Insert 4 machine screws (E) through holes on metal side frames (6), then tighten to secure upper unit to lower unit.
2. Attach 3 hooks (D) to back panel (2) by inserting 6 screws (C) through holes on hooks (D), then tighten to back panel (2).

STEP 7

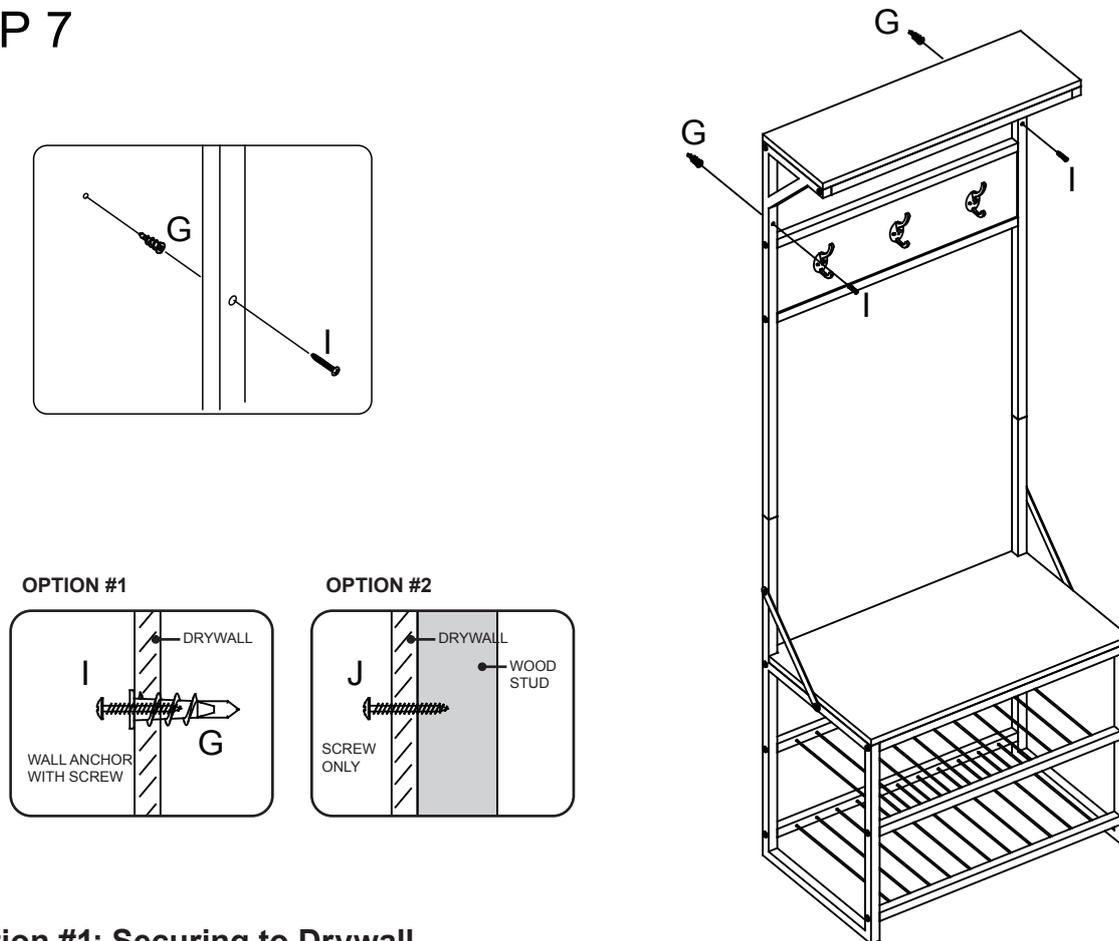

Option #1: Securing to Drywall

1. Position hall tree against wall in desired location. According to position of holes on metal side frames (6), using a pencil or part (I) screw, make 2 small marks on wall. Move hall tree away from the wall and screw 2 plastic anchors (G) into wall on pencil/screw marks.
2. Place hall tree against wall, insert 2 screws (I) through holes on side frames, then tighten to plastic anchors (G).

Option #2: Securing to Drywall and Wood Stud

1. Position hall tree against wall in desired location. Insert 2 screws (J) through holes on metal side frames (6), then tighten through drywall and into wood stud.

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.

WARNING  Please make sure your item is secured to the wall, per assembly instructions.


CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

IMPORTANT:

Keep assembly instructions for future reference.

Enjoy Your New RiverRidge® Hall Tree!

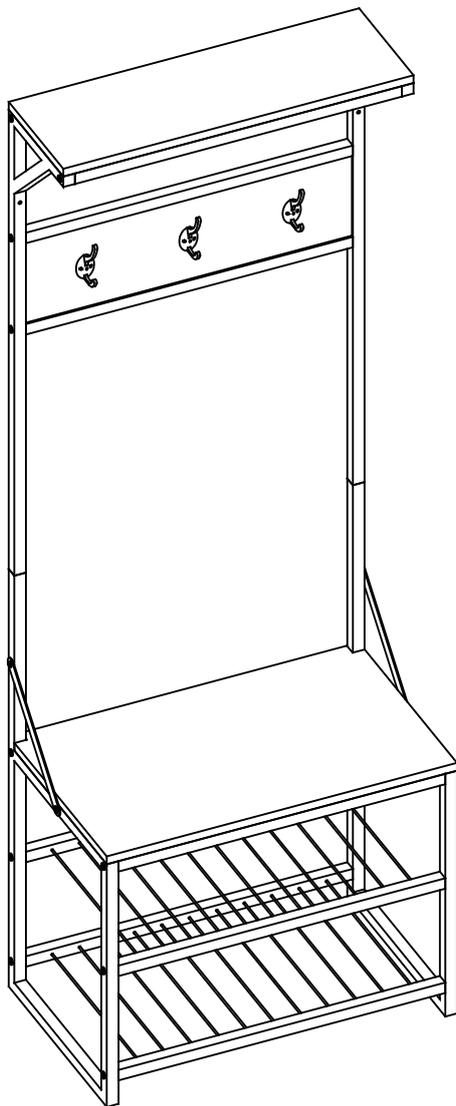

Thank you for purchasing this RiverRidge® Home item. We hope you enjoy it and consider purchasing other RiverRidge® items.

To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.



RiverRidge® is a registered trademark of Sourcing Solutions, Inc., Hudson, WI 54016