

## DESIGN


# PURCHASE CONSTRUCT


# ENJOY

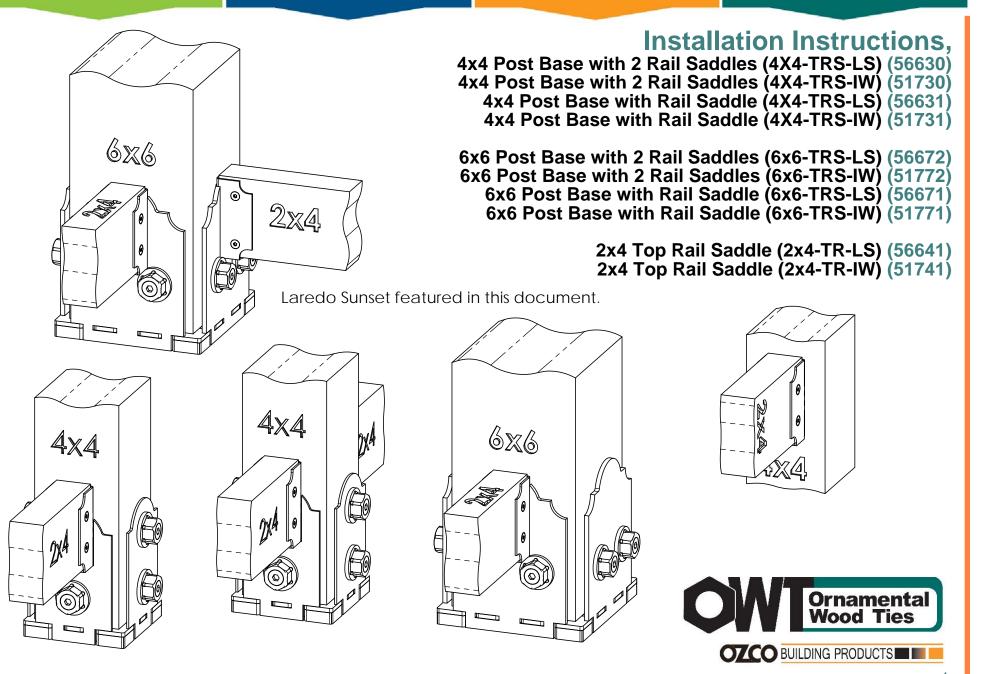

Installation Instructions, Rail Saddles

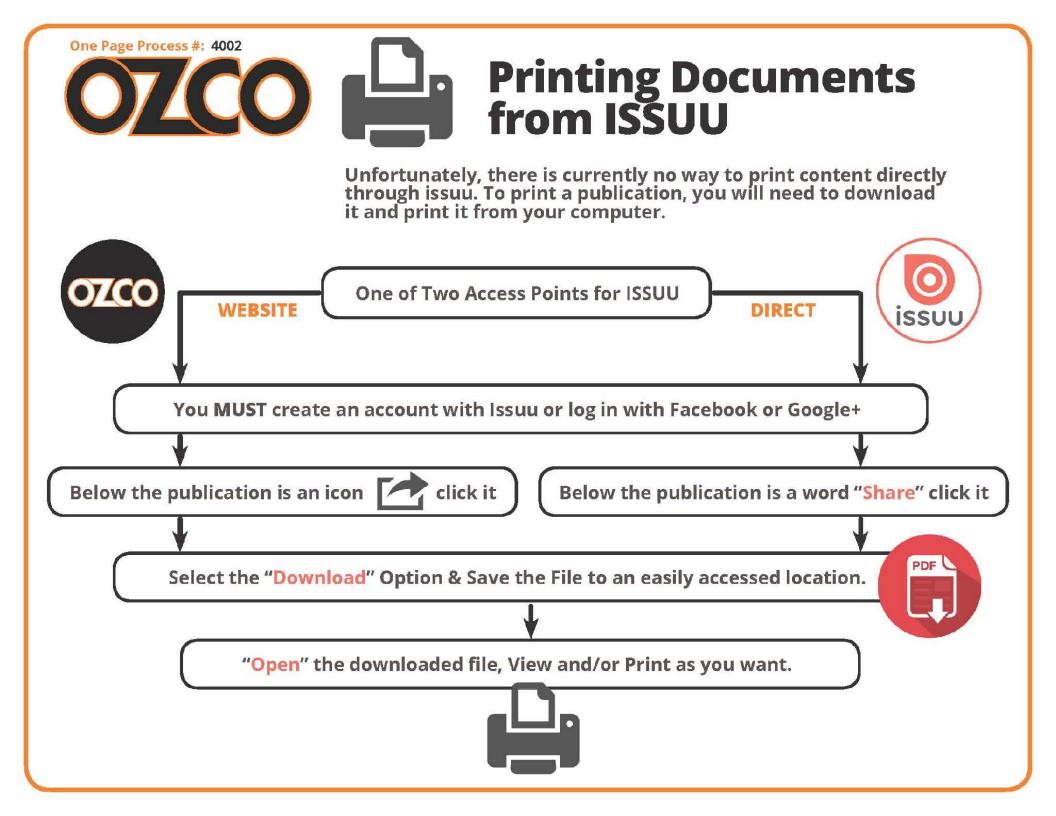


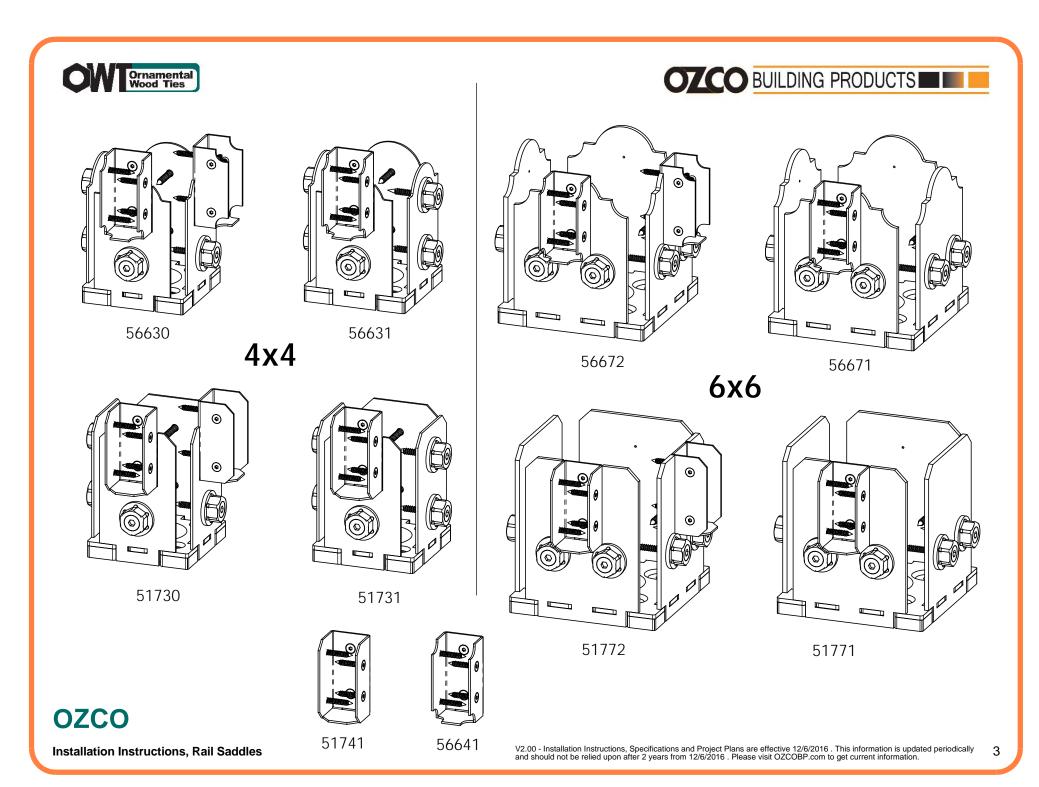

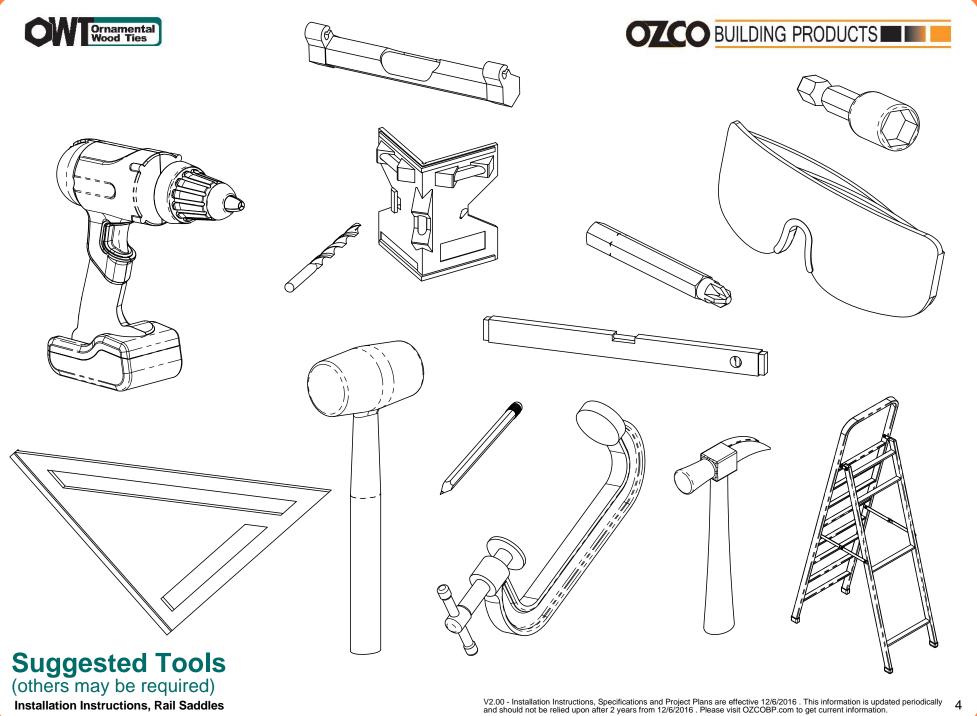







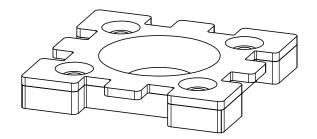

Mount Base to Surface

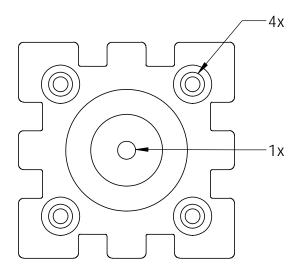

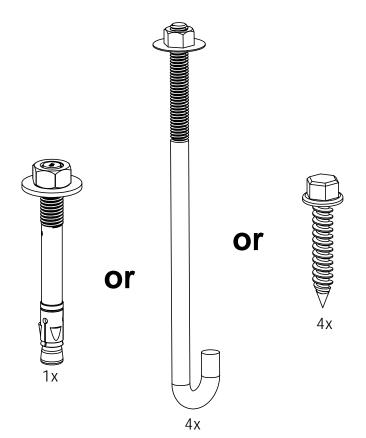


# Base Mounting-56630 & 56631 (select fastener that suits your installation)

Installation Instructions, Rail Saddles






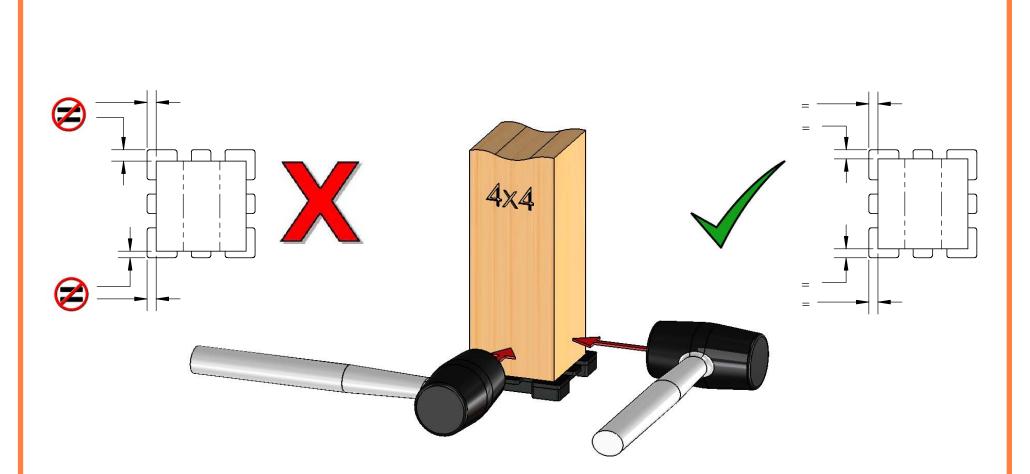


#### step 1

Installation Instructions, Rail Saddles

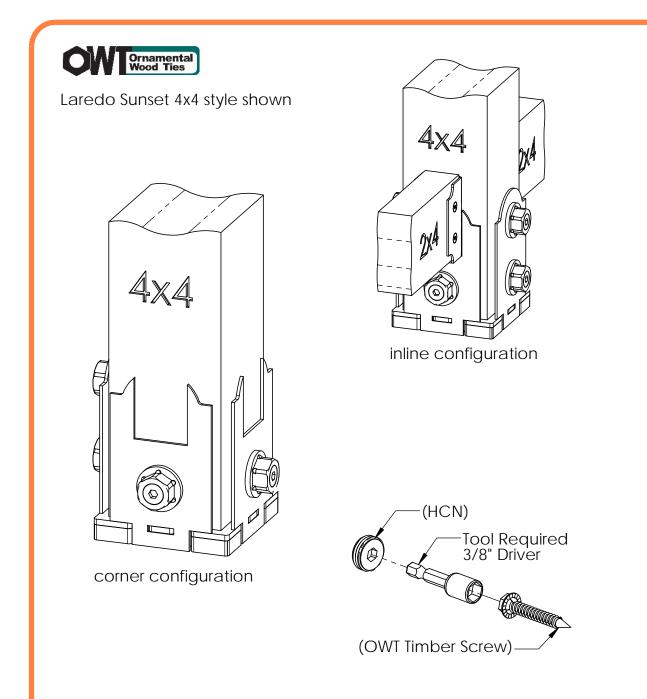

OZCO BUILDING PRODUCTS

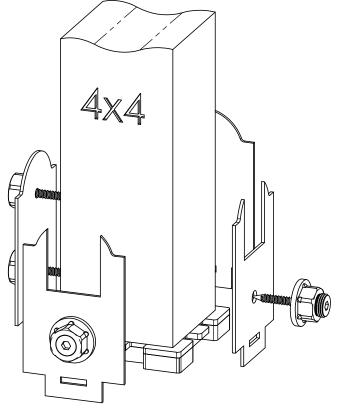



### step 2 5XX30 & 5XX72

Installation Instructions, Rail Saddles





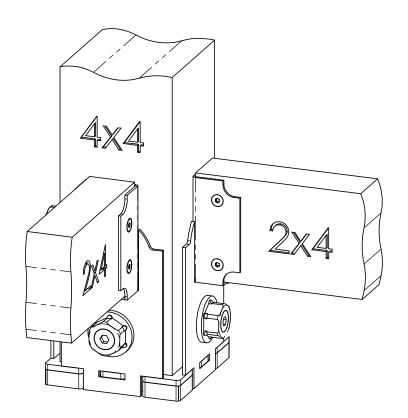

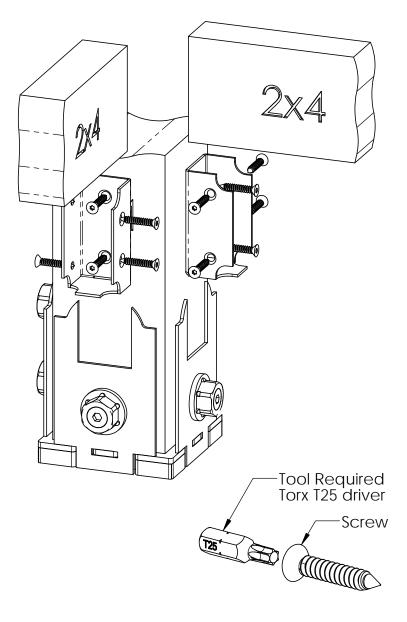


#### step 3 5XX30 & 5XX72

Installation Instructions, Rail Saddles





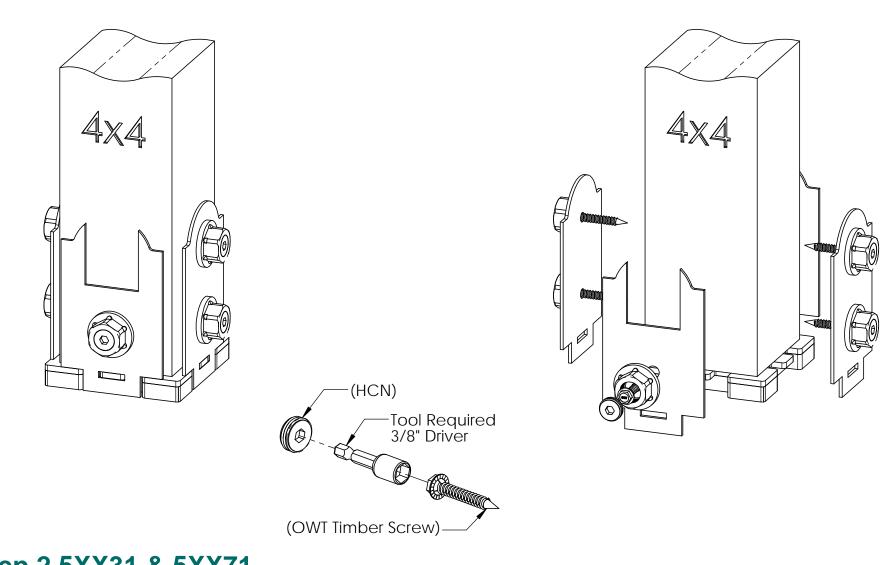



### step 2 5XX31 & 5XX71


Installation Instructions, Rail Saddles





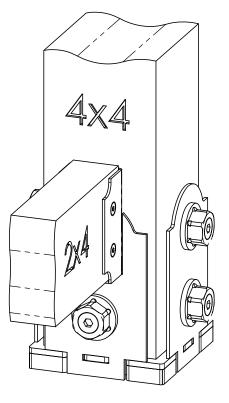

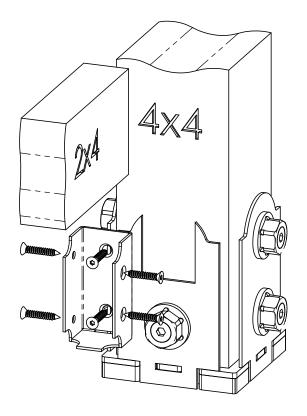


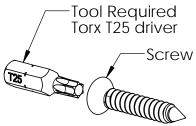

#### step 3 5XX31 & 5XX71


Installation Instructions, Rail Saddles



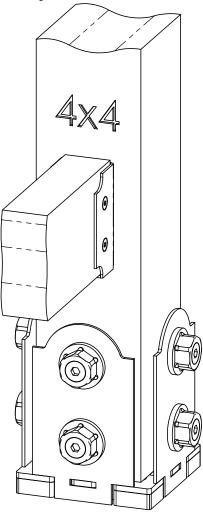

shown with 56607 (sold separately)




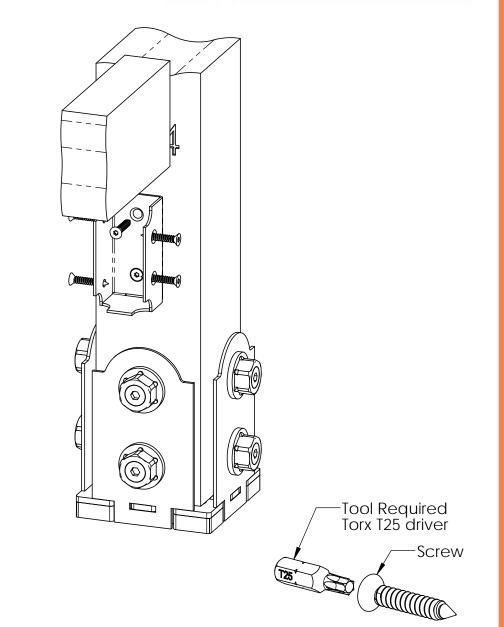

Installation Instructions, Rail Saddles




### 

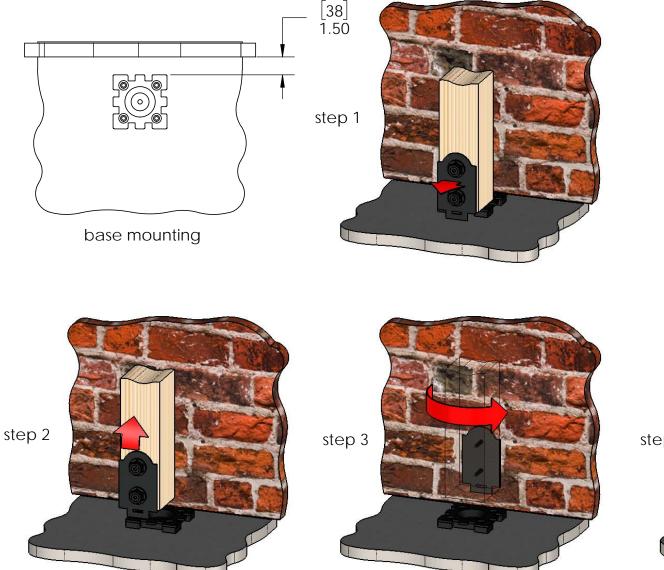

additional instructions


- center post as shown in ٠
- previous steps install 1 compression plate with fasteners
- remove, reposition & reinstall post/compression plate as shown with <u>plate facing wall</u> complete assembly as shown

this procedure applies to all OZCO Post Bases & Post Anchors utilizing compression plates (56607 shown)

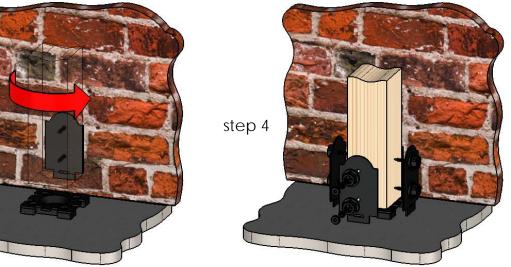


### **Special Instructions-mounting next to wall**

Installation Instructions, Rail Saddles

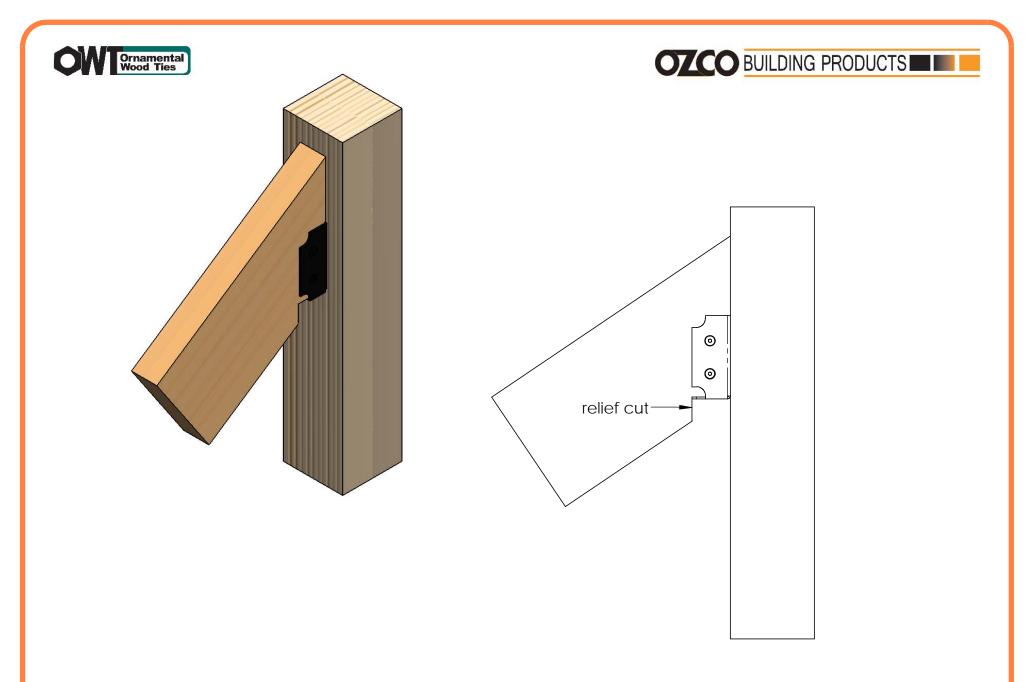

#### Installation Idea's-5XX41


Installation Instructions, Rail Saddles

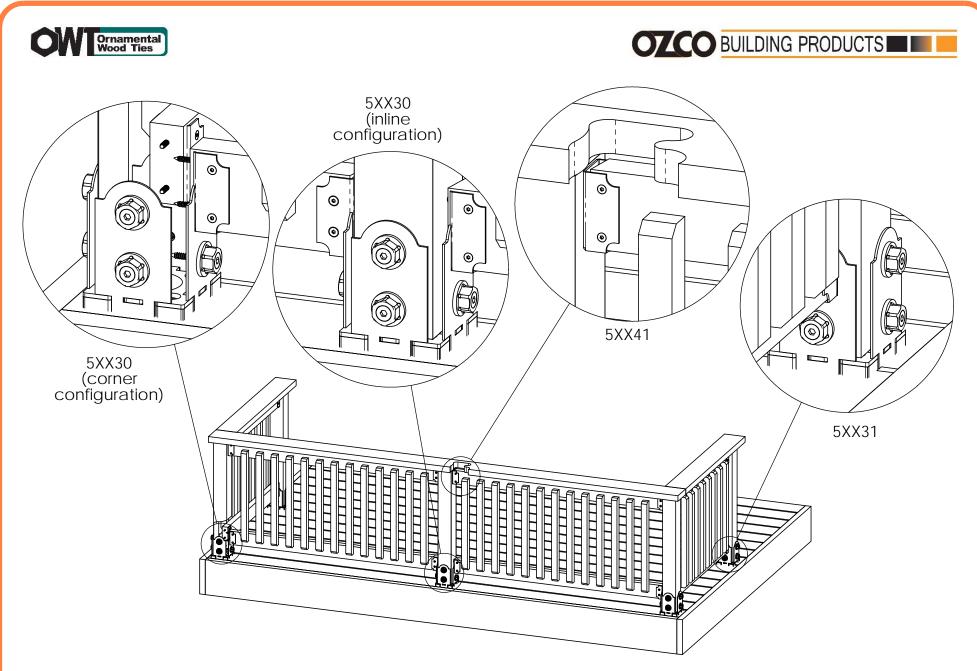

#### **Porch standalone**

#### Laredo Sunset 4x4 style shown


Installation Instructions, Rail Saddles

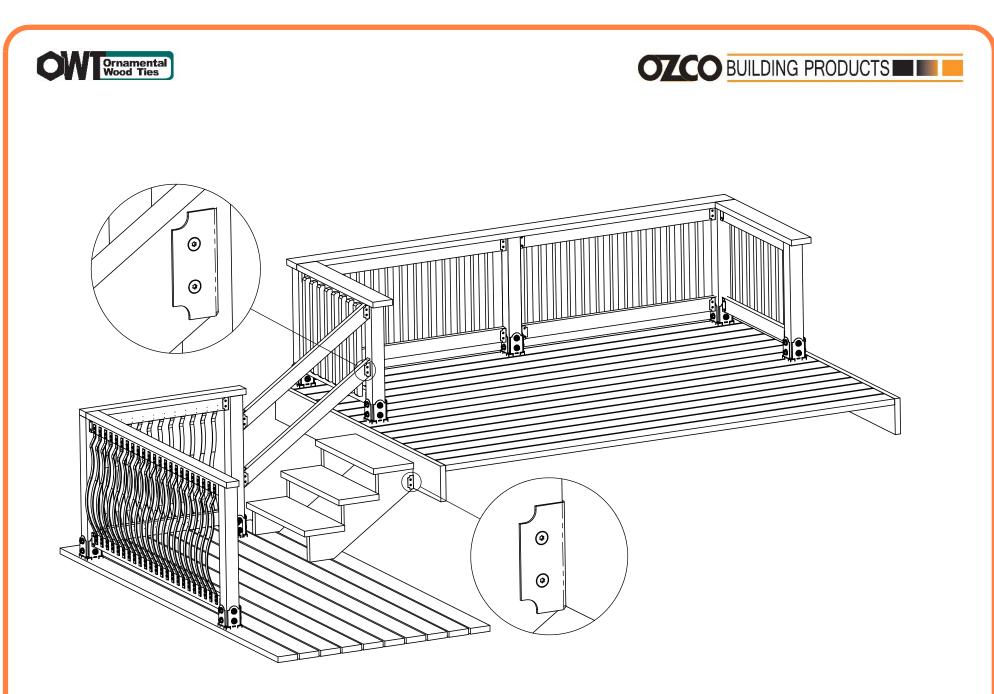

#### **Multi-level**

#### Laredo Sunset 4x4 style shown

Installation Instructions, Rail Saddles

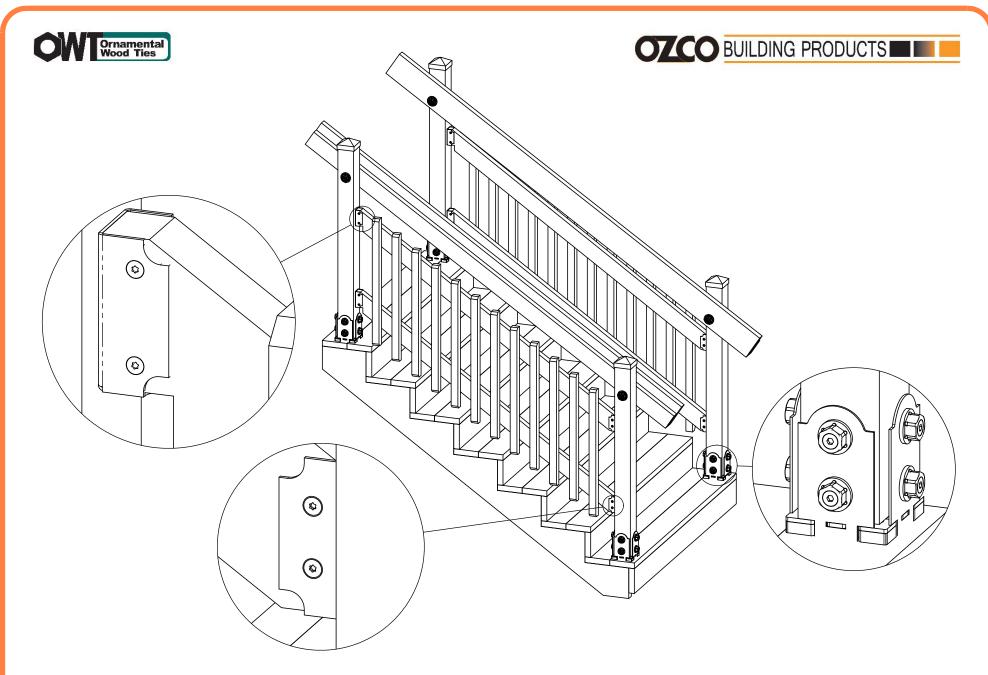

#### **Stairs**

#### Laredo Sunset 4x4 style shown

Installation Instructions, Rail Saddles