


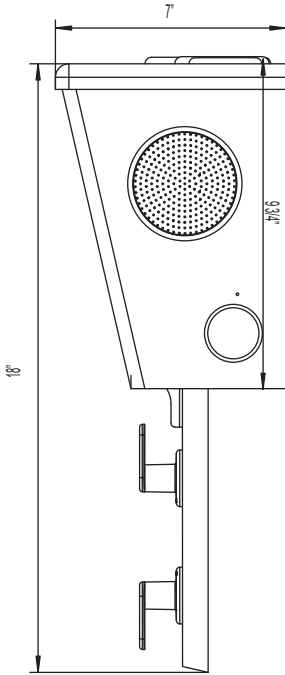







installation instructions

Collection: Vanity Valet Boutique Item Code: VVB

1 Included accessories



Item No.	Description	Material	Qty.	Use with
ACHR-50		Zinc	3	3/4" #8 x 2"
SCR8FH2		Zinc	3	2" Anchor
TB00102		Stainless Steel	1	3" Appliance holder
TB00101		Stainless Steel	2	2" Appliance holder
TB00103		Stainless Steel	1	1.5" Appliance holder
RL2512		PC	1	12" Dowel and 1 1/4" screw
PW0105		Misc	1	Mounts using 4 #6 1/2" screws
TMP010		Paper	1	8.5"x11" Wall

2

- Carefully review instructions prior to assembly.
- Required tools: Phillips head screwdriver or drill.
 - Save these instructions for future reference.


WARNING:

POWERSTRIP MUST BE PLUGGED INTO A GFCI (GROUND FAULT CIRCUIT INTERRUPTER) PLUG. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY AND/OR DAMAGE TO THE UNIT.

SAFETY WARNING: STAINLESS STEEL TUBES AND CAP CAN BECOME VERY HOT DEPENDING ON HOW LONG A HOT TUBE IS LEFT INSIDE. PARTICULAR CARE SHOULD BE TAKEN TO AVOID TOUCHING HEATED METAL SURFACES.

3

- Locate the wall you wish to use for mounting the Boutique (VVB).
- Take the mounting template and tape it to the location for the VVB.
- Determine if any of the 3 holes hit a stud.
 - If yes, do not use a drywall screw for that particular hole. Instead, pre-drill and insert a wood screw for that location. Continue to step 4.
 - If no, continue to 4.
- Use a pencil or tapper to pierce the paper and mark the three holes for the dry wall screws.
- Remove template and add each anchor to identified screw hole:

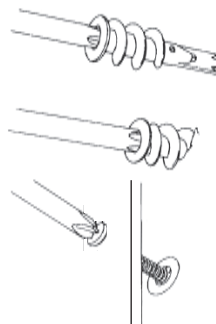

- Place #2 Phillips screwdriver into recess of the anchor.
- Press into drywall while turning the anchor clockwise until it is sealed flush with the wall.
- Place VVB in position, over installed anchor. Insert screw with screwdriver. Tighten VVB in place.
- Repeat this process for all 3 holes.

