


WIDE POCKET INSTALLATION INSTRUCTION

PART LIST

1. Wall Bracket
2. End Bracket
3. Center Support
4. Inside Rod
5. Outside Rod

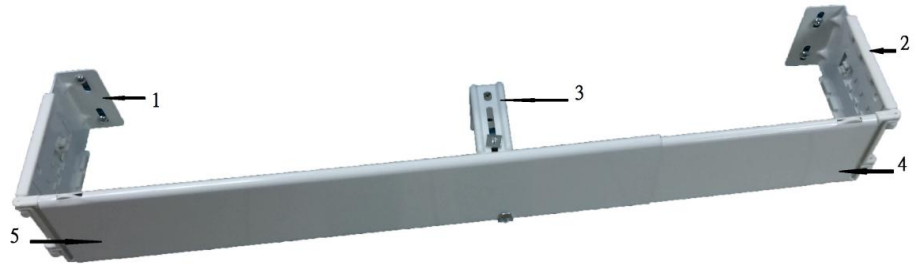

STEP 1: CENTER SUPPORTS


If center support(s) are included, adjust supports to desired projection from wall.

Center supports are not needed on all rods.



STEP 2: MEASURE & MOUNT WALL BRACKETS & CENTER SUPPORTS

Wall brackets are mounted above and to the sides of the casing. Top holes of wall brackets should line up. Mount center support(s) A with equal spacing between wall brackets with screw holes in line with wall bracket screw holes.

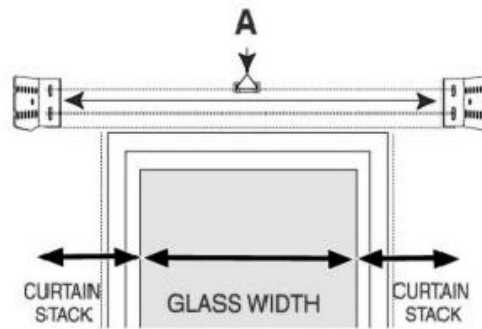

STEP 3: ASSEMBLE AND INSTALL END BRACKET

- Remove hinge arm from end bracket.
- Push end brackets into wall brackets until they snap into place. Adjust brackets to desired projection from wall.



STEP 4: INSTALL WIDE POCKET ROD

- Insert hinge arms into both ends of wide pocket rod until tabs snap into slots.
- Hook wide pocket over center support(s) hook and end brackets.

