


1 Parts Identification

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

Check all the pieces for damage. If any pieces are damaged or missing, contact Gronomics at www.gronomics.com.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

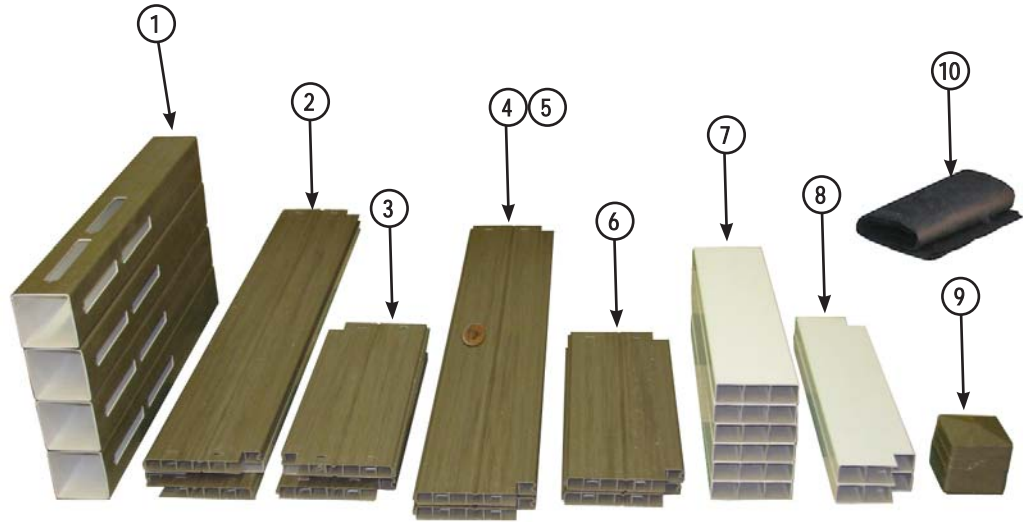

Parts List


ITEM	QTY.	PART #	DESCRIPTION
1	4		Corner Post, 4" x 4" x 31"
2	2		Side Rail w/Cleat, 45-1/2" x 8" x 1"
3	2		Side Rail, w/Cleat, 21-1/2" x 8" x 1"
4	1		Side Rail w/Logo, 45-1/2" x 8" x 1"
5	1		Side Rail, 45-1/2" x 8" x 1"
6	2		Side Rail, 21-1/2" x 8" x 1"
7	6		Bottom Board, 22" x 5-1/2" x 1-1/2"
8	2		Corner Notched Bottom Panel, 22" x 5-1/2" x 1-1/2"
9	4		Post Cap, 4" x 4" x 1-1/2"
10	1		Fabric Liner, 24" x 48"

Continued

2 Side Rail w/Cleat Assembly

Stand one 4" x 4" x 31" corner post (Item 1) upright with slots facing you and slots facing to the right.


Locate a 45-1/2" x 8" side rail w/cleat (Item 2). With the cleat located at the bottom and facing you, install side rail w/cleat into the lower slot and push inward until the tabs on the side rail w/cleat are locked to the corner post.

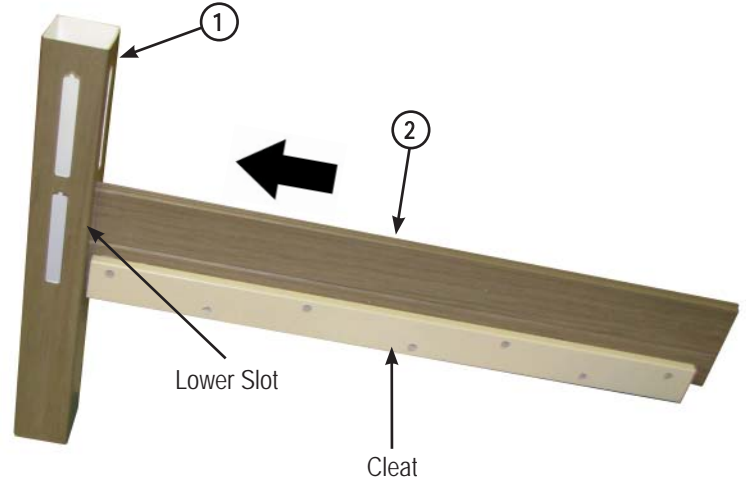

3 Side Rail Assembly

Install the 45-1/2" x 8" side rail w/logo (Item 4) (w/Logo facing away from you) onto the top of side rail w/cleat.

Slide the side rail w/Logo into the slot on the corner post until tabs are locked to post.

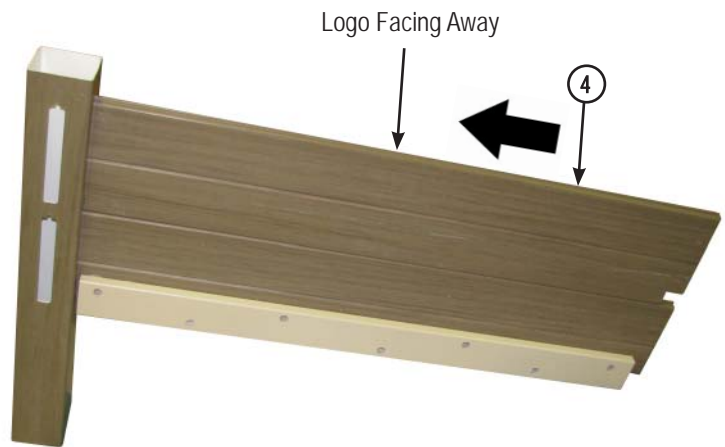


Continued

4 Side Rail Assembly Continued

Align the 4" x 4" x 31" corner post (Item 1) with slots facing you and slots facing the ends of the 45-1/2" x 8" side rail w/cleat (Item 2) and 45-1/2" x 8" side rail w/Logo (Item 4).

Slide the corner post onto the side rails until the tabs on the side rails lock to the corner post.


Repeat steps 1 - 4 for the two remaining 4" x 4" x 31" corner posts, 45-1/2" x 8" side rail w/cleat and 45-1/2" x 8" side rail (Item 5).

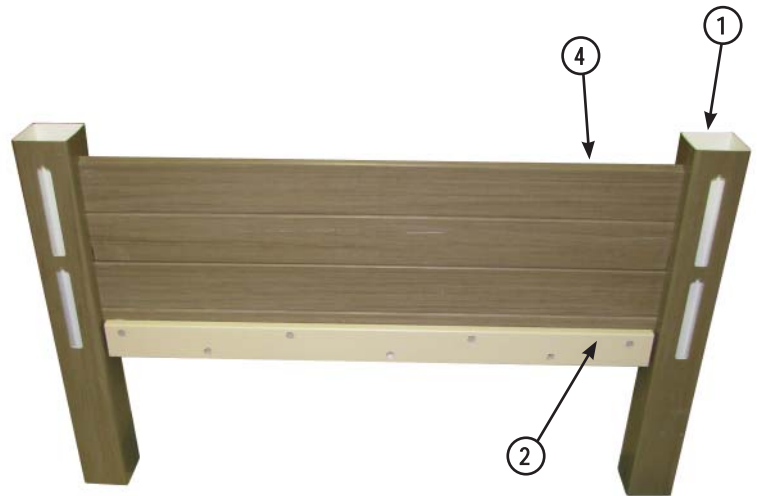

5 End Rail Assembly

Align the 21-1/2" x 8" side rail w/cleat (Item 3) and 21-1/2" x 8" side rail (Item 6) to the 4" x 4" x 31" corner post slots.


Slide the side rails into the corner post slots until the tabs on the side rails lock to the corner post.

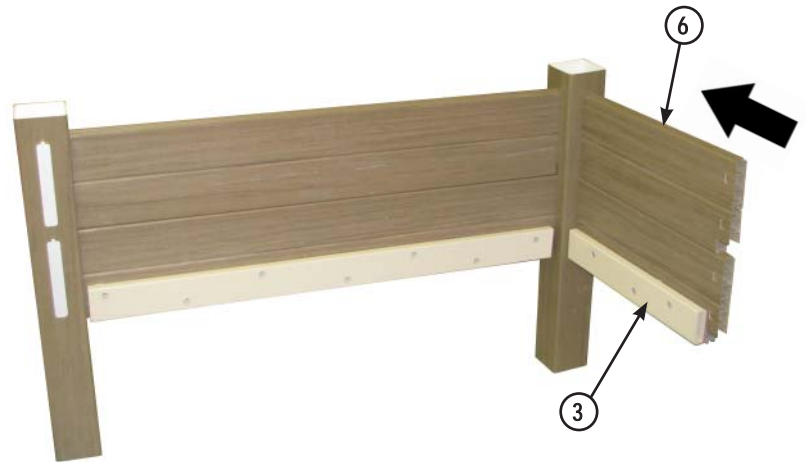

Continued

6 End Rail / Side Rail Assembly


Align the other side rail assembly (as shown). Align the corner post (Item 1) slots to the 21-1/2" x 8" side rail w/cleat (Item 3) and 21-1/2" x 8" side rail (Item 6) and slide the side rail assembly into the corner post until the tabs lock to the corner post.

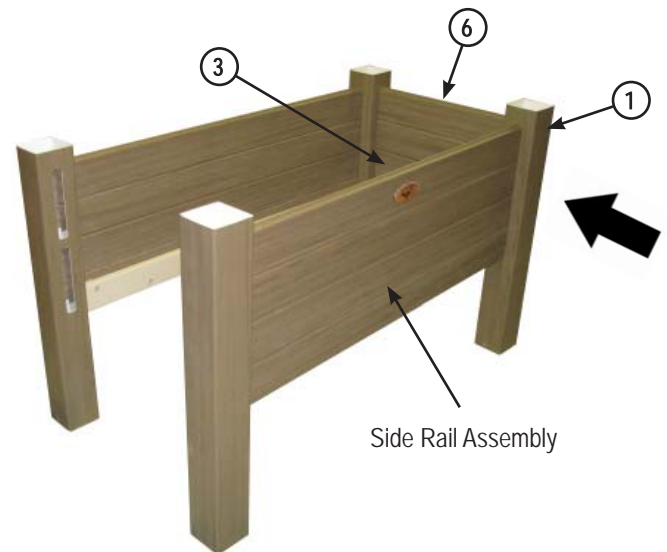

7 Final End And Side Rail Assembly

Place the 21-1/2" x 8" side rail w/cleat (Item 3) (with the cleat located at the bottom and facing in) and 21-1/2" x 8" side rail (Item 6) together and place between the two 4" x 4" x 31" corner posts (Item 1).

Slide the end side rails into each corner post until the tabs on the side rails lock to the posts.

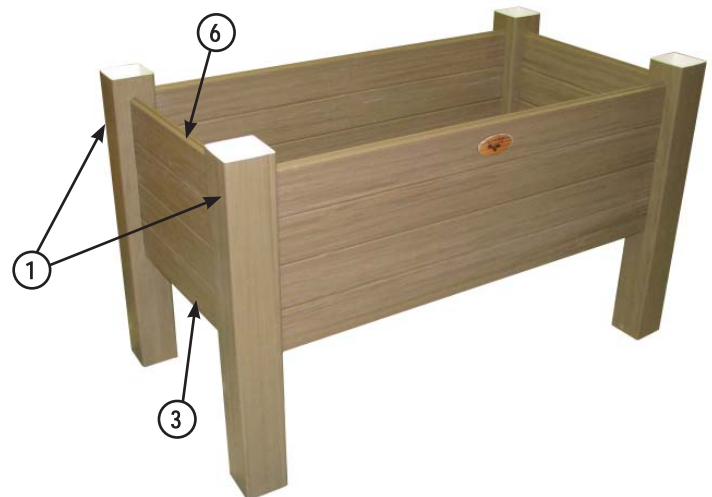

Continued

8 Corner Notched Bottom Panel Assembly

Place one 22" x 5-1/2" x 1-1/2" corner notched bottom panel (Item 8) on each end of the garden bed.



9 Bottom Panel And Post Cap Assembly

Place the six 22" x 5-1/2" x 1-1/2" bottom panels (Item 7) into the garden bed.

(Gap boards evenly to allow for water drainage).

Install the 4" x 4" post caps (Item 9) onto the corner posts.

Place fabric liner into the garden bed.

