

## INSTRUCCIONES • INSTRUCTIONS

### PARA APLICAR **DECO WALL®**

DESENROLLE TODO EL **DECO WALL®** Y ENROLLELO AL REVES DURANTE 5 MIN. PARA NO AFECTAR LA ADHERENCIA LA SUPERFICIE A CUBRIR DEBE ESTAR:  
 \*LISA \*SIN GRASA \*SECA \*SIN POLVO Y LEJOS DE UNA FUENTE DE CALOR.

#### 1) MIDIENDO **DECO WALL®**

\*MIDA EL AREA EN DONDE DESEA INSTALARLO  
 \*MARQUE EN EL PAPEL REVERSO LA MEDIDA, Y DEJE UNOS CENTIMETROS DE MAS, SIGUIENDO LA CUADRICULA IMPRESA, PARA POSIBLES AJUSTES.

#### 2) CORTANDO **DECO WALL®**






\*CORTE CON UNA TIJERA O EXACTO POR LA GUÍA MARCADA.

#### 3) DESPRENDIENDO **DECO WALL®**

RETIRE 10 CM DEL PAPEL REVERSO, Y SOSTENGA CON AMBAS MANOS. Y

#### 4) PEGANDO **DECO WALL®**

FIJE LIGERAMENTE LA PARTE ADHESIVA A LA SUPERFICIE. ASEGURESE QUE ESTE EN LA POSICION DESEADA Y POCO A POCO VAYA ADHERIENDOLA SOBRE ESTA, ALISANDO CON LA MANO O TOALLA DESDE EL CENTRO HACIA AFUERA, PARA SACAR EL AIRE Y EVITAR ARRUGAS.

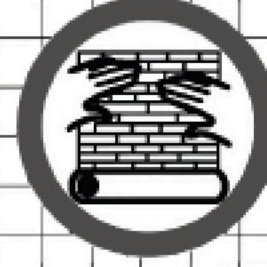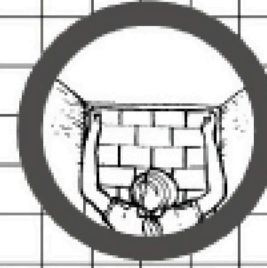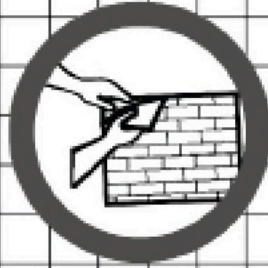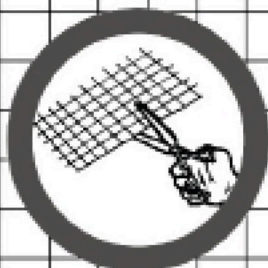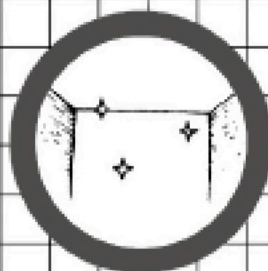

### WHEN APPLING **DECO WALL®**

\*UNROLL AND ROLL IT TO THE OTHER WAY UNTIL FIVE MINUTES.  
 \*OPEN AND FOLLOW THE INDICATIONS. TO MAINTAIN GOOD ADHESION THE SURFACE SHOULD BE: \*EVEN \*FREE OF GREASE, DUST \*DRY AND FAR FROM A HEAT SOURCE.

#### 1) MEASURING **DECO WALL®**

\*BEFORE PEELING PLEASE: MEASURE THE AREA YOU WISH TO COVER. TRACE ON THE BACKSIDE PAPER THE MEASURE TOOKED, AND LEAVE A FEW MORE INCHES, FOLLOWING THE SQUARES GUIDES, SO ADJUSTMENTS CAN BE MADE.

#### 2) CUTTING **DECO WALL®**

\*CUT WITH A SCISSORS BY THE MARKED BACKSIDE PAPER

#### 3) PEELING **DECO WALL®**

PEEL ONLY 4 INCHES OF THE BACKSIDE PAPER, AND HOLD WITH BOTH HANDS.

#### 4) APPLYING **DECO WALL®**

SLIGHTLY APPLY THE ADHESIVE SIDE TO THE SURFACE. BE SURE, THAT IS IN THE DESIRED POSITION. GRADUALLY GO AFFIXED TO THE SURFACE, AND WITH THE HANDS SMOOTHLY GOES FROM THE CENTER TOWARDS THE OUT EDGES TO AVOID BUBBLES AND WRINKLES.