


R Bike Rack

Made in **USA**★

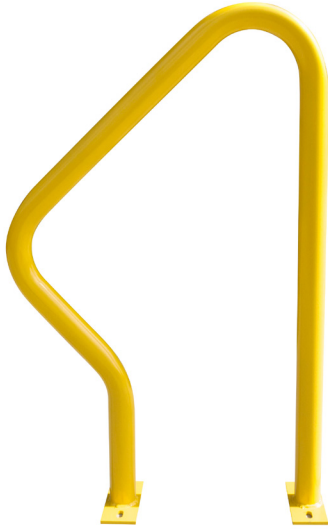


- U-lock compatible
- Parks 2 bicycles
- 2 Points of contact
- Easy installation
- 97% Recycled content


Material	1.5" sched. 10 steel pipe
Height	34"
Width	22"
Weight	17 lbs

MOUNT OPTIONS

Surface

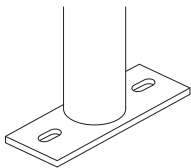


In-Ground




FINISH OPTIONS

Galvanized

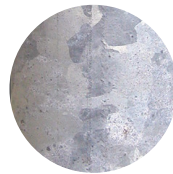


Powder Coat

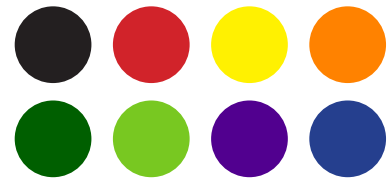


R Curve Bike Rack


Installation

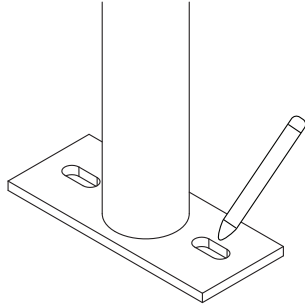


1. Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material.

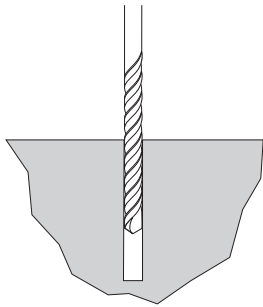

2. Drill 3/8" diameter holes 3" deep into surface. Make sure the holes are at least 3" away from any cracks in the base material.

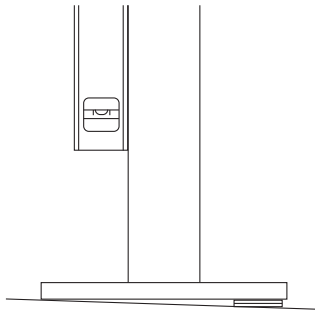

3. Place rack (and washers to level rack if necessary) over holes.

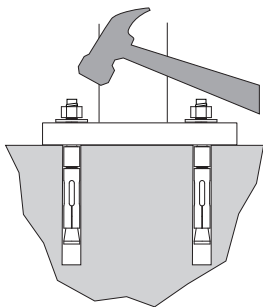

4. Thread nuts onto anchors, leaving approximately 1/4" of the anchor protruding, and tap into surface. Tighten nuts down to secure rack.

R Curve Bike Rack

In-Ground Installation


Tools Needed

Level
Cement mixing tub
Shovel
Trowel
Hole coring machine with 4" bit
Access to water hose


Installing into existing concrete

Core holes no less than 3" diameter (4" recommended) and 10" deep into sidewalk. Fill holes with Por-Rok or epoxy grout. Place rack into holes, making sure the rack is level. 33"-36" of the rack should remain above the surface. If the rack is less than 33" high, it will not support the bike adequately. Make sure the rack is level and held in place until the grout has set.


Installing into new concrete

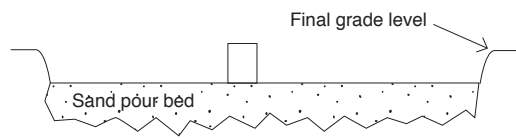

1. Place corrosion resistant sleeve (min. 3" inside diameter) in sand pour bed in exact location where rack will be installed. Make sure top of sleeve is at same level as desired finished concrete surface. Fill sleeve with sand to keep it in place and prevent it from filling with concrete.



2. Pour concrete and allow to cure

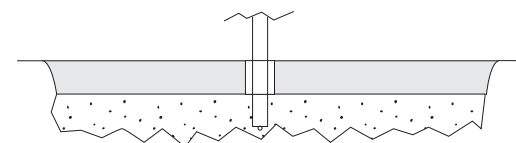

3. After appropriate cure time, dig out sand from sleeves and insert racks, making sure they are level and at the appropriate height. Pour in Por-Rok or epoxy grout and allow to set.