

INSTRUCTION

FOR Cellular Shades

1 Check package for the complete set of parts



bracket x 2




screw x 4





oprate handle x 1

2 Attach the oprate handle to the bottom rail.

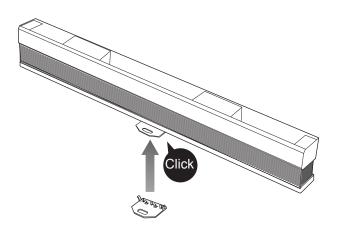


3 Install bracket as:

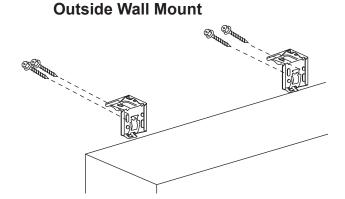

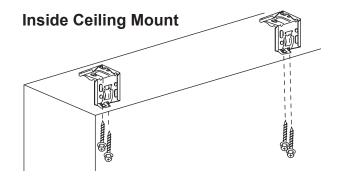

4 When both brackets are secured to the wall / ceiling

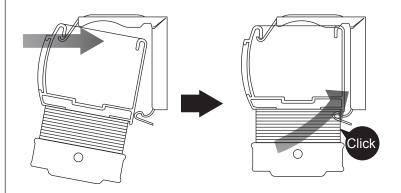

Clip on the brackets to the headrail with a "Click" sound



