


DRAPERY ROD SET INSTALLATION GUIDE

Note:

Finial shown is for illustration purposes only. It may not represent the style of finial purchased. For larger width windows, two persons may be required for easier leveling.

Tools needed:

Tape Measure, Pencil, Drill & Bit Set, Philips head Screwdriver, Level



Tape Measure



Pencil




Drill & Bit Set



Philipshead Screwdriver



Level

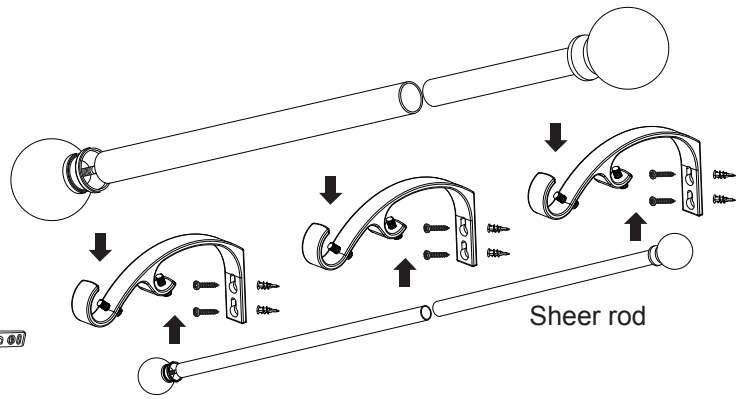

BRACKET INSTALLATION

STEP 1.


Place brackets against wall at desired locations and mark screw holes. Use tape measure and level to make sure marked screw holes are horizontal to each other.

STEP 2A. (FOR MOUNTING TO DRYWALL OR PANELING)


Pre-drill two pilot holes for each bracket (1/4" drill bit) and insert anchors into wall and insert screws into wall anchors.

STEP 2B. (FOR MOUNTING TO WOOD OR STUDS)


If mounting directly into wood or studs, pre-drill two pilot holes for each bracket (1/4" drill bit) and install bracket on the wall with screws provided.

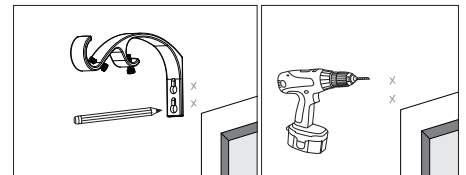

1

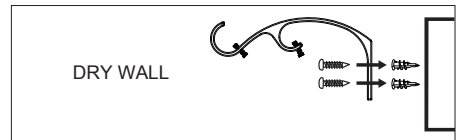

2A

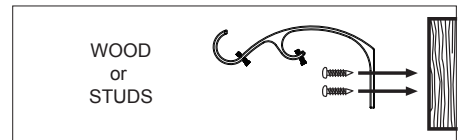

2B

ROD INSTALLATION

STEP 3.

Extend the smaller diameter telescopic sheer rod until they separate.

STEP 4.


Feed half of the sheer panels (not included) onto one sheer rod and the other half of the sheer panels (not included) onto the second sheer rod.

STEP 5.


Connect the two sheer rods to make it a telescopic sheer rod.

STEP 6.


Place telescopic sheer rod onto the rear rod holder of all three brackets.




3




4



5



6

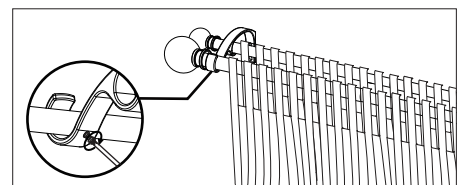

7

FINAL ADJUSTMENT

STEP 7.

Secure each rod by tightening screws provided.

STEP 8.

Repeat step 3 to 7 for the larger diameter telescopic curtain rod.