

Multi Use



Downspout Diverter
Fence Edging




12" wide x 38" long



Easy Installation Instructions


1

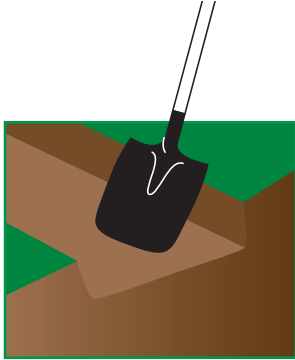

Using a square point shovel begin digging a trench the width of the Channel Guard to desired area. Keep center of trench level to insure proper installation. When installing the Channel Guard for downspout diverter applications make sure the trench is sloped away from the foundation for proper drainage.

2

Next insert Channel Guard into ground keeping the top bead of the side walls 1/2 in. above trenched area. If connecting more than one Channel Guard snap the top beads of each piece under one another.

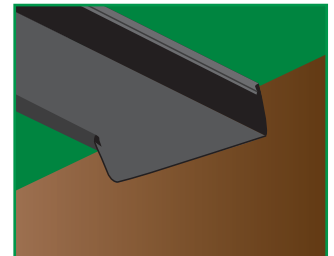

3



Last to secure from any lifting, backfill Channel Guard with rock or any other landscaping material.