
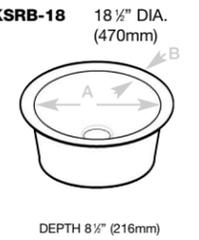
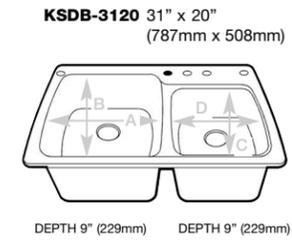
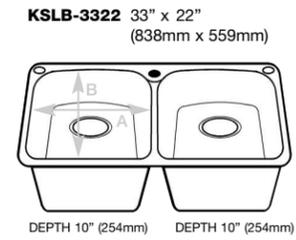
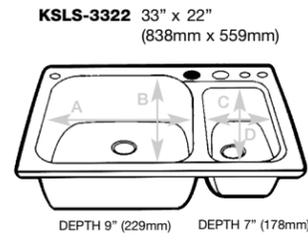
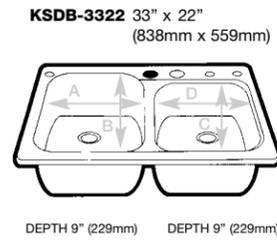
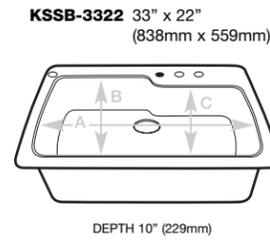


Drop-In Kitchen Sink Installation Instructions and Templates

Tools Required:

- Ruler/Tape Measure
- Drill
- Caulk
- Masking Tape
- Safety Glasses
- Screwdriver
- Saber Saw
- (if counter top cutout is required)
- 1 1/4" Hole Saw

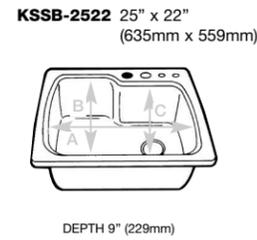


INSIDE BOWL DIMENSIONS				
Model	A	B	C	D
KSSB-2522	21 1/8" (537mm)	17 5/8" (447mm)	15 5/8" (397mm)	—
KSSB-3322	29 3/4" (756mm)	19" (483mm)	16 1/2" (419mm)	—
KSDB-3322	14 15/16" (379mm)	18 7/8" (479mm)	13 3/4" (349mm)	15 1/4" (387mm)
KSLB-3322	18 7/8" (479mm)	19 3/8" (492mm)	15 5/8" (413mm)	8 7/8" (225mm)
KSLB-3322	14 3/8" (365mm)	18 7/8" (479mm)	—	—
KSDB-3120	15" (381mm)	17" (432mm)	13 3/4" (349mm)	11" (279mm)
KSSB-2518	12" (304mm)	14 3/4" (374mm)	12 3/8" (314mm)	8 3/4" (222mm)
KSRB-18	15 3/4" (400mm)	1 3/8" (35mm)	—	—

Gloss Finish Models				
Model	A	B	C	D
KSGF-2522	21 1/4" (540mm)	16" (406mm)	—	—
KSGF-3322	14" (356mm)	18 1/2" (470mm)	16" (406mm)	14" (356mm)

SINK CUTOUT MEASUREMENTS		
Model	Width	Depth
KSSB-2522	24 3/8" (619mm)	21 3/8" (543mm)
KSSB-3322	32 3/8" (822mm)	21 3/8" (543mm)
KSDB-3322	32 3/8" (822mm)	21 3/8" (543mm)
KSLB-3322	32 3/8" (822mm)	21 3/8" (543mm)
KSLB-3322	32 3/8" (822mm)	21 3/8" (543mm)
KSDB-3120	30 3/8" (771mm)	19 3/8" (492mm)
KSSB-2518	24 3/8" (619mm)	17 3/8" (441)
KSRB-18	17 7/8" (454mm) dia.	


Gloss Finish Models		
Model	Width	Depth
KSGF-2522	24 3/8" (619mm)	21 3/8" (543mm)
KSGF-3322	32 3/8" (822mm)	21 3/8" (543mm)

Measure the cutout line or the pre-cut opening to be sure it conforms to the sizes listed.

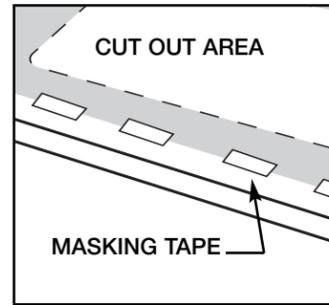


Drop in side:
1. Select the drop-in kitchen sink template that applies to the model sink you are installing. Cut out the inside of the template and discard the cutout portion. Locate the template front to rear and right to left on the countertop so the bowl will not interfere with the cabinets below. Attach the template to the countertop with masking tape and draw a pencil line around the inside of the template. Discard the template.

-or-
Invert sink and position onto the countertop. Locate sink front to rear and right to left so the bowl will not interfere with the cabinets below. Trace a pencil line around the outside edge of the sink and remove the sink from the countertop. Measure in 5/16" (8mm) from the initial sink outline and draw a second line inside the first. Draw a 1-1/2" radius at each corner. The second interior line will be your cut out line.

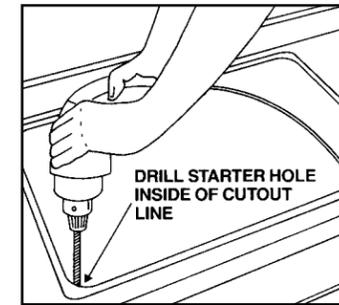


2. Drill starter hole inside of cutout line.

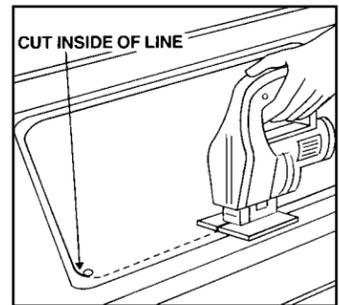


3. Using a saber saw, cut inside of cutout line. Trial fit sink to check proper fit.



4. Identify fixture hole locations. Drill a starter hole from reverse side. Working from the top side as illustrated, position a hole saw on the starter hole and drill to complete the fixture hole. Attach faucet, drain, and accessories according to manufacturer's instructions.

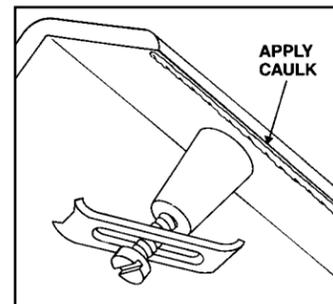

5. For final fit, apply a bead of caulk (not included) to the underside of the sink flange and position sink into countertop opening. First, tighten screws in front, then tighten rear screws.

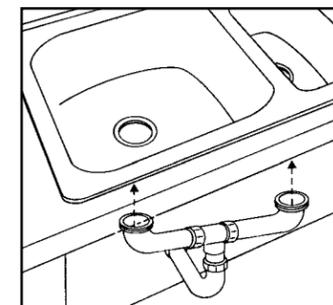



6. Connect all faucet supply lines, disposal (if available), and drain trap fittings per manufacturer's instructions.
CHECK FOR LEAKS:
• Supply user tubes to faucet
• Supply riser tubes to shut off valves or lower connections
• Fill sink with water and check for leaks around drain
• Release water from sink and check for possible leaks
• Tighten as needed

Care and Cleaning Instructions

NOTE: This procedure does not apply to the Gloss Finish models.

Clean your Swanstone kitchen sink with powdered abrasive cleaners. Use of a Scotch Brite pad is recommended to remove stubborn stains. Occasional use of a mild bleach and water solution ensures that the original luster is maintained.

Gloss Finish Models

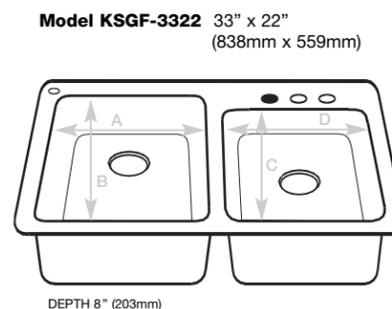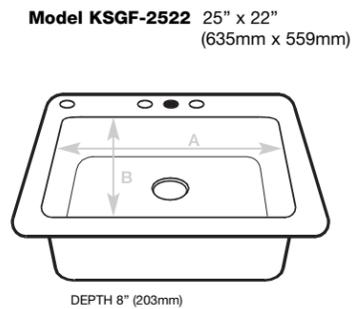

Care and Cleaning Instructions for Gloss Finish Models KSGF-2522 and KSGF-3322

WARNING: DO NOT USE ABRASIVES AS IT WILL DULL THE GLOSSY FINISH! This product is made of Swanstone with a gloss finish. While it is stain resistant, it requires regular and reasonable care. Wash regularly with warm water and a non abrasive cleaner such as Soft Scrub Liquid Gel with bleach (without abrasives), Clorox Clean-up with bleach, Top Job or Mr. Clean. Remove hard water stains or mineral build up with scale removers such as Lime-Away.
DO NOT USE HARSH CLEANSERS OR ABRASIVES such as scouring powders, abrasive cleansers or scouring pads. Abrasives will dull the finish. Protect the finish with fiberglass wax or automotive paste wax.

These Kitchen Sinks Can Also Be Undermounted. See Reverse Side For Templates of Select Models.



**These Templates Are For Undermount
Installation Only Of Models: KSSB-2522,
KSSB-3322, KSDB-3322, KSLs-3322,
KSLB-3322, KSGF-3322, and KSGF-2522.**



This procedure should be performed by a professional fabricator/installer. This template should be used to create a wood template which will be used to make the cutout.


The template is designed such that the cutout equals an approximate 3/8" negative reveal. Should something different be desired, a new template should be constructed accordingly.

Always check fit of wood template to kitchen sink before cutting hole in countertop. Make adjustments as necessary.

If You Require An Undermount Template For Any Additional Models, Please Call Swan Customer Service At 1-800-325-7008.

Drop-In Kitchen Sink Installation Instructions For The Following Models—No Template Provided

KSEU-3020 39 3/8" x 20"
(1000mm x 508mm)

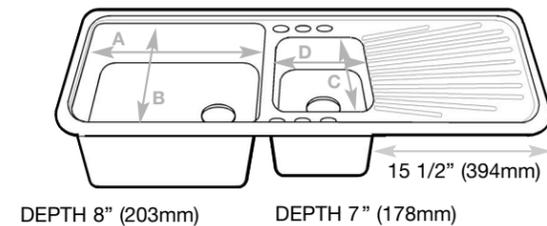


DEPTH 8" (203mm) DEPTH 7" (178mm)

The Euro Style Bowl design allows for the drain board to be located on either the left or right side and comes with a white colander.

No template is provided for the installation of these two kitchen sinks. To install, invert sink and position onto the countertop. Locate sink front to rear and right to left so the bowl will not interfere with the cabinets below. Trace a pencil line around the outside edge of the sink and remove the sink from the countertop. Measure in 5/16" (8mm) from the initial sink outline and draw a second line inside the first. Draw a 1-1/2" radius at each corner. The second interior line will be your cut out line. Follow steps 2 through 6 to complete drop-in kitchen sink installation. If you require an undermount template for either of these two sinks, please call Swan customer service at 1-800-32-7008.

KSTB-4422 44" x 22"
(1118mm x 559mm)

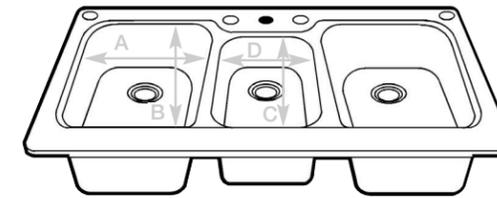

DEPTH 9" (229mm) DEPTH 7 1/2" (191mm) DEPTH 9" (229mm)

INSIDE BOWL DIMENSIONS				
Model	A	B	C	D
KSEU-3020	13" (330mm)	16 1/2" (419mm)	12 1/4" (311mm)	7" (178mm)
KSTB-4422	14 3/8" (365mm)	18 1/2" (470mm)	16" (413mm)	9" (229mm)

SINK CUTOUT MEASUREMENTS		
Model	Width	Depth
KSEU-3020	38 3/4" (984mm)	19 3/8" (492mm)
KSTB-4422	42 1/2" (1080mm)	21 3/8" (543mm)

Measure the cutout line or the pre-cut opening to be sure it conforms to the sizes listed.

The Swan Corporation One City Centre Suite 2300 St. Louis, MO 63101 800-325-7008

Form 254-9-02-20M