



## Step 8

- 8.1 Insert pin support into the desired holes on Center Panel (E) and R-Side Panel (D). Place Shelf Panels (I) on the Pin Supports.
- 8.2 Paste protective pads (9) on L/R-Side Panels to prevent the Foldable Top Panel from directly hitting side panels, as shown.

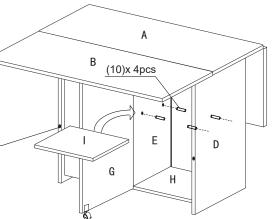



## Recommended Maximum Weight

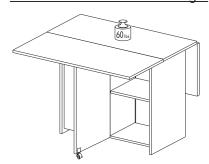

#### **WARNING**:

- >This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.
- >DO NOT allow children to climb on unit.
- >Put heavier items on lower shelves.





# Assembly Instruction


Furinno Boyate Folding Multifunction Table MODEL : **FNAJ-11068** 





Recomm. 2 Person



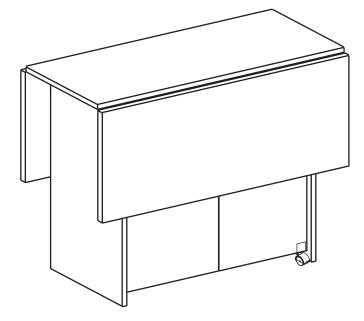



## **Customer Support**

**NEED HELP?** For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

www.furinno.com












No	Hardware List	Qty
1	Screw	⊳ 50pcs
2	Dowel	20pcs
3	Cam-lock Screw/Nut	20pcs
4	Hinge	6pcs
5	Pull Knob —	2pcs
6	Door Hinge	4pcs
7	Stopper	8/2pcs
8	Caster	2pcs
9	Protective Pad	4pcs
10	Pin Support	10 4pcs

No	Parts List	Qty
Α	Fixed Top Panel	1pc
В	Foldable Top Panel	2pcs
С	L-Side Panel	1pc
D	R-Side Panel	1pc
Е	Center Panel	1pc
F	Back Panel	2pcs
G	Door Panel	2pcs
Н	Bottom Panel	1pc
I	Shelf Panel	1pc

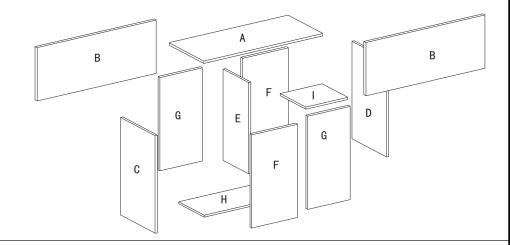


#### **USEFUL HINTS BEFORE YOU START:**

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.

#### Step 1


Attach 2 pcs of Back Panel (F) to Center Panel (E) with Dowels (2) and Cam-lock Screw/Nuts (3).

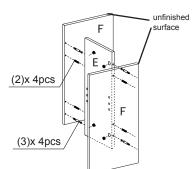

#### Step 2


Turn the unit upside down.

Attach Bottom Panel (H) to Center Panel (E) with Dowels (2) and Cam-lock Screw/Nuts (3).

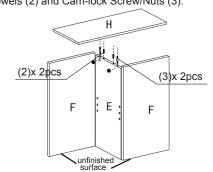


### Step 3

Attach L/R-Side Panels (C)(D) to the assembled unit from Step 2 with Dowels (2) and Cam-lock Screw/Nuts (3), as shown:

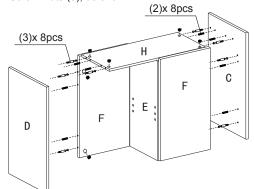


### Step 4

Attach Top Panel (A) to L/R-Side Panels (C)(D) and Center Panel (E) with Dowels (2) and Cam-lock Screw/Nuts (3).

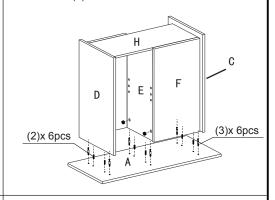

## Step 5

Install Pull Knob (5), Stopper (7), Caster (8) to Door Panel (G).

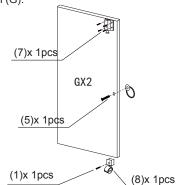

## Step 6

Attach Door Panel (G) to Center Panel (E) with Door Hinge (6).

