




Installation Instructions Models D with Rope & Pull Kit

Included

- One roll of self-adhesive hook & loop
- 4 Mounting brackets
- 6 Eyelets
- 4 Cords (Each different lengths)
- 2 Cleat
- 10 Wood Screws

Not Included

- Hammer and Step Ladder
- 5/8" Roofing Nails (Optional for Step 8)
- 3/4" plastic pipe cut to width of screen (Step 5)

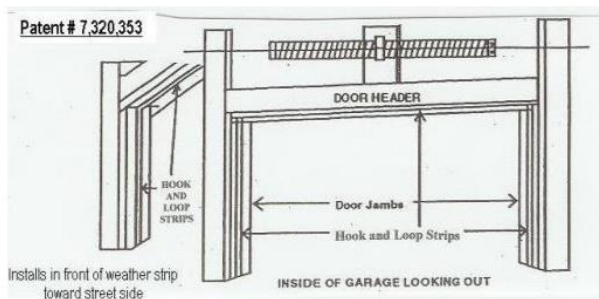

STEP 1

Cut the roll of self-adhesive hook & loop into 3 strips, two lengths equal to the height of the door jambs, and one long strip for the header.

STEP 2


Install and align the self-adhesive hook & loop strips on both door jambs about 1" in front (street side) of the door stops/weather strips. Next add the hook & loop strip to the header, so that it allows a smooth surface edge with both door jamb strips.

STEP 3

Starting at either upper corner, attach the screen to the hook & loop strip which is mounted already on the header. Next attach the screen to the hook & loop strips that are mounted on either of the door jambs of the garage door.

STEP 4

Attach **cleat** to the door jamb between garage door and screen, about 5' high on whichever side willing to pull from, and using **wood screws**.

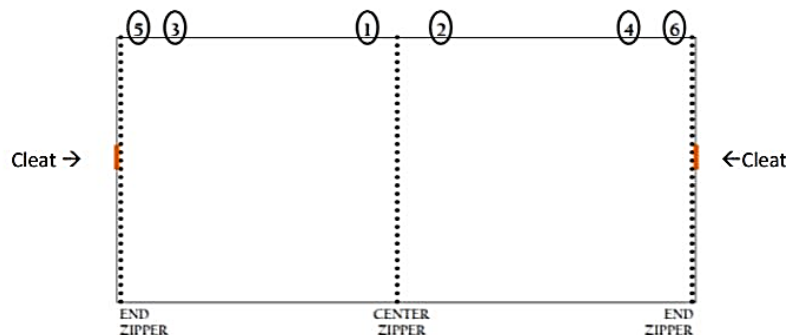

STEP 5

Install **eye screws**. All 4 eye screws should go into the header on the inside of the screen approximately 1" away.

Eye Screw 1&2- Place one on each side, 6" from center zipper

Eye Screw 3&4- Place one on each side, 12" in from outside zipper

Eye Screw 5&6- Place one on each side, 6" from outside zipper

STEP 6

Attach **brackets** to the header (street side) across from eye screws 1, 2, 3, and 4.

STEP 7

Insert the **CORDS** accordingly:

Long Cord #1- Insert the knotted end into the bracket across from Eye Screw 1. Run the cord down the screen, then back up to Eye Screw 1. Run the cord through Eye Screws 1, 3, and 5, and down to the cleat.

Long Cord #2- Insert the knotted end into the bracket across from Eye Screw 2. Run the cord down the screen, then back up to Eye Screw 1. Run the cord through Eye Screws 2, 4, &6, and down to the cleat.

Short Cord #1- Insert the knotted end into the bracket across from Eye Screw 3. Run the cord down the screen, then back up to Eye Screw 3. Run the cord through Eye Screw 3 and 5, and down to the cleat.

Short Cord #2- Insert the knotted end into the bracket across from Eye Screw 4. Run the cord down the screen, then back up to Eye Screw 4. Run the cord through Eye Screw 4 and 6, and down to the cleat. With the screen pulled all the way down, tie all cords together about 12" below the cleat and cut off any excess cord. Do for each side.

STEP 8 (Optional/Highly Recommended)

After fastening the screen to the header and door jambs, apply roofing nails (not included) through the straps at the top of the screen to the header to create a long term and permanent hold.

STEP 9

Insert a 3/4" rod into sewn pouch on bottom of screen to maintain position and shape when rolled up.

REMOVAL/CLEANING

Take out any nails and separate hook & loop fastening system. Wash with mild soap and water. Allow to **thoroughly** dry before storing.

*Consumer Warning: The Fresh Air Screen is not designed to be a security wall and will not prevent children, adults, or aggressive animals from getting in or out of the garage or home.

Visit www.freshairscreens.com for Warranty Terms and Conditions.

