


Project Panel Installation Guide

Cutting

Long, straight cuts are easier to make with large tin snips. Open the cutter wide at the start of each stroke, and close blades smoothly. Lift the cutoff strip slowly and roll it to the side to prevent binding.



Drilling

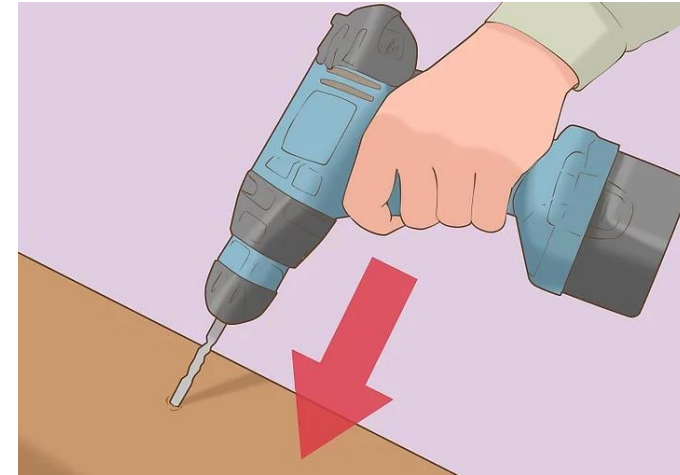

Hold the drill steady and apply consistent pressure into the project panel

Fasteners



Recommended fastener is
#8 Diameter x 1/2" Long
Hex Head Slotted Sheet Metal Screws

Overlap



Adjoining panels should be overlapped for continuity

Limit screw location to valleys only. Screwing into ridges will indent metal and create unseemly divots.

