



## **Hardware**


using 8 Screw as per diag.1.

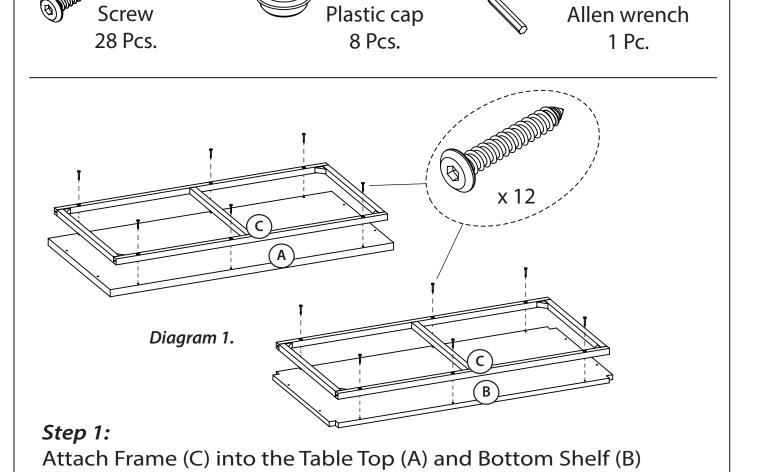

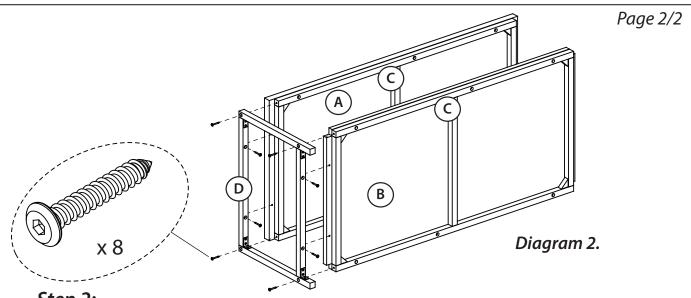


Step 2:

Attach one Side Panel (D) into top and bottom frame from diagram1 using 8 Screw as per diag.2.

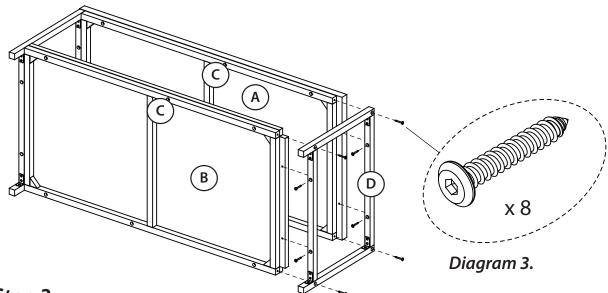

Step 3:

Attach other Side Panel into the unit using 8 Screw as per diag.3.

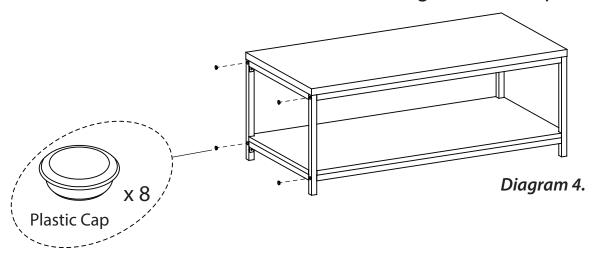

Step 4:

Stand the unit upright using 8 Plastic Cap to cover the screw holes as per diag.4.