


GROUP NO.: 12860 FAIRHAVEN (AMELIA GREY) ITEM NO.: 12862 - RETANGULAR TABLE


Read instruction carefully prior to assembly.

Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below. It is recommended to use two or more persons during the assembly process.


HARDWARE LIST						PART LIST					
No.	Description	Sketch	Size	Qty' / 1 Table	Total	No.	Description	Sketch	Qty'/ 1 Table	Qty'/ 1 Cnt	
1	Short Bolt		$\phi_4^{1/4}$ " x 40mm	16 pcs	16 pcs	A	Table Top		1 pc	1 pc	
2	Lock Washer	Q	$\phi_{16}^{5/16}$ " x 13mm	16 pcs	16 pcs						
3	Flat Washer	0	φ ⁵ / ₁₆ " x 19mm	16 pcs	16 pcs	В	Table Leg		4 pcs	4 pcs	
4	Long Screw	(management	φ ⁵ / ₃₂ " x 60mm	4 pcs	4 pcs	C	Center Stretcher C	۵ <u>ــــــــــــــــــــــــــــــــــــ</u>	1 pc	1 pc	
5	Medium Screw	(φ ⁵ / ₃₂ " x 40mm	17 pcs	17 pcs	D	Center Stretcher D	۵ <u>ــــــــــــــــــــــــــــــــــــ</u>	1 pc	1 pc	
6	Short Screw	(muunne-	$\phi^{5/32}$ " x 25mm	28 pcs	28 pcs	E	Mounting Plate		1 pc	1 pc	
7	Allen Key		4 mm	1 pc	1 pc	F	Corner Block	tee)	4 pcs	4 pcs	

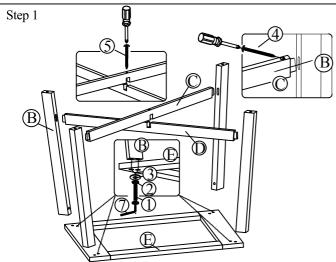


<u>Step 1:</u> Attach Table Leg (B) to the Mounting Plate (E) by using Short Bolt (1), Lock Washer (2), Flat Washer (3) and tighten with Allen Key (7). Do not over tighten. Attach the Center Stretcher C and D (together) to the middle of 4 Table Leg (B) by using Long Screw (4) at the corner; Medium Screw (5) at the center Stretcher. Fully tighten all Screws with a Philips screw drivers (not provided) and Bolts with Allen key (7).

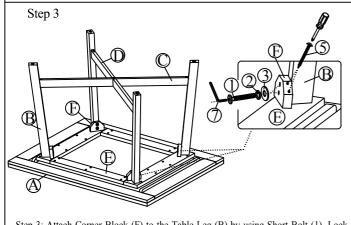

Step 3: Attach Corner Block (F) to the Table Leg (B) by using Short Bolt (1), Lock Washer (2), Flat Washer (3) and fully tighten with Allen Key (7). Attach the Corner Block (F) to the Mounting Plate (E) by using Medium Screw (5) and fully tighten with a Philips screw drivers (not provided).

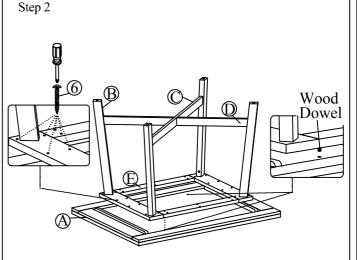

<u>Step 2:</u> Attach the Assembly Base in Step 1 to the Table Top (A) by aligning the Wood Dowels on the Mounting Plate (E) to the dre-drill holes on Table Top (A) and secure them by using Short Srew (6) and tighten with a Philips screw drivers (not provided). Do not over tighten.

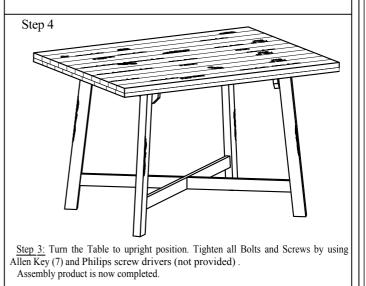


Cleaning instructions: Clean using soft cloth Made in Vietnam



GROUP NO.: 12860 FAIRHAVEN (AMELIA GREY) ITEM NO.: 12862 - SIDE CHAIR

Read instruction carefully prior to assembly.

Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below.

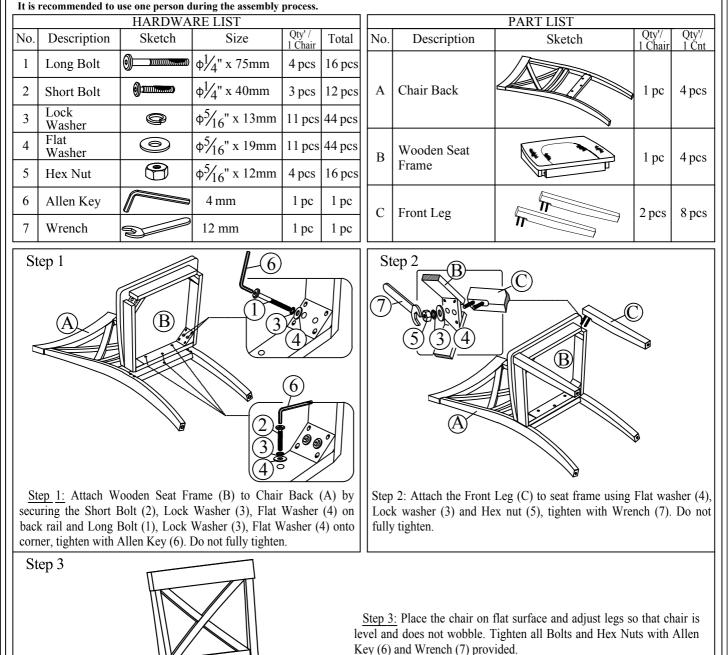

Assembly product is completed .

Cleaning instructions: Clean using soft cloth Made in Vietnam




GROUP NO.: 12860 FAIRHAVEN DR (AMELIA GREY) ITEM NO.: 12872 - COUNTER HEIGHT CHAIR

Read instruction carefully prior to assembly.


Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below. **It is recommended to use two or more person during the assembly process.**


]	HARDWAR	E LIST:			PART LIST:			
No.	Description	Sketch	Size	Qty' / 1 Chair	Total	No.	Description	Sketch	
1	Chair Long Bolt	() () () () () () () () () () () () () ($\phi_4^{1/4}$ " x 75mm		16 pcs	А	Chair Back		
2	Chair Short Bolt	() 1)))) 1)))	$\phi_4^{1/4}$ " x 40mm	2 pcs	8 pcs	В	Wood Seat		
3	Lock Washer	ĝ	$\phi^{5/16}$ " x 13mm	10 pcs	40 pcs	С	Frame Left Front Leg		
4	Flat Washer	0	ϕ^{5}_{16} " x 19mm	10 pcs	40 pcs		Ű		
5	Hex Nut		$\phi_{16}^{5/16}$ " x 12mm		16 pcs	D E	Right Front Leg		
6	Allen Key		4 mm	1 pc	1 pc	_	Left Side	ve ()	
7	Open Wrench		12 mm	1 pc	1 pc	F	Stretcher	sticker stick under stre	
8	Medium Screw		4 mm x40 mm	6 pcs	24 pcs	G	Right Side Stretcher	sticker stick under stre	
Step 1						Step	o 2		

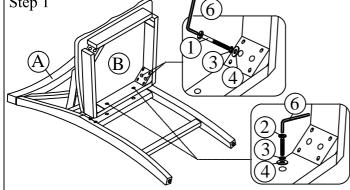

<u>Step 1:</u> Attach Wooden Seat Frame (B) to Chair Back (A) by securing the Flat Washer (4), Lock Washer (3), Chair Short Bolt (2) on back rail and Chair Long Bolt (1) onto Corner with Allen Key (6). Do not fully tighten.

Step 3

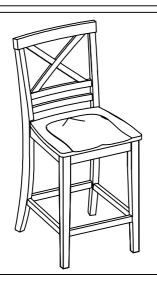

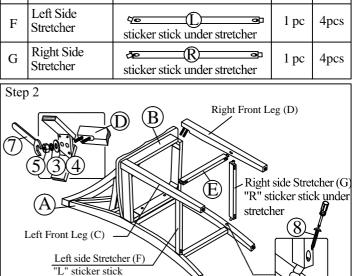

Qty'

<u>1 Chain</u> 1 pc

1 pc

1 pc

1 pc

1 pc

Total

4pcs

4pcs

4pcs

4pcs

4pcs

Step 2: Attach the Left and Right Front Legs (C);(D) to Seat Frame using Flat washer (4), Lock washer (3) and Hex nut (5) by using Open Wrench (7). Attach the Front , Left side, Right side of Stretcher (E);(F);(G) to Right , left of Front Leg and Chair back by securing the Medium Screw (8) with Phillips screw drivers (not provided).

under stretcher

<u>Step 3:</u> Place the chair on flat surface and adjust legs so that chair is level and does not wobble.Tighten all Bolts and Hex nut with Allen Key (6) and Open Wrench (7) provided. Assembly product is completed .




GROUP NO.: 12860 FAIRHAVEN DR (AMELIA GREY) ITEM NO.: 12874 - COUNTER HEIGHT CHAIR

Read instruction carefully prior to assembly.


Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below. **It is recommended to use two or more person during the assembly process.**


	HARDWARE LIST:									
No.	Description	Sketch	Size	Qty'						
1	Chair Long Bolt	() () () () () () () () () () () () () ($\phi_4^{1/4}$ " x 75mm	4 pcs						
2	Chair Short Bolt))))))),,,,,,,))	$\phi_4^{1/4}$ " x 40mm	2 pcs						
3	Lock Washer	ĝ	$\phi^{5/16}$ " x 13mm	10 pcs						
4	Flat Washer	0	$\phi^{5/16}$ " x 19mm	10 pcs						
5	Hex Nut	Ð	$\phi^{5/16}$ " x 12mm	4 pcs						
6	Allen Key		4 mm	1 pc						
7	Open Wrench	J	12 mm	1 pc						
8	Medium Screw	Jununum*	4 mm x40 mm	6 pcs						

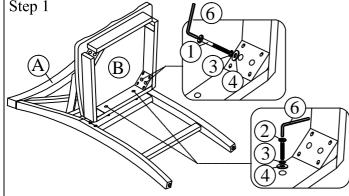


<u>Step 1:</u> Attach Wooden Seat Frame (B) to Chair Back (A) by securing the Flat Washer (4), Lock Washer (3), Chair Short Bolt (2) on back rail and Chair Long Bolt (1) onto Corner with Allen Key (6). Do not fully tighten.

Step 3

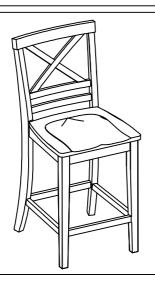

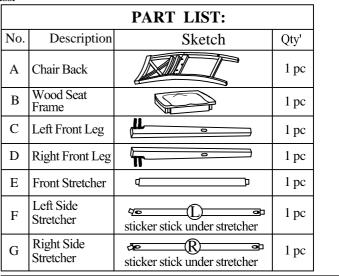

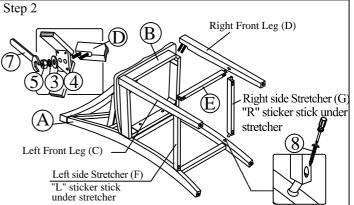

Step 2: Attach the Left and Right Front Legs (C);(D) to Seat Frame using Flat washer (4), Lock washer (3) and Hex nut (5) by using Open Wrench (7). Attach the Front , Left side, Right side of Stretcher (E);(F);(G) to Right , left of Front Leg and Chair back by securing the Medium Screw (8) with Phillips screw drivers (not provided).

<u>Step 3:</u> Place the chair on flat surface and adjust legs so that chair is level and does not wobble.Tighten all Bolts and Hex nut with Allen Key (6) and Open Wrench (7) provided. Assembly product is completed .




GROUP NO.: 12860 FAIRHAVEN DR (AMELIA GREY) ITEM NO.: 12872 - RETANGULAR COUNTER HEIGHT TABLE


Read instruction carefully prior to assembly.

Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below. **It is recommended to use two or more person during the assembly process.**


	HARDWARE LIST						PART LIST					
No.	Description	Sketch	Size	Qty' / 1 Table	Total	No.	Description	Sketch	Qty'/ 1 Table	Qty'/ 1 Cnt		
1	Table Short Bolt		$\phi_4^{1/4}$ " x 40mm	16 pcs	16 pcs	А	Table Top		1 pc	1 pc		
2	Lock Washer	(C)	$\phi^{5/16}$ " x 13mm	16 pcs	16 pcs		_					
3	Flat Washer	0	φ ⁵ / ₁₆ " x 19mm	16 pcs	16 pcs	В	Table Apron		1 pc	1 pc		
4	Short Screw	Cummummer.	φ ⁵ / ₃₂ " x 25mm	28 pcs	28 pcs							
5	Allen Key		4 mm	1 pc	1 pc	С	Mounting Plate		1 pc	1 pc		
6	Wood Dowel		Ø 8 x 20 mm	2 pcs	2 pcs	D	Table Leg		4 pcs	4 pcs		

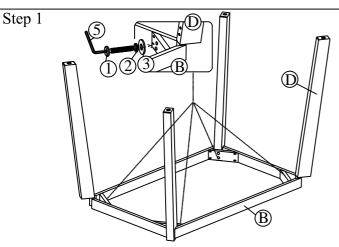


Step 1: Attach Table Leg (D) to each corner of the Table Apron (B) by using Table Short Bolt (1), Lock Washer (2), Flat Washer (3) and tighten with Allen Key (5). Do not fully tighten

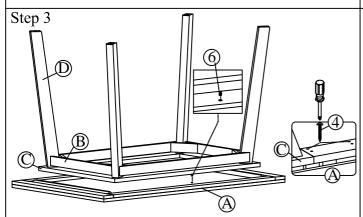

<u>Step 3:</u> Place the Table Top (A) upside down on a piece of cloth or carpet to prevent finish from scratching. Aligning the Wood Dowel (6) on the Mounting Plate (C) to the pre-drilled hole on the table slide of Table Top (A). Attach the Assembly Base in Step 2 to the Table Slide of the Table Top (A) by using Short Screw (4) and fully tighten with Phillips-head screw driver (not provided).

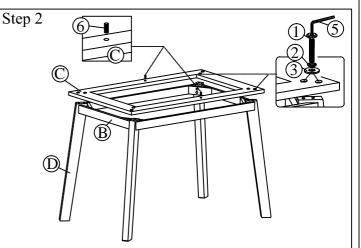

<u>Step 2:</u> Attach Mounting Plate (C) to the top of Table Leg (D) by using Table Short Bolt (1), Lock Washer (2), Flat Washer (3) and Fully tighten all Bolt in Strep 1 & Step 2 with Allen Key (5). Do not over tighten. Insert Wood Dowel (6) into the dre-drill hole on the Mounting Plate (C) follow the picture show.

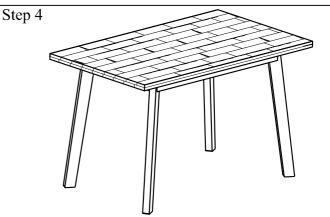

<u>Step 4:</u> Turn the Table to upright position, on flat surface .Tighten all Bolts and Screw with Allen Key (5) provided and Phillips-head screw driver (not provided). Assembly product is completed .