

STEP THREE

Attach Ground Stakes

Arbors must be well secured to prevent tipping over from wind load etc. We have provided four ground stakes for securing the arbor.

If you are installing your arbor on concrete or a wood deck, visit your hardware store to purchase the appropriate galvanized bracketing hardware.

Fasten all four ground stakes to the base of the posts using the provided 1 1/4" screws (2 screws per anchor) as shown aside.

A Temporary Arbor Installation

For a temporary arbor installation, carefully lift the arbor and place into final location. Ensure the arbor opening is set at 42" and that the arbor is plumb and level.

B Permanent Arbor Installation Into Earth For Permanent Installation STRONGLY RECOMMENDED



1

For a permanent installation, measure and dig four 8" holes, 14" deep where the ground stakes will be located. The centers of the holes should be a rectangular pattern with dimensions of 44 1/2" x 22".


2

Fill excavated holes with mixed concrete and carefully lift arbor into place. Plumb and level the arbor.

Note: The posts should not be set in the concrete.

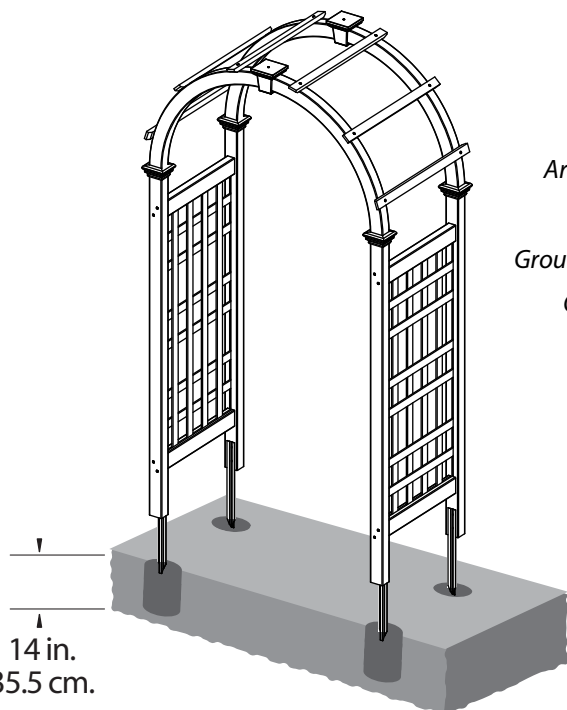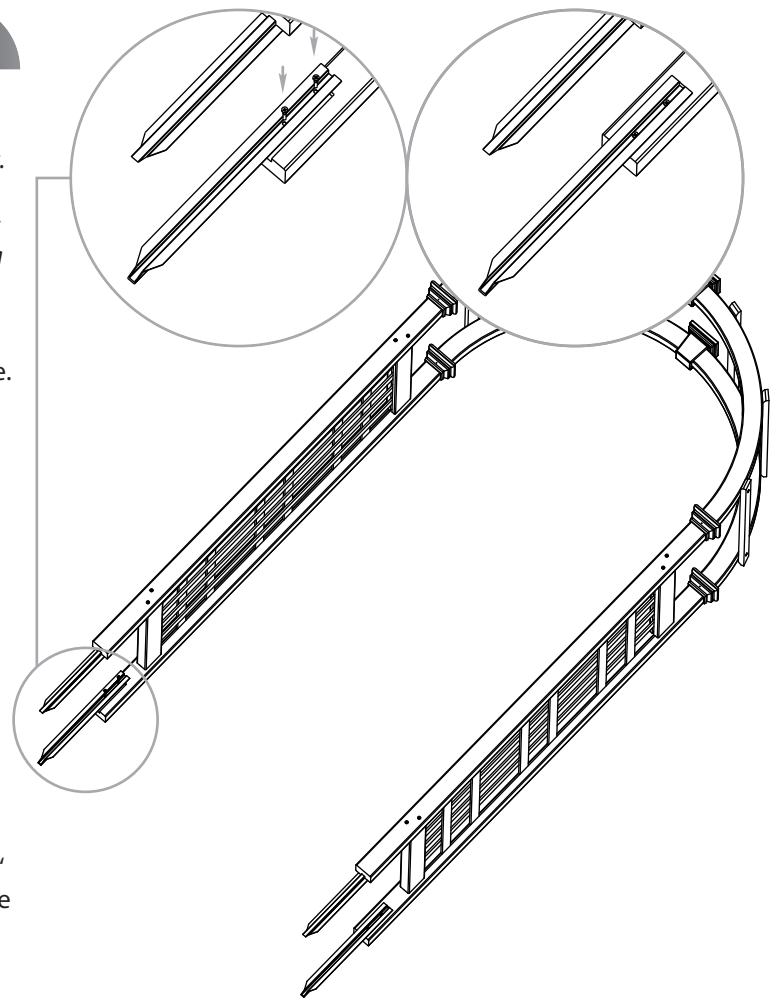

Arbor Post
Ground Stake
Concrete
Ground

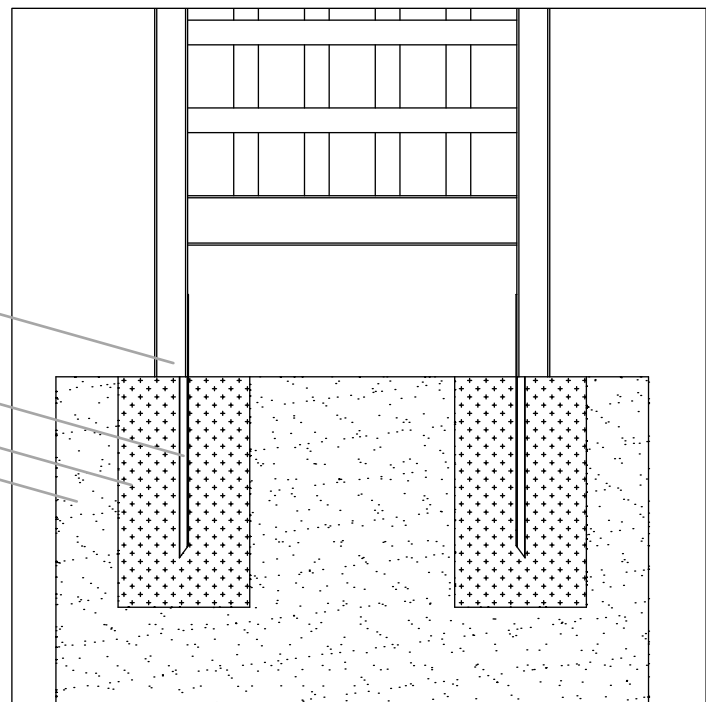

Eden™

Enduring Garden Architecture