


1 Parts Identification

REGB 24-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

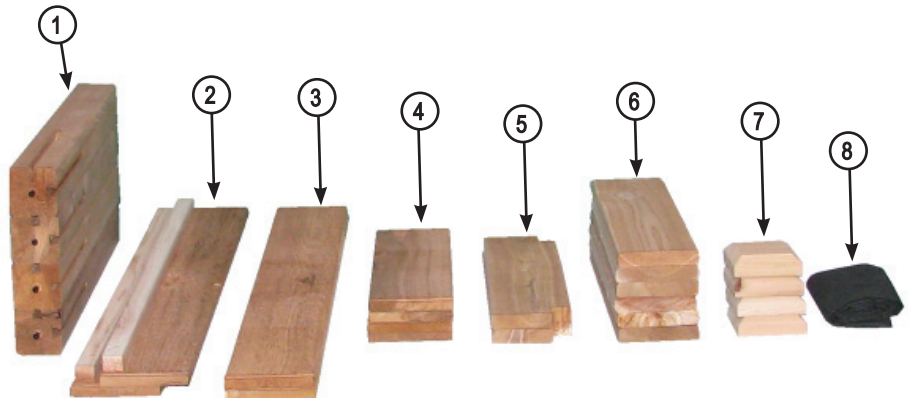

Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	R7012	Corner Post, 4" x 4" x 30" w/11" Dovetail Depth
2	2	R7011	Side Rail w/Cleat, 45" x 5-1/2" x 1"
3	2	R4501, R4501L	Side Rail (one w/Logo), 45" x 5-1/2" x 1"
4	4	R7007	Side Rail, 21" x 5-1/2" x 1"
5	2	R1201	Corner Notched Bottom Board, 22" x 5-1/2" x 1"
6	6	R1200	Bottom Board, 22" x 5-1/2" x 1"
7	4	R3100	Post Cap, 4" x 4" x 1-1/2"
8	1	2003	Fabric Liner, 36" x 52"


2 Side Rail Assembly

Stand two 4" x 4" X 30" corner posts (Item 1) upright with slots facing you and slots facing each corner post.

Locate a 45" x 5-1/2" side rail w/cleat (Item 2). With cleat located at the bottom and facing you, install side rail w/cleat into the slots and slide down to the bottom of the slots.

Repeat procedure for the two remaining corner posts and 45" x 5-1/2" side rail w/cleat.

(Soil depth option: Cleats located as shown will provide a soil depth of approximately 9". Reverse side rail w/ cleat installation, cleats located at top, if a soil depth of approximately 6" is desired).

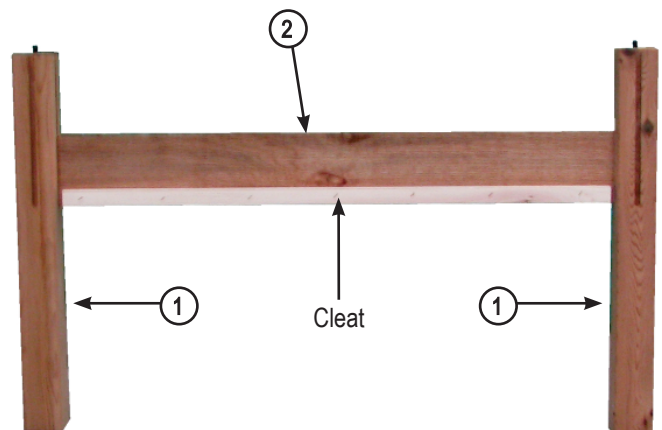


Packaged & Inspected by:

Date:

Continued

3 End Rail Assembly

Install two 21" x 5-1/2" side rails (Item 4) into the upper part of the slots on the two corner posts and slide down to the bottom of the slots.

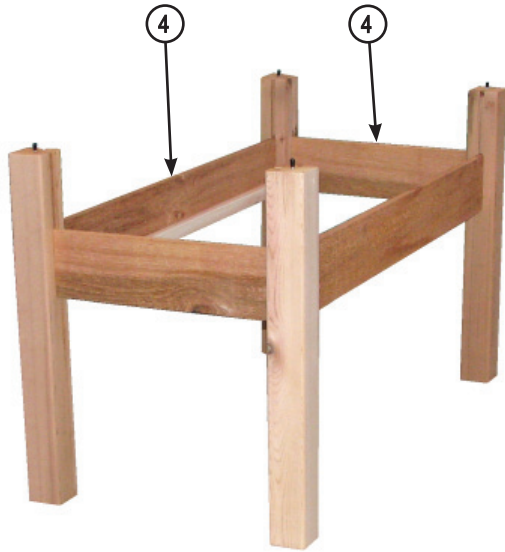


5 Bottom Board and Fabric Installation

Place one 22" x 5-1/2" corner notched bottom board (Item 5) on each end of the garden bed.

Place six 22" x 5-1/2" bottom boards (Item 6) into the garden bed. (Gap boards evenly to allow for water drainage).

Install fabric liner into the planter box.


Soil Capacity: 5.4 Cubic Feet

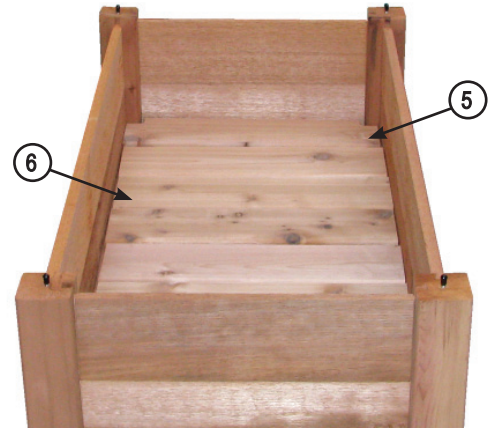

4 Final Side Rail Assembly

Install two 45" x 5-1/2" side rails (Item 3) (one with logo) into the slots on each side of the garden bed and slide down. (Side rail with Logo located to outside).

Install two 21" x 5-1/2" side rails (Item 4) into the slots on each end of the garden bed and slide down.

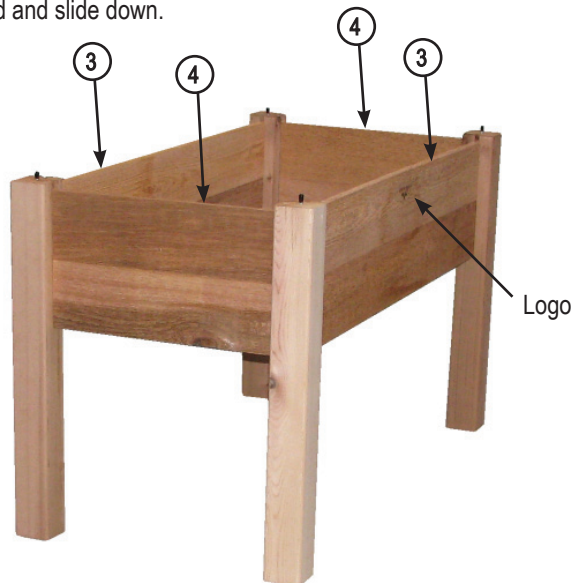

6 Post Cap Assembly

Remove the rubber cap from the corner posts studs.

Align the hole of the 4" x 4" post cap (Item 7) with stud and tighten until the cap makes contact with the post.

NOTE: Do not overtighten.

Repeat procedure on all posts.

