

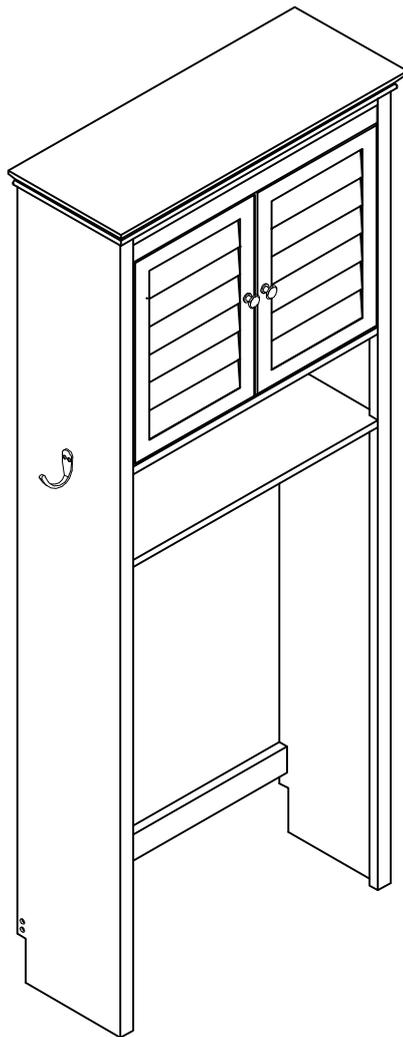
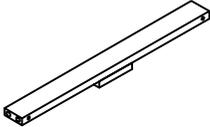
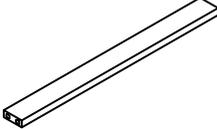
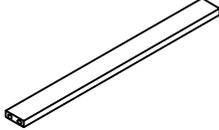
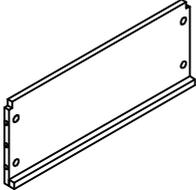
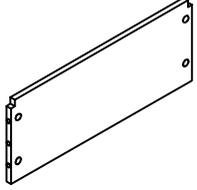
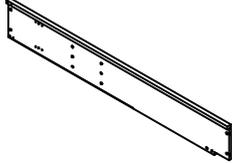
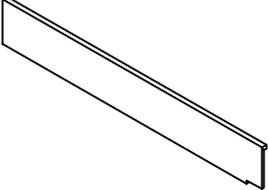
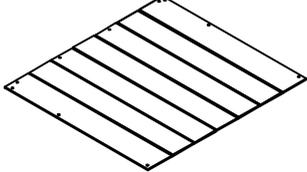
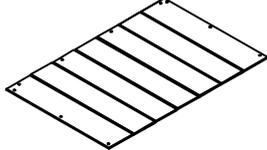
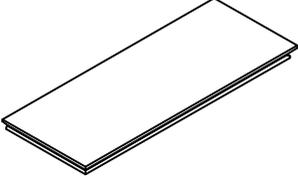
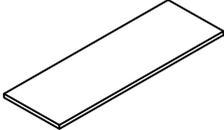









Lydia Space Saver Bathroom Cabinet
CF7002




PART LIST

 <p>Front Top Rail</p>	 <p>Back Top Rail</p>	 <p>Back Bottom Rail</p>			
<p>1</p>	<p>1pc</p>	<p>2</p>	<p>1pc</p>	<p>3</p>	<p>1pc</p>
 <p>Up Fixed Shelf</p>	 <p>Down Fixed Shelf</p>	 <p>Right Side Panel</p>			
<p>4</p>	<p>1pc</p>	<p>5</p>	<p>1pc</p>	<p>6</p>	<p>1pc</p>
 <p>Left Side Panel</p>	 <p>Up Back Panel</p>	 <p>Down Back Panel</p>			
<p>7</p>	<p>1pc</p>	<p>8</p>	<p>1pc</p>	<p>9</p>	<p>1pc</p>
 <p>Top Panel</p>	 <p>Shelf Panel</p>	 <p>Left Door</p>			
<p>10</p>	<p>1pc</p>	<p>11</p>	<p>1pc</p>	<p>12</p>	<p>1pc</p>
 <p>Right Door</p>					
<p>13</p>	<p>1pc</p>				

HARDWARE LIST

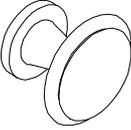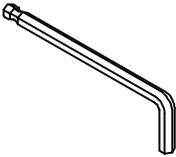 <p>Cam Lock Ø15*12mm</p>		 <p>Cam Bolt Ø6*42mm</p>		 <p>Wood Dowel Ø8*30mm</p>	
A	16pcs	B	16pcs	C	10pcs
 <p>Bolt Ø6*25mm</p>		 <p>Screw Ø3*15mm</p>		 <p>Shelf Support Ø6.5mm</p>	
D	4pcs	E	26pcs	F	4pcs
 <p>Knob Ø29*27mm</p>		 <p>Round Head Bolt Ø5/32"*19mm</p>		 <p>Magnet L70*H12mm</p>	
G	2pcs	H	2pcs	I	1pc
 <p>Wall Anchor Ø8*38mm</p>		 <p>Screw Ø4*38mm</p>		 <p>Hook W40*38mm</p>	
J	2pcs	K	2pcs	L	2pcs
 <p>Screw Ø3*12mm</p>		 <p>Allen Key 4mm</p>			
M	4pcs	N	1pc		

EXTRA HARDWARE LIST

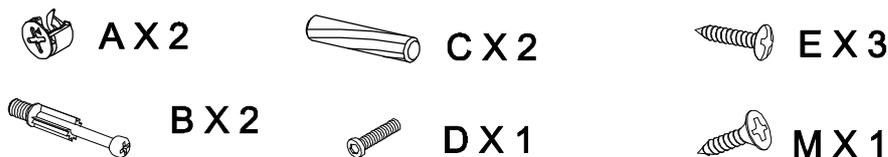


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly. However a screw gun can assist with mounting




Step 1. Attach Knob (G) to Doors (12 & 13) using Round Head Bolt (H) .
Attach Magnet (I) to Front Top Rail (1) using Screw (E) .

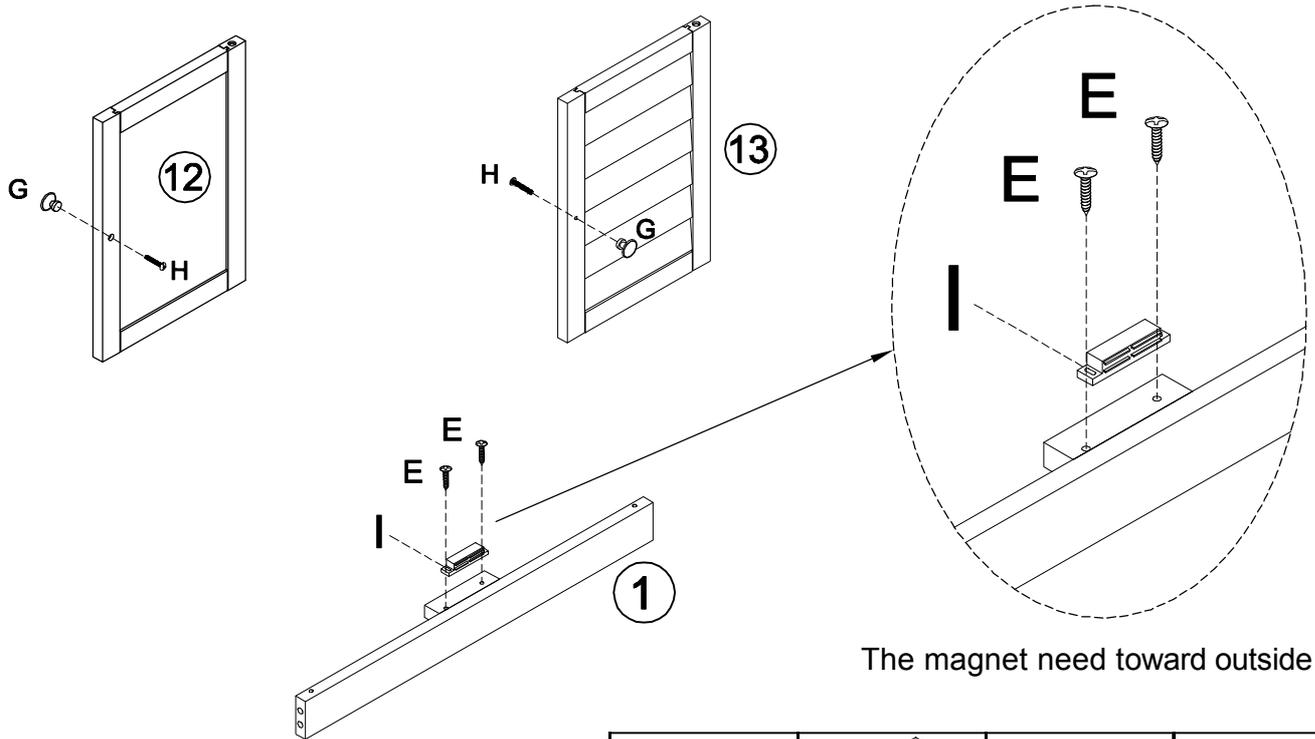

			
E x 2	I x 1	H x 2	G x 2

Step 2. Fix Cam Bolt (B) to Side Panels (6 & 7) and Top Panel (10), as shown .


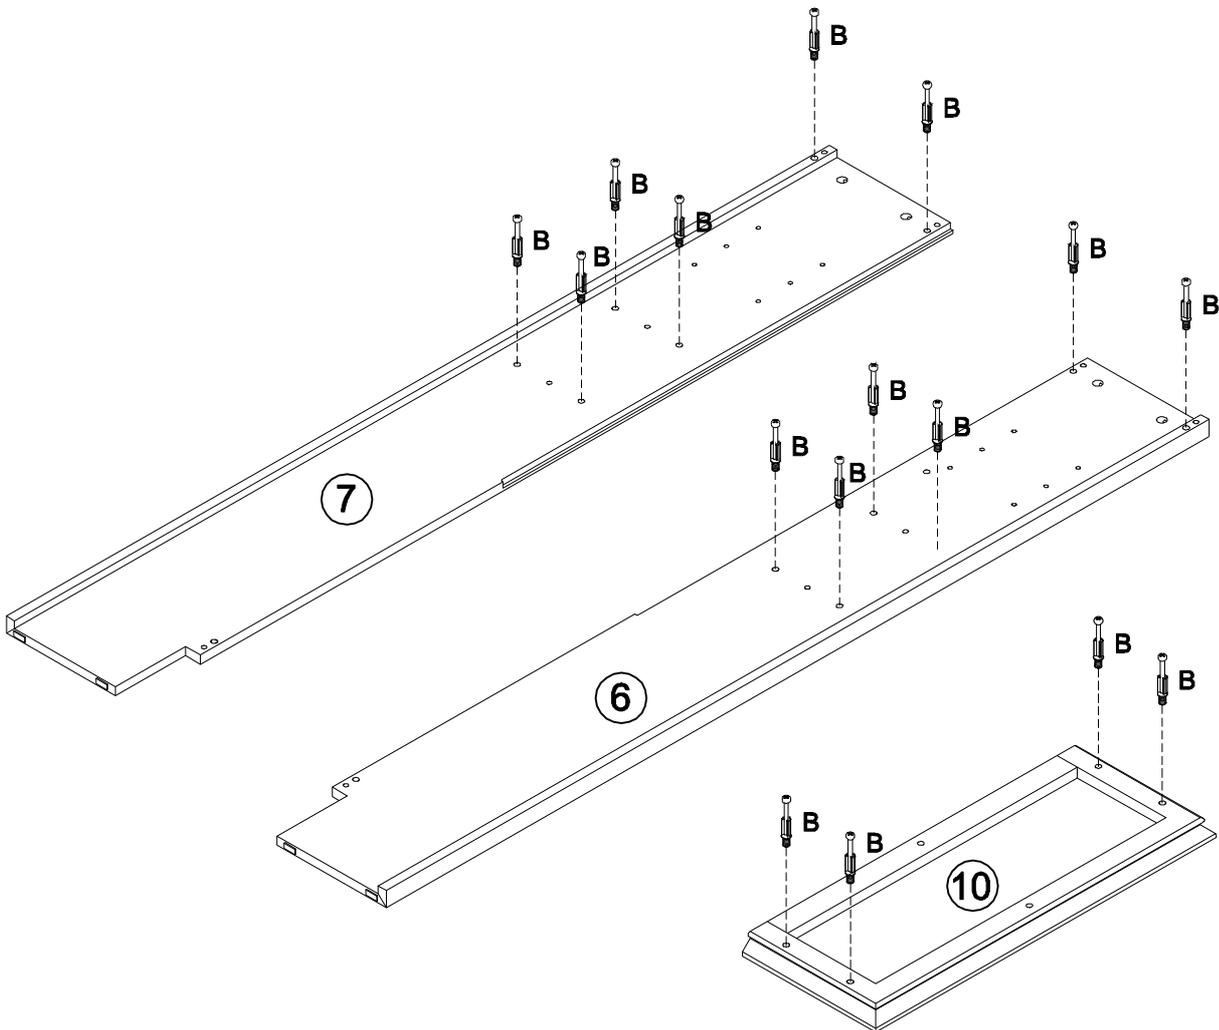


4


B x 16

Step 3. Attach Back Bottom Rail (3) to Right Side Panel (6) using Wood Bolt (D) and Allen Key (N) . Attach Top Rail (1 & 2) and shelf (4 & 5) to Right Side Panel (6) using Wood Dowel (C) and Cam lock (A) .



NOTE: Do not fully tighten Cam locks at this time.

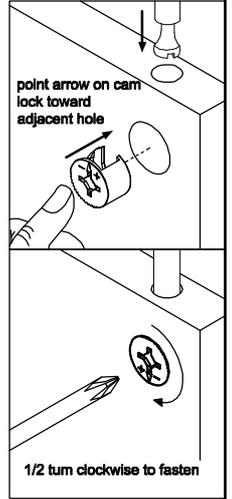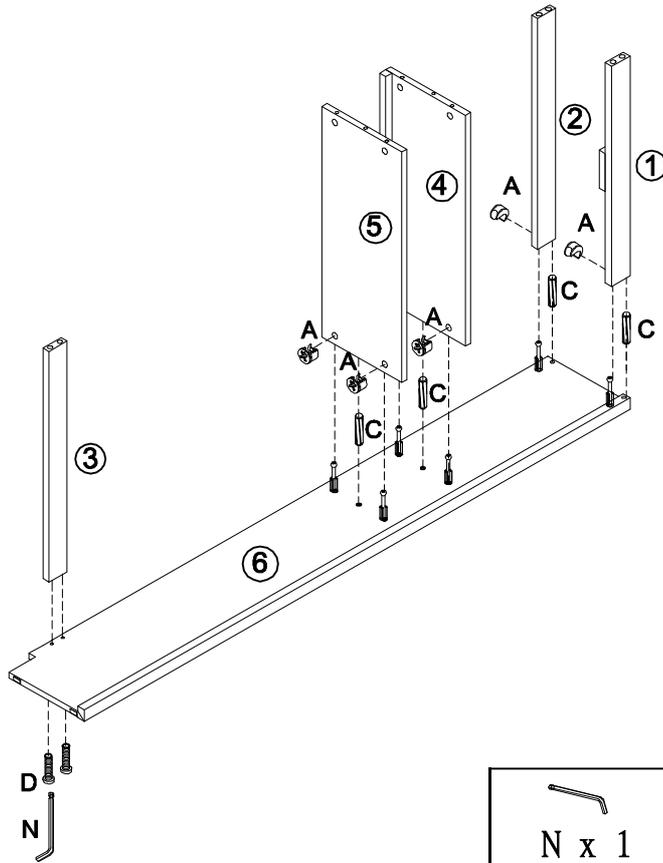

			
N x 1	A x 6	C x 4	D x 2

Step 4. Set Left Side Panel (7) into place using Wood Dowel (C), Bolt (D) and Cam lock (A) .



NOTE: Once Left Side Panel are in place, fully tighten all Cam locks.

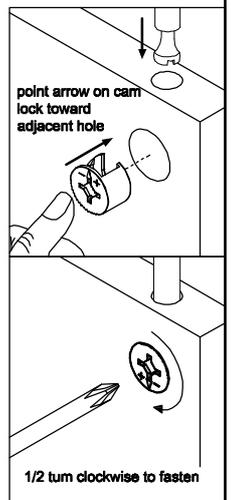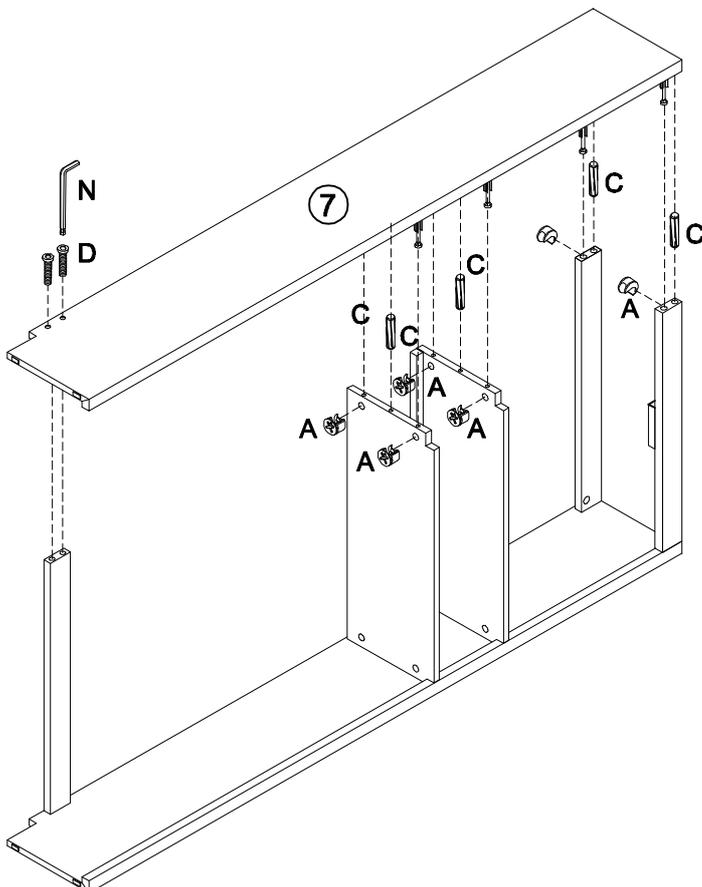

5


		
A x 6	C x 4	D x 2

Step 5. Set Top Panel (10) into place using Wood Dowel (C) and Cam lock (A) .

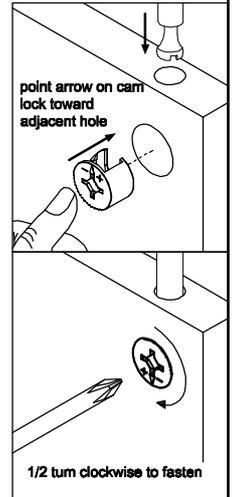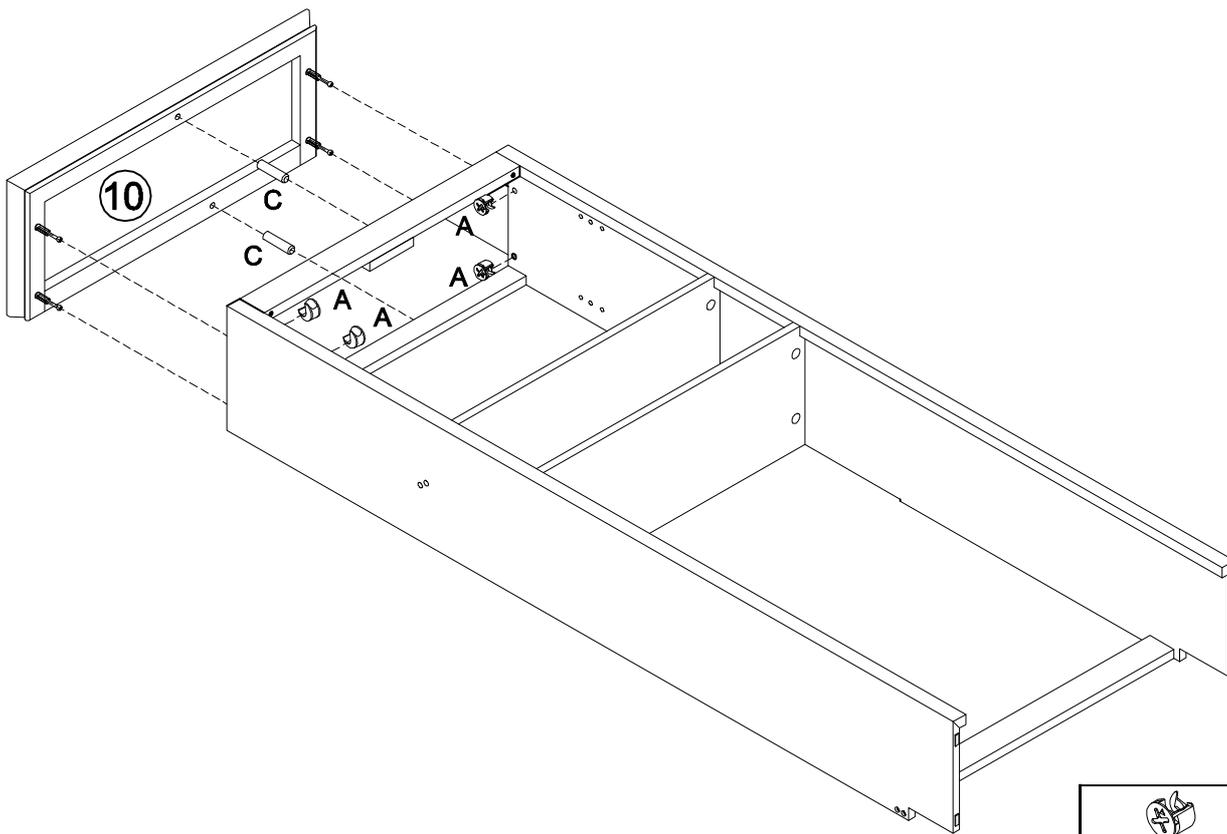

 A x 4	 C x 2
--	--


Step 6. Set Back Panel (8 & 9) into place using Screw (E) .

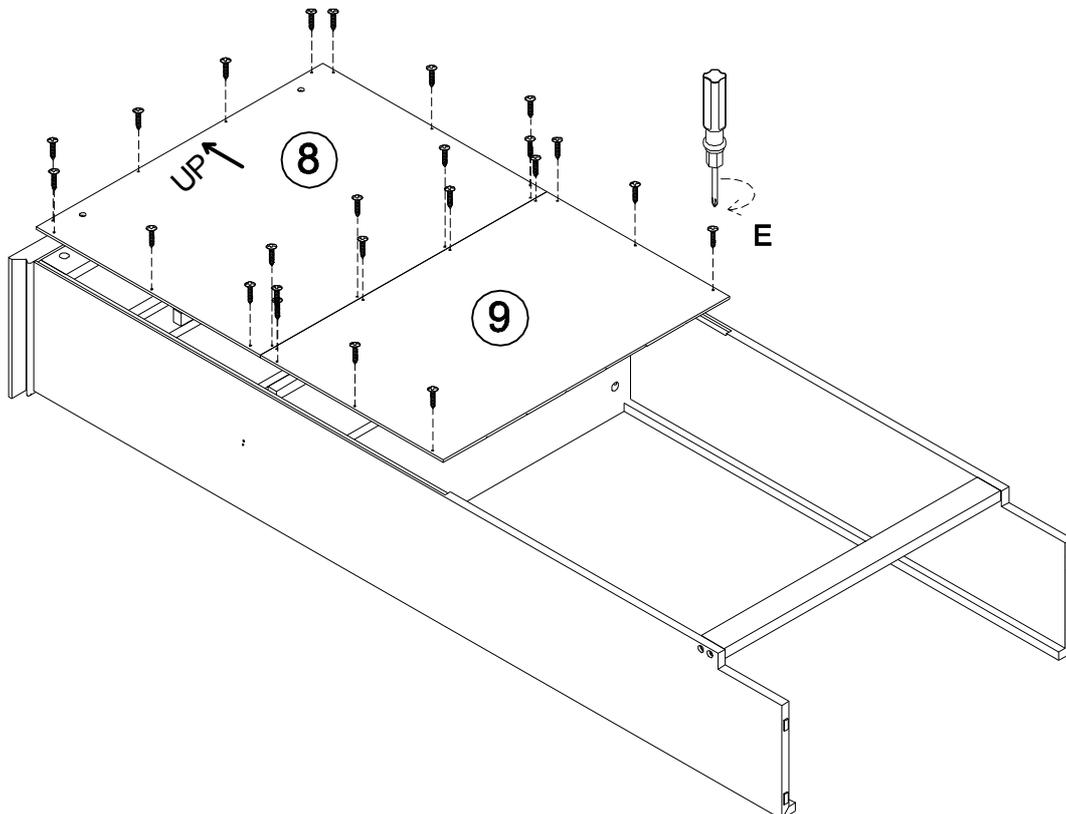

6


 E x 24

Step 7. Attach Hook (L) to Side Panels (6 & 7) using Screw (M) .


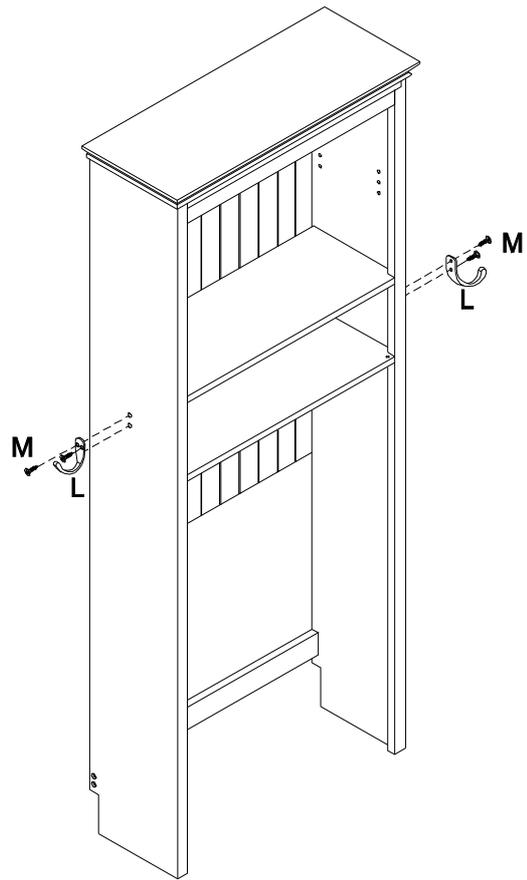


 M x 4	 L x 2
--	--

Step 8. Set Wood Door (12 & 13) into place .

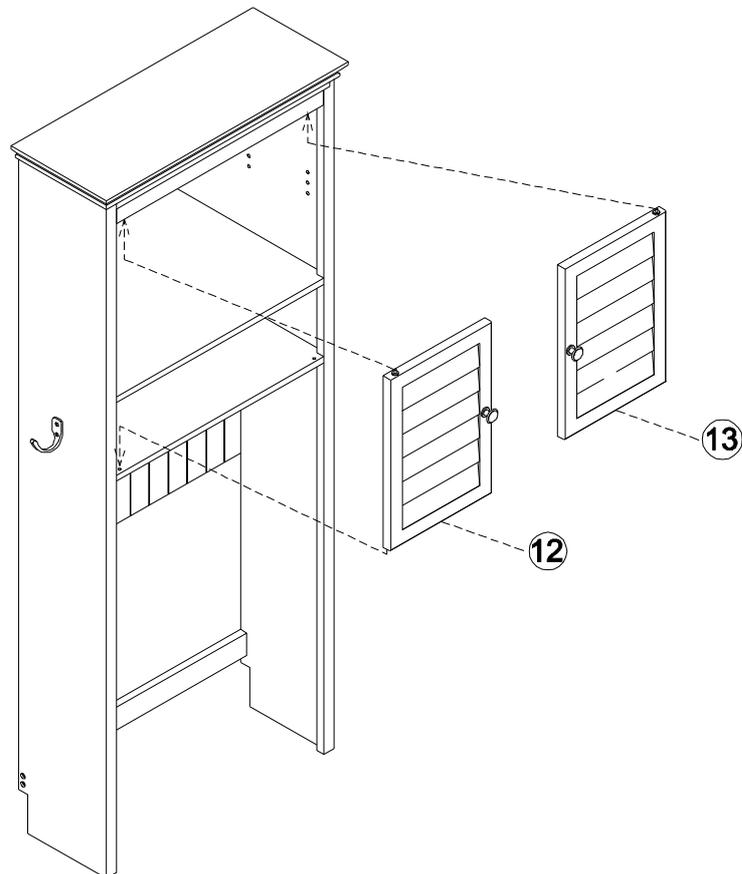

Step 9. Drill two 11/32" holes where you want to secure your pantry .The hole should be at the same height as the hole in the back panel (Part #8) of this unit . Tap Wall Anchor(J) into the hole . Insert Screw (K) through Back Panel (8) into Wall Anchor (J).

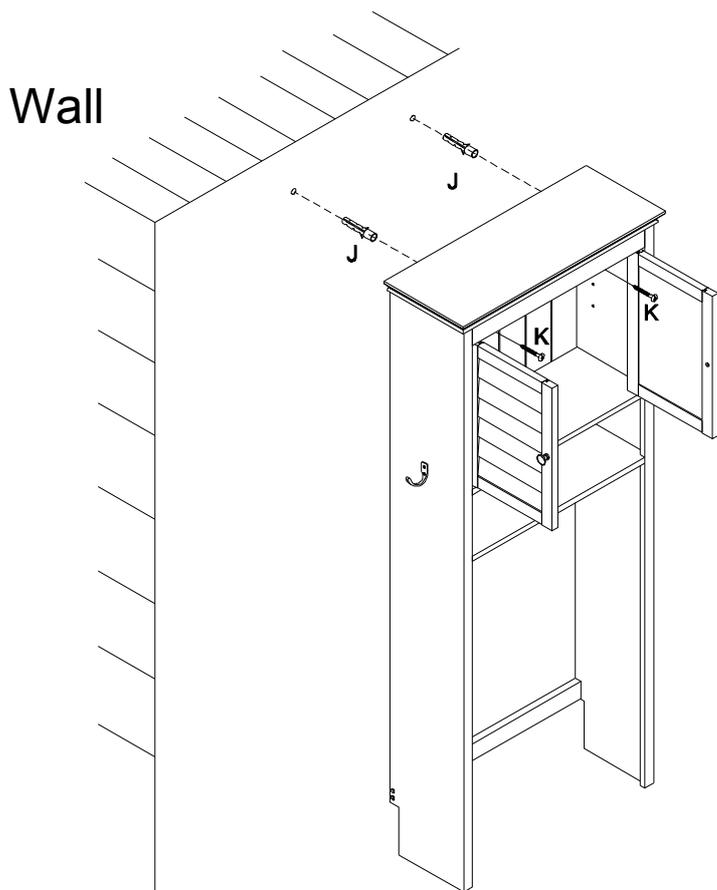

Step 10. Attach Shelf Support (F) into the hole .Insert Shelf Panel (11) to place .

