


33 3/4"

18 1/8"


5 7/8"


29 3/4"

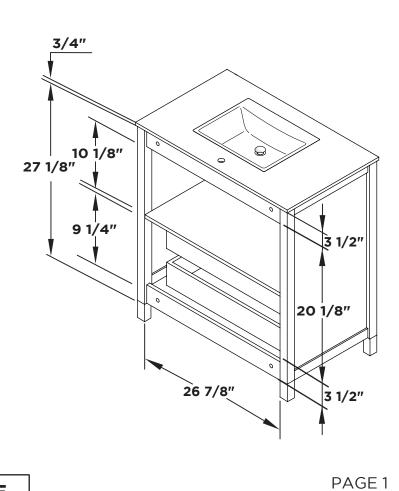


Vanity Back


INSTALLATION GUIDE

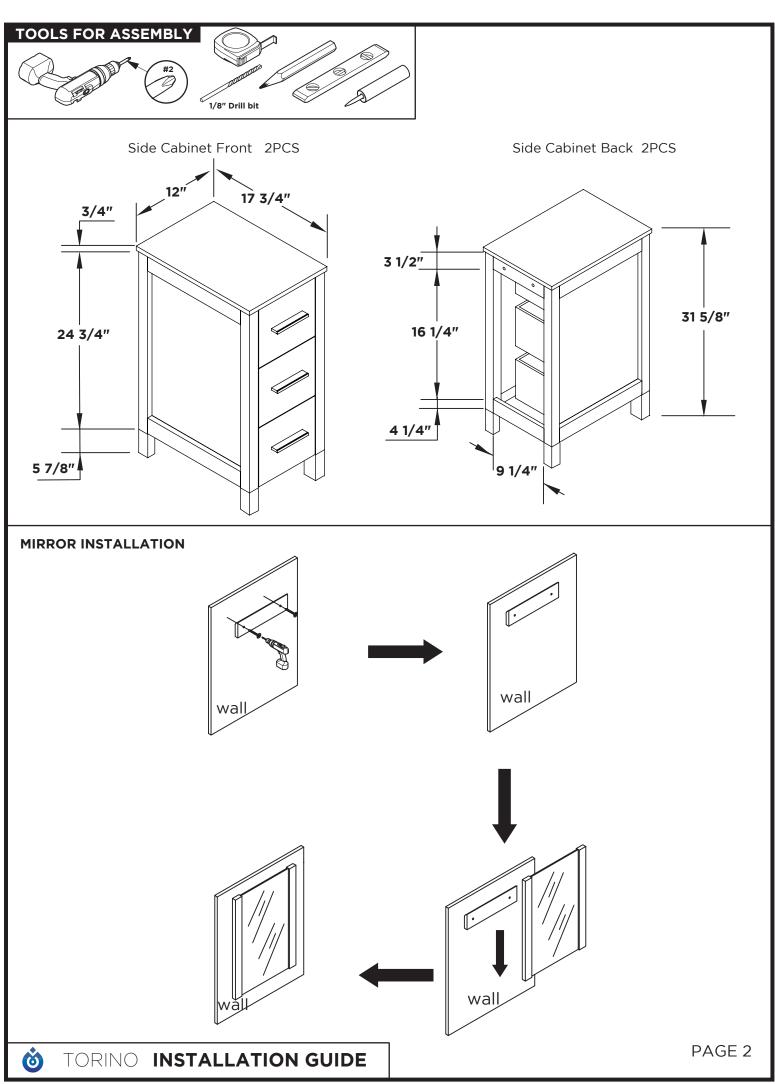


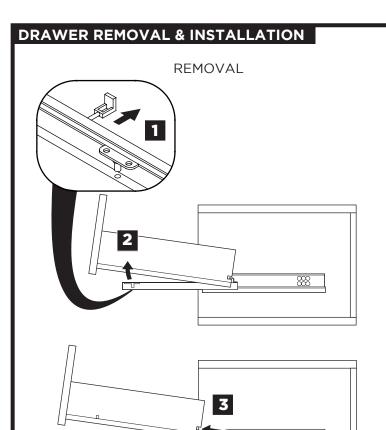

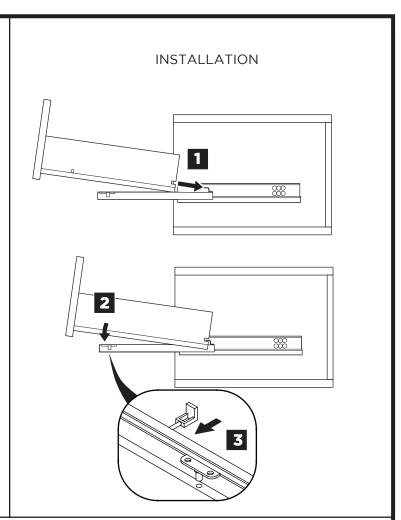

Install leg

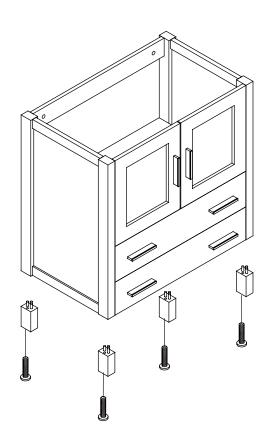

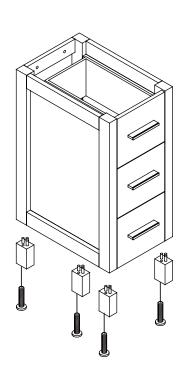

TORINO INSTALLATION GUIDE


PAGE 3



3 Install cabinet


IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions.

Screws provided do not attach to all wall construction types.

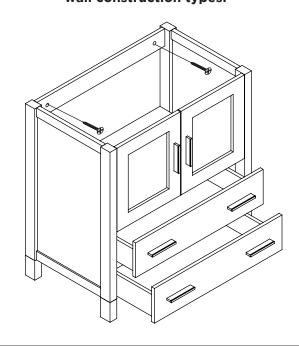


FILCONE

- **5** Remove side cabinet drawer
- 6 Install side cabinet

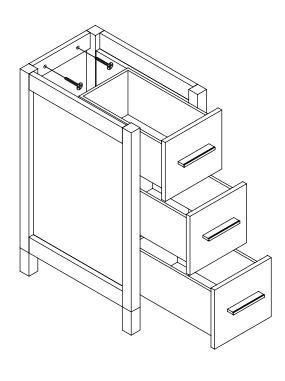

7 Install side cabinet top panel

Install top panel

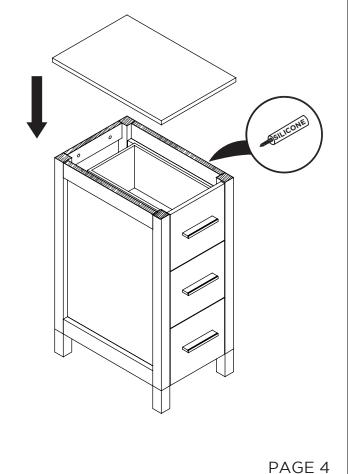

Ö TORING

TORINO INSTALLATION GUIDE

