

VERMICULITE, EMBER AND GRATE PLACEMENT

VERMICULITE SHOULD BE USED FOR PROPANE INSTALLATIONS ONLY.
Be sure to make the orifice changes, outlined in your installation manual.

- A. Spread vermiculite over the installed burner pan. Vermiculite should be sloped to the same angle as the burner pan, filling the entire pan. (See Figure 7A.)
- B. Spread glowing embers evenly over the top of the vermiculite, covering the entire surface area, concentrating on the front and sides of the burner pan for the most realistic burning effect.
- C. Place log grate over the burner pan aligning as shown. (See Figure 7B.)
- D. Attach back log stand-off to the back part of the grate. (See Figure 7B.)

NOTE: A hammer may be used to tap the back log stand-off in place. It may be necessary to squeeze the back log stand-off with pliers after attaching to the grate.

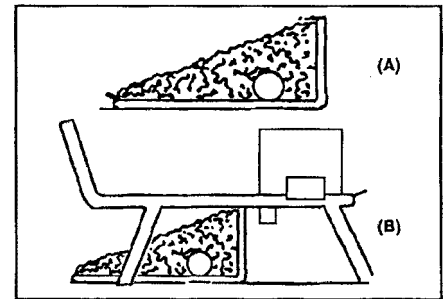


Figure 7 (A & B) Granule and vermiculite/
Grate Placement

