

Platform Bed

Contains One (1) Bed and Hardware

IMPORTANT NOTE:


Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.

TOOLS REQUIRED:


Phillips Screwdriver

PARTS LIST


A. Headboard and Footboard (2 pcs)

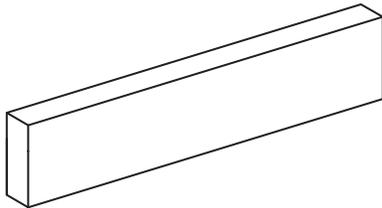


B. Side Rail (2 pcs)

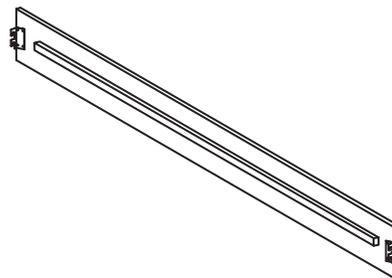


C. Corner Leg (4 pcs)

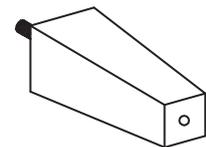

D. Center Support (1 pc)

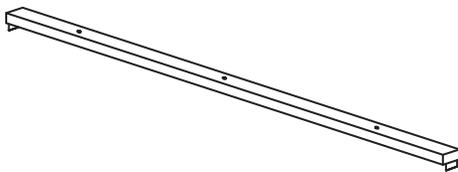

E. Wood Slat System (1 pc)

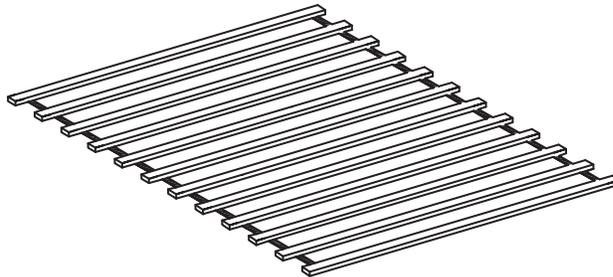


F. Center Leg (3 pcs)




HARDWARE LIST


G. 40mm Bolt (3 pcs)



H. Small Hex Key (1 pc)

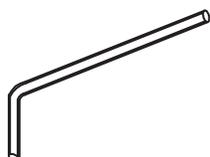

I. Large Hex Key (1 pc)

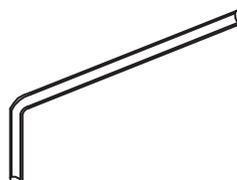

J. 16mm Screw (2 pcs)




K. 32mm Screw (9 pcs)




ASSEMBLY INSTRUCTIONS

STEP 1

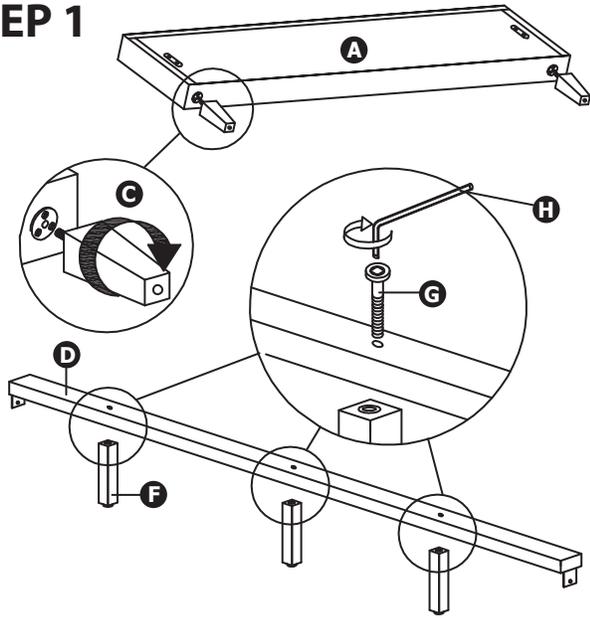


Attach the Corner Legs (Part C) to the Headboard (Part A) and Footboard (Part A) by rotating the legs clockwise until tightened. Attach the Center Legs (Part F) to the Center Support (Part D) using 40mm Bolts (Part G) and secure with the Small Hex Key (Part H).

STEP 2

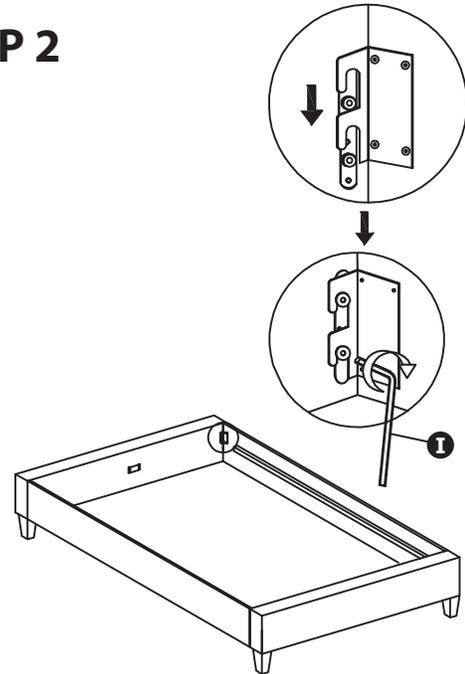


Attach Side Rails (Part B) to the Headboard and Footboard by sliding the brackets on the Side Rail onto the bolts of the Headboard and Footboard. Secure with the Large Hex Key (Part I)

STEP 3

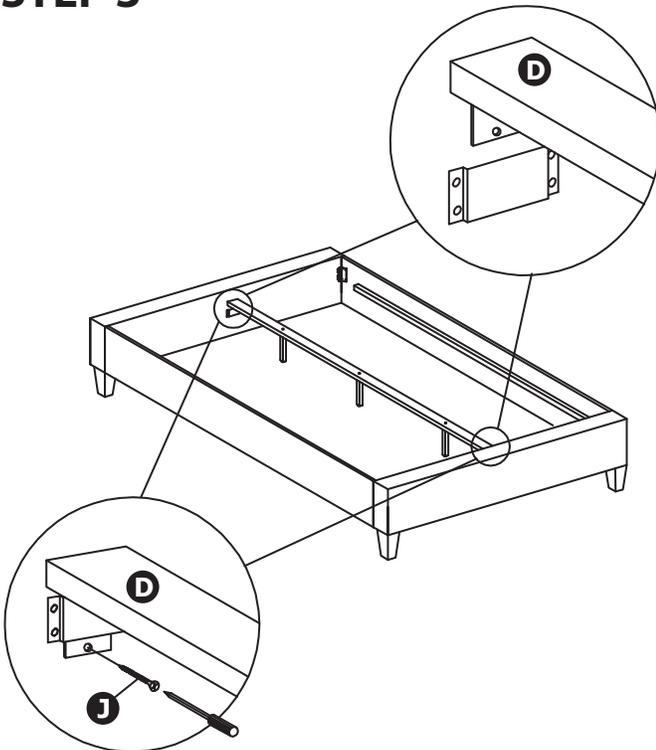

Insert the Center Support (Part D) into the slots on the Headboard and Footboard. Secure it using the 16mm Screws (Part J) and a Phillips Screwdriver.

STEP 4

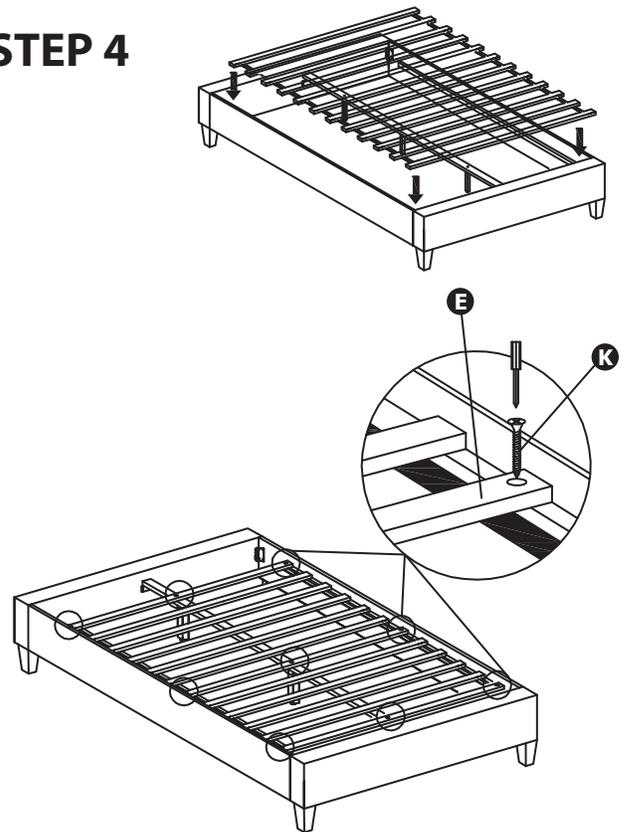

Roll out the Wood Slat System (Part E) and secure it in place with nine 32mm Screws (Part K) using the pre-drilled holes and a Phillips Screwdriver. Your Platform Bed is now completely set up and ready for use.