


Out-of-Plumb: >>

Your walls are Out-of-Plumb if the side walls of the shower enclosure are not vertically level and lean or bow in any direction.

Plumb vs Out-of-Plumb: >>

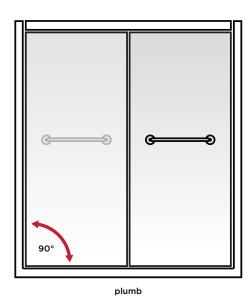

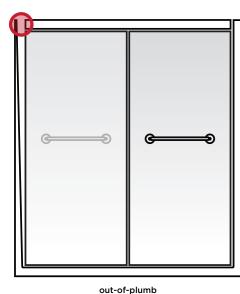

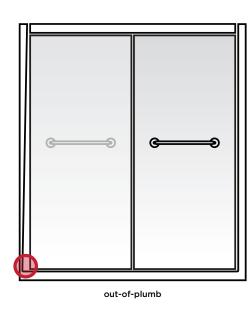

Most Delta Shower Doors are designed to accommodate out-of-plumb conditions up to 3/8".

