

Brass construction

mineral buildup

Requires a Rite-Temp valve
Complements Margaux Suite

ASME A112.18.1/CSA B125.1

[K-T16233]

• ASSE 1016

• MasterClean™ sprayface on showerhead resists

Push button diverter on bath and shower trim models


Available with cross handle or lever handle

Codes/Standards Applicable Specified model meets or exceeds the following:

Features

MARGAUX_® RITE-TEMP_®

BATH AND SHOWER TRIM **K-T16233** ALSO K-T16234, K-T16235, K-T16246

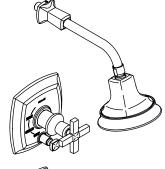



Colors/Finishes

- CP: Polished Chrome
- Other: Refer to Price Book for additional colors/finishes
- Accessories
- NA: None applicable

•					
Model	Description	Colors/Finis	Colors/Finishes		
K-T16233-3	Bath and shower trim – cross handle (shown)	🗆 CP	Other		
K-T16233-4	Bath and shower trim – lever handle	🗆 CP	Other		
K-T16234-3	Shower trim only – cross handle	🗆 CP	Other		
K-T16234-4	Shower trim only – lever handle	🗆 CP	Other		
K-T16235-3	Valve trim – cross handle	🗆 CP	Other		
K-T16235-4	Valve trim – lever handle	🗆 CP	Other		
K-16246	Bath spout	□ CP	Other		
Required Accessories					
K-304-*	Rite-Temp _® valve OR		🗅 NA		
K-2971-KS	HiFlow Rite-Temp valve with stops OR		🗅 NA		
K-11748-K	Rite-Temp valve with diverter OR		🗅 NA		

Product Specification

The bath and shower trim shall be made of brass construction. Faucet trim shall be available with a cross handle or a lever handle. Product shall feature a push button diverter on bath and shower trim models [K-T16233]. Showerhead shall feature a MasterClean sprayface on showerhead which resists mineral buildup. Product requires a Rite-Temp valve. Product shall complement the Margaux Suite. Bath and shower trim shall be Kohler Model K-T_____ or K-____ and Rite-Temp valving shall be K-_____-NA.

Specified Model

MARGAUX_® RITE-TEMP_®

Required Accessories							
K-11748-KS	Rite-Temp valve with diverter and stops						
* For a complete listing of all the Rite-Temp valves, refer to the K-304-* Specification Sheet or Roughing-In Sheet.							
				-			
Optional Accessories							
88526	HiFlow Rite-Temp $_{\ensuremath{\mathfrak{B}}}$ thin wall installation kit	□ CP	□ Other _				

Installation Notes


Install this product according to the installation guide.

NOTICE: Risk of product damage. Long screws, for installing trim, can damage the K-2971-KS valve. Consult the trim installation guide to verify if the thin wall installation kit (88526) is needed.

Avoid cross-flow conditions. Do not install shut-off device on either valve outlet.

Cap shower outlet if deck-mount spout, diverter, or handshower is connected to spout outlet.

Install straight pipe or tube drop of 7" (17.8 cm) to 18" (45.7 cm) with single elbow between the valve and wall-mount spout.

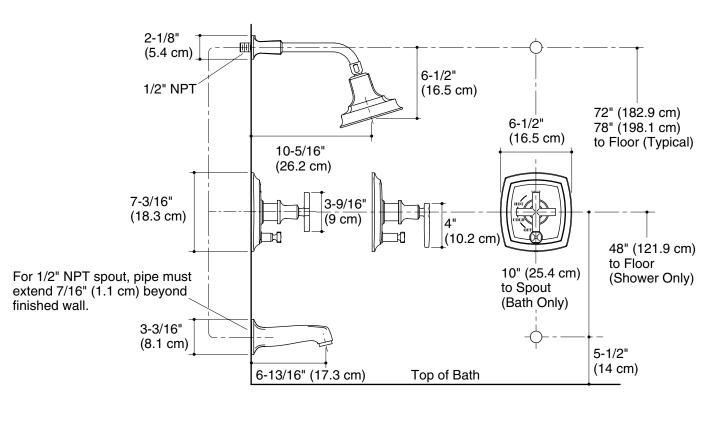

Product Diagram



