


## Install 18" x 36" window/shutter kit

1. Cut a 18-3/8" x 35-3/4" opening in siding, between the wall studs, where you want the window to be located. Caulk along the top edge of the window. Secure window with screws provided.

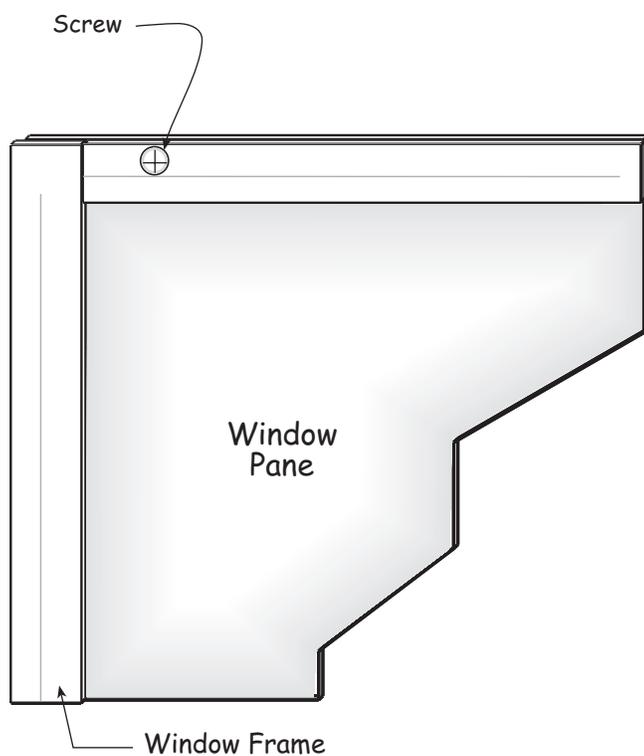

2. Install wood shutters with 1-1/4" wood screws from the main building kit. Screw through the backside of the siding into the shutters.  
For vinyl shutters, install shutters with fasteners provided.