

Colorful Mason Jar Organizers



COLORFUL MASON JAR ORGANIZERS

Add a vibrant look to your space with a variety of colors!

ITEMS:

- Painters Touch Ultra Cover Spray Paint in Satin Apple Red, Vintage Teal & Rustic Orange
- Painters Touch Ultra Cover Spray Paint in Gloss Spring Green
- Disposable Nitrile Gloves & Clean lint-free rags
- Mason Jars
- Old sheets or drop cloth
- Glass Cleaner

STEPS:

Prepare Always work in a well-ventilated area. Cover the floor and nearby items with drop cloths. Clean Jars with Glass Cleaner and lint-free cloth. Make sure jars are completely dry. Turn jars upside down onto drop cloth.

Paint Shake can for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the jar and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply 2 or more light coats a few minutes apart.

Finish Allow the jars to dry completely for 24 hours and then enjoy your bright new creations!

SKILL LEVEL
BEGINNER

PROJECT TIME
<1 Hr

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

Mantel Top Tulip Display Jars



Accent your mantel with beautifully simple painted jars

SKILL LEVEL
BEGINNER

PROJECT TIME
<30 Mins

MANTLE TOP TULIP DISPLAY JARS

Create trendy, eye popping flower display jars in 3 easy steps to add a bright touch to your Easter mantel. Mix and match your favorite flowers with any of the Painter's Touch Ultra Cover 2X colors to showcase your creativity!

ITEMS:

- Painter's Touch Ultra Cover 2X spray paint in Satin Lemon Grass
- Flowers
- Mason jars
- Drop cloth
- Glass cleaner
- Lint-free cloth
- Disposable Nitrile gloves

STEPS:

Prepare: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Clean the jars with glass cleaner and a lint-free cloth. Make sure the jars are completely dry. Turn jars upside down onto the drop cloth.

Paint: Shake can for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more light coats a few minutes apart.

Finish: Allow the jars to dry for approximately 24 hours and then display your beautiful arrangement!

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

Faux Bird House Setting

Simple DIY painted bird houses for your mantel display



SKILL LEVEL
BEGINNER

PROJECT TIME
<1 Hr

FAUX BIRD HOUSE SETTING

Bring the comfort and peace of the garden into the quietness of your home décor. All it takes is a little spray paint and some imagination to transform your mantel display.

ITEMS:

- Painter's Touch Ultra Cover 2X spray paint in Satin Eden & Green Apple
- Rust-Oleum Universal Metallic spray paint in Pure Gold
- Wooden bird houses
- Birds, books & ribbon
- Moss or flowers
- Drop cloth
- Disposable Nitrile gloves
- Sandpaper
- Lint-free cloth

STEPS:

PREPARE: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Lightly sand the bird houses and wipe off the dust with a lint-free cloth.

PAINT:

Ultra Cover 2X: Shake can for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more light coats a few minutes apart.

Universal: Shake can for 1 minute after the ball begins to rattle. Hold can upright 8-12" from the jar and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more moderate coats a few minutes apart.

FINISH: Allow the bird houses to dry for approximately 24 hours. Set the scene with faux birds and cozy elements to create your nature-inspired construction! Optional Look (as shown): Use sandpaper or a sanding sponge to distress the bird house edges for your desired look and wipe clean with a lint-free cloth.

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

DIY Rustic Bunny Wire Picture Frame



Create your own rustic picture frame in a few simple steps

SKILL LEVEL
BEGINNER

PROJECT TIME
<2 Hrs

DIY RUSTIC BUNNY WIRE PICTURE FRAME

Personalize a DIY wire picture frame for your decorative shelving with some spray paint. Bring the old school feel to your Easter décor and customize with any photo or color of your choice!

ITEMS:

- Painter's Touch Ultra Cover 2X spray paint in Satin Moss Green
- Rust-Oleum Universal Metallic spray paint in Pure Gold
- Wooden picture frame
- Chicken wire & metal clip
- Drop cloth & lint-free cloth
- Disposable Nitrile gloves
- Sandpaper
- Wire cutter
- Staple gun

STEPS:

PREPARE: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Remove any existing backing from the picture frame. Lightly sand the frame and wipe away dust with a lint-free cloth. Cut chicken wire to slightly larger than the frame opening and set aside to be painted. Make sure all items are completely dry before painting.

PAINT:

Frame: Shake can of Ultra Cover 2X Satin spray paint for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more light coats a few minutes apart.

Chicken wire and clip: Shake can of Universal Metallic spray paint for 1 minute after the ball begins to rattle. Hold can upright 8-12" from the jar and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more moderate coats a few minutes apart.

FINISH: Allow the frame and wire to dry for 1 hour before handling. Use the staple gun to secure the chicken wire to the back of the picture frame. Let the completed frame dry completely for 24 hours. Once dry, clip on your favorite bunny photo and display on your Easter mantel!

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

Baskets Full of Eggs

Festive baskets full of painted Easter eggs laid in hay



SKILL LEVEL
BEGINNER

PROJECT TIME
<1.5 Hr

BASKETS FULL OF EGGS

Put your eggs in more than one basket with this decorative arrangement. Be ready for the celebration with these trendy colors provided in an easy-to-use spray can.

ITEMS:

- Painter's Touch Ultra Cover 2X in Satin French Lilac, Sweet Pea & Lemon Grass
- Rust-Oleum Universal Metallic spray paint in Pure Gold
- Ceramic or wooden eggs
- Basket stand
- Bunny, ribbon & hay
- Drop cloth
- Lint-free cloth
- Disposable Nitrile gloves

STEPS:

Prepare: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Lightly sand the wooden eggs and wipe off the dust with a lint-free cloth. Make sure your wooden eggs are clean and dry before beginning to spray.

Paint: Ultra Cover 2X: Shake can for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Once the painted area is dry to the touch (about 20 minutes), rotate the egg to spray again. Repeat the process until the entire egg is coated. For best results, apply 2 or more light coats a few minutes apart.

Universal: Shake can for 1 minute after the ball begins to rattle. Hold can upright 8-12" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Once the painted area is dry to the touch (about 30 minutes), rotate the egg to spray again. Repeat the process until the entire egg is coated. For best results, apply 2 or more moderate coats a few minutes apart.

Finish: Allow the eggs to dry completely for 24 hours before handling. Once dry, gently place your eggs in the basket and form your Easter display!

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

PAINTED WATERING CANS

Add cheerful design to your home garden with painted watering cans. With excellent coverage, Rust-Oleum Painter's Touch Ultra 2X spray paint allows you to complete your project quickly with no fuss!

Painted Watering Can Container Garden



Colorful charming watering cans for your garden

ITEMS:

- Painter's Touch Ultra Cover 2X Gloss spray paint in Golden Sunset
- Painter's Touch Ultra Cover 2X Satin spray paint in Oasis Blue
- Zinsser Bulls Eye 1-2-3 Primer spray
- Watering cans
- Flowers
- Drop cloth
- Disposable Nitrile gloves
- Lint-free cloth
- Potting soil
- Hand trowel

STEPS:

PREPARE: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Clean the watering cans with soap and water. Wipe completely dry with a lint-free cloth. Place the cans on a drop cloth and apply Zinsser Bulls Eye 1-2-3 Primer according to the directions on the can. **Note:** If your watering can is galvanized metal, use Bulls Eye 1-2-3 White Primer Quart and brush onto surface prior to paint.

PAINT: Shake can of Ultra Cover 2X for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more light coats a few minutes apart.

Tip: Start spraying the inside of the watering can first to reduce overspray.

FINISH: Allow the watering cans to dry for approximately 24 hours. Fill in the cans with the potting soil and flower seeds of your choice to set your springtime arrangement!

SKILL LEVEL
BEGINNER

PROJECT TIME
< 30 MINS

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

STENCILED TERRA COTTA POTS

Customize your flower pots with some spray paint and crafty stenciled designs. With a completely personalized look, Rust-Oleum spray paints brings vivid life to your garden.

Stenciled Terra Cotta Flower Pots

ITEMS:

- Painter's Touch Ultra Cover 2X Satin spray paint in Aubergine, Ink Blue, Vintage Teal & Magenta
- Painter's Touch Ultra Cover 2X Gloss spray paint in Golden Sunset
- Rust-Oleum Universal spray paint in Gloss Green Citrus
- Zinsser Bulls Eye 1-2-3 Primer spray
- Terra cotta pots
- Terra cotta saucers
- Stencils
- Drop cloth
- Painter's tape
- Paper
- Disposable Nitrile gloves
- Mini painting tray
- Small brush / sponge

STEPS:

Step 1: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Make sure the pots and saucers are completely dry before painting.

Step 2: Apply Zinsser Bulls Eye 1-2-3 Primer to the pots and saucers according to the directions on the can. Allow to dry for 1 hour.

Step 3: Cover the body of the pots with paper and painter's tape.

Step 4: Spray Ultra Cover 2X paint on the uncovered rim and matching saucer of each pot. Allow to dry for 1 hour before removing tape. (As shown: Magenta (left), Aubergine (middle), Ink Blue (right))

Step 5: Once dry, cover the top rim of the flower pots with paper and painter's tape.

Step 6: Apply Ultra Cover 2X and Universal spray paints on each pot according to the directions on the can. Allow to dry for 1 hour before removing tape. (As shown: Vintage Teal (left), Golden Sunset (middle), Green Citrus (right))

Step 7: Carefully cut stencils into desired shapes and sizes. Tape the stencils onto each pot and mask off any areas that should not be painted.

Step 8: Spray paint into a mini painting tray and use a small brush or sponge to dab paint over each stencil. Allow to dry for 1 hour before removing tape.

Step 9: Allow the flower pots to dry for approximately 24 hours. Plant your flowers and enjoy your decorative stencil creations!



Show off your creativity with custom painted flower pots

SKILL LEVEL
BEGINNER

PROJECT TIME
< 2 HRS

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



MODERN ROCKING HORSE

GIVE A BLAND ROCKING HORSE AN UPDATED LOOK



Use Rust-Oleum® Painter's Touch® Ultra Cover 2X to bring life to a dull rocking horse. Add bright colors and fun finishes to transform your rocking horse into a playful piece for children.

ITEMS

- Drop Cloth
- Lint Free Cloth
- Painter's Tape
- Large Plastic Bag
- Rocking Horse
- Rust-Oleum Painter's Touch Ultra Cover 2X Flat White Primer
- Rust-Oleum Painter's Touch Ultra Cover 2X spray paint
- Rust-Oleum Glitter spray paint

STEPS

- 1. PREPARE:** Always work in a well ventilated area. Cover nearby items with a drop cloth to protect them from paint splatters. Clean surfaces with a lint free cloth.
- 2. PAINT: Rocking Horse:** Shake can of Rust-Oleum Painter's Touch Ultra Cover 2X Flat White Primer spray paint for 1 minute after the mixing ball begins to rattle. Hold can upright 10-16" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply two or more light coats a few minutes apart. Let dry for approximately 20 minutes, then shake can of Rust-Oleum Painter's Touch Ultra Cover 2X spray paint for 1 minute after the mixing ball begins to rattle. Hold can upright 10-16" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply two or more light coats a few minutes apart to avoid drips and runs. Allow paint to dry for approximately 1 hour.
Handles: Once dry, cover the entire horse with a plastic bag, exposing only the handles of the Rocking Horse. Use Painter's Tape to secure the bag around the handles. Shake can of Rust-Oleum Glitter spray paint for 1 minute after the mixing ball begins to rattle. Hold can upright 12-14" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply two or more light coats a few minutes apart. Allow paint to dry for approximately 20 minutes, and then shake can of Rust-Oleum Glitter Clear Sealer for 1 minute after the mixing ball begins to rattle. Hold can upright 12-14" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply two or more light coats a few minutes apart.
- 3. FINISH:** Remove plastic bag, and allow your paint to dry for approximately 24 hours. Once dry, place your rocking horse for children to enjoy!

Always thoroughly review directions on the package before using any product.

1



2



3



As shown Painter's Touch Ultra Cover 2X Flat White Primer, Painter's Touch Ultra Cover 2X Gloss Berry Pink, Glitter Silver & Glitter Clear Sealer

 **RUST-OLEUM®**

Visit www.homedepot.com/rustoleum for other great ideas, products and inspiration.

COLORFUL PIECE OF ART

TRANSFORM AN OLD PICTURE FRAME INTO CHIC ART



Take an old picture frame and give it new life. With unique finishes and colors, Rust-Oleum spray paint will transform your old frame into a new, colorful piece.

ITEMS

- Drop Cloth
- Canvas
- Rust-Oleum Painter's Touch Ultra Cover 2X spray paint
- Lint Free Cloth
- Wooden Shape
- Rust-Oleum Glitter spray paint
- Picture Frame
- Adhesive Glue
- Rust-Oleum Fluorescent spray paint

STEPS

1. PREPARE: Always work in a well ventilated area. Cover nearby items with a drop cloth to protect them from paint splatters. Clean surfaces with a lint free cloth.

2. PAINT:

Frame: Shake can of Painter's Touch Ultra Cover 2X spray paint for 1 minute after the mixing ball begins to rattle. Hold can upright 10-16" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply two or more light coats a few minutes apart. Allow paint to dry for approximately 20 minutes.

Canvas: Shake can of Rust-Oleum Glitter spray paint for 1 minute after the mixing ball begins to rattle. Hold can upright 12-14" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply two or more light coats a few minutes apart. Allow paint to dry for approximately 20 minutes.

Wooden Shape: Shake can of Rust-Oleum Fluorescent spray paint for 1 minute after the mixing ball begins to rattle. Hold can upright 10-16" from surface and spray in a steady back and forth motion, slightly overlapping each stroke. Apply two or more light coats a few minutes apart.

3. FINISH: Allow your paint to dry for approximately 24 hours. Secure the canvas in the frame, and adhere the wooden shape with adhesive glue. Hang your colorful picture in your home and enjoy!

Always thoroughly review directions on the package before using any product.



As shown Painter's Touch Ultra Cover 2X Gloss White, Glitter Silver & Fluorescent Pink

RUST-OLEUM[®]

Visit www.homedepot.com/rustoleum
for other great ideas, products and inspiration.

POP OF COLOR

MAKE A CHIC STATEMENT WITH COLOR!

A pop of color on a piece of accent furniture can add style and character to any room! With twice the coverage of leading competitors, Painter's Touch Ultra Cover 2X spray paint helps you create a chic statement out of any ordinary object!

ITEMS

- Small dresser
- Sandpaper (fine grit)
- Tack cloth or lint-free rag
- Drop cloth
- Painter's Touch Ultra Cover 2X spray paint
- New hardware (optional)

STEPS

- 1. PREPARE:** Always work in a well ventilated area. Lightly sand all surfaces. Wipe clean with tack cloth, removing all dust. Remove all hardware and drawers for best results.
- 2. PAINT:** Shake can for 1 minute after the ball begins to rattle. Hold can 10-16" from the surface and spray in a steady back and forth motion, slightly overlapping each stroke. For best results, apply 2 or more light coats a few minutes apart.
- 3. FINISH:** Allow to dry for 24 hours. Add stylish hardware to complete your update!

Always thoroughly review directions on the package before using any product.

1



2



3



As shown Painter's Touch
Ultra Cover 2X Gloss Coral

 **RUST-OLEUM**[®]

Visit www.homedepot.com/rustoleum
for other great ideas, products and inspiration.

COASTAL CABINET

CREATE A STYLISH & FUNCTIONAL CABINET IN A BEAUTIFUL OCEAN HUE

This little piece adds beauty and storage to any room. With twice the coverage of leading competitors, Painter's Touch Ultra Cover 2X spray paint helps you create a personal piece in no time.

ITEMS

- Window front side cabinet
- Sandpaper (fine grit)
- Painter's tape
- Tack cloth or lint-free rags
- Drop cloth
- Painter's Touch Ultra Cover 2X spray paint
- New hardware (optional)

STEPS

- 1. PREPARE:** Always work in a well-ventilated area. Mask off or remove all glass. Lightly sand all surfaces. Wipe clean with tack cloth, removing all dust. Remove all hardware and doors for best results.
- 2. PAINT:** Shake can for 1 minute after the ball begins to rattle. Hold can 10-16" from the surface and spray in a steady back and forth motion, slightly overlapping each stroke. For best results, apply 2 or more light coats a few minutes apart.
- 3. FINISH:** Allow to dry for 24 hours. Replace doors and add stylish hardware to complete your update!

Always thoroughly review directions on the package before using any product.



As shown Painter's Touch
Ultra Cover 2X Gloss Ocean Mist

 **RUST-OLEUM**[®]

Visit www.homedepot.com/rustoleum
for other great ideas, products and inspiration.

UPCYCLE DESK

CREATE A FUNCTIONAL SPACE WITH A POP OF COLOR


With spray paint, stain and a few simple supplies, you can create a stylish work space in one afternoon. Select your favorite color of Varathane Wood Stain and Painter's Touch Ultra Cover 2X spray paint and get started!

ITEMS

- Drop cloth
- 4 wood planks at 15" x 4"
- 2 stools
- Sandpaper (120, 180, and 220-grit)
- Varathane Wood Stain
- Clean lint-free rags
- Painter's Touch Ultra Cover 2X spray paint
- Finishing nails and hammer
- Varathane Polyurethane

STEPS

- 1. PREPARE:** Always work in a well-ventilated area. Lightly sand all wood surfaces in the direction of the grain progressing from 120-grit, to 180-grit, finishing with 220-grit sandpaper. Wipe clean with tack cloth, removing all dust.
- 2. PAINT:** Shake can for 1 minute after the ball begins to rattle. Hold can 10-16" from the surface and spray in a steady back and forth motion. For best results, apply 2 or more light coats a few minutes apart. Allow to dry for 1 hour.
- 3. STAIN:** Wipe one coat of Varathane Wood stain all over the boards with lint-free rag. Wait 2-3 minutes and wipe excess stain away with a clean rag. Allow stain to dry for 1 hour. For the best protection, finish with any Varathane Polyurethane.
- 4. FINISH:** Place boards on top of the stools, leaving approximately a 1" overhang on each side. Nail each board to the top of the stool, ensuring boards fit snugly together to create a flat work surface. For added storage, you can also create a shelf on the bottom rungs of the stool using the same technique. Allow your project to dry overnight before use.

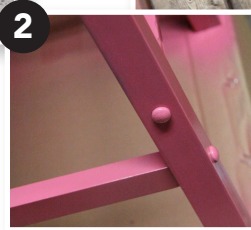

Always thoroughly review directions on the package before using any product.



As shown Varathane Wood Stain in Kona; Painter's Touch Ultra Cover 2X Gloss Berry Pink; Varathane Soft-Touch Polyurethane Matte Finish

 **RUST-OLEUM**[®]

Visit www.homedepot.com/rustoleum for other great ideas, products and inspiration.