






48"CAST ALUM. DINING TABLE







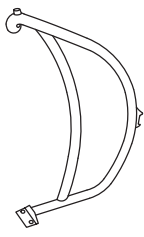


CO600148-BK








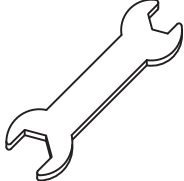


# PARTS LIST

<p><b>A</b></p> 	<p><b>B</b></p> 	<p><b>C</b></p> 
<p><b>Top</b> 1 PC</p>	<p><b>Leg</b> 4 PCS</p>	<p><b>Stretcher</b> 1 PC</p>

# HARDWARE LIST


<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 	<p><b>4</b></p> 	<p><b>5</b></p> 
<p><b>Cylinder Bolt</b> (M8*25) 4 PCS</p>	<p><b>Spring Washer</b> (M8) 4 PCS</p>	<p><b>Flat Washer</b> (M8) 4 PCS</p>	<p><b>Nut (M8)</b> 4 PCS</p>	<p><b>Nut Cap (M8)</b> 4 PCS</p>
<p><b>6</b></p> 	<p><b>7</b></p> 	<p><b>8</b></p> 	<p><b>9</b></p> 	
<p><b>Bolt</b> (M6*30) 8 PCS</p>	<p><b>Flat washer</b> (M6) 8 PCS</p>	<p><b>Bolt cap</b> (M6) 8 PCS</p>	<p><b>Wrench</b> (M6) 1 PC</p>	

- |                      |   |     |
|----------------------|---|-----|
| ① Bolt (M8*25)       |  | x 4 |
| ② Spring Washer (M8) |  | x 4 |
| ③ Flat Washer (M8)   |  | x 4 |
| ④ Nut (M8)           |  | x 4 |
| ⑤ Nut Cap (M8)       |  | x 4 |
| ⑥ Bolt (M6*30)       |  | x 8 |
| ⑦ Flat Washer (M6)   |  | x 8 |
| ⑧ Bolt Cap (M6)      |  | x 8 |

Step 1: Place Top (A)  
upside down on a soft cloth.

Insert all Cylinder Bolts (Part #1) into  
the pre-drilled holes of Top (A).

Step 2: Attach two adjacent Legs (B)  
to Top (A) by inserting the Cylinder  
Bolts (Part #1) through the holes in  
the ends of the Legs (B). Now secure  
the Legs (B) using Flat Washers  
(Part #3), Spring Washers (Part #2)  
& Nuts (Part #4).  
Note - -Tighten Nuts only half way  
using wrench (#9) .

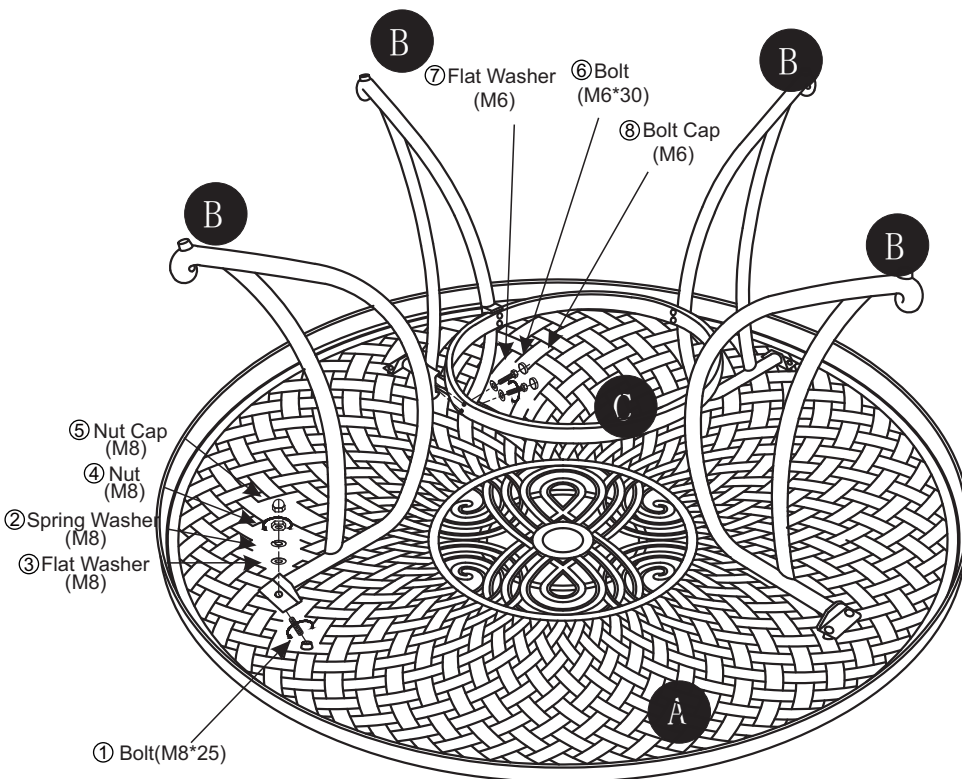

Step 3: Attach Stretcher (C) to  
attached Legs (B) using Flat Washers  
(Part #7), and Bolts (Part #6) as shown.  
Note - Tighten Nuts only half way  
with wrench (#9). Now attach the other two  
Legs (B) to Top (A) & Stretcher (C)  
using the same method as the first  
two legs. Tighten all bolts completely  
with wrench (#9).

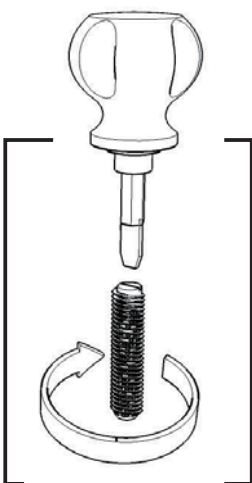


Figure 1

Flathead screw  
driver(not included)

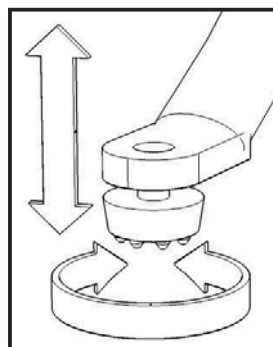


Figure 2

Step 4: Cover all Nuts and bolts with  
Nut Caps (Part #5) & Bolt Caps (Part  
#8). Turn the table over into the upright  
position in your congratulations! You  
are finished.