


1 Parts Identification

TK 95-80
TK 95-80S

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

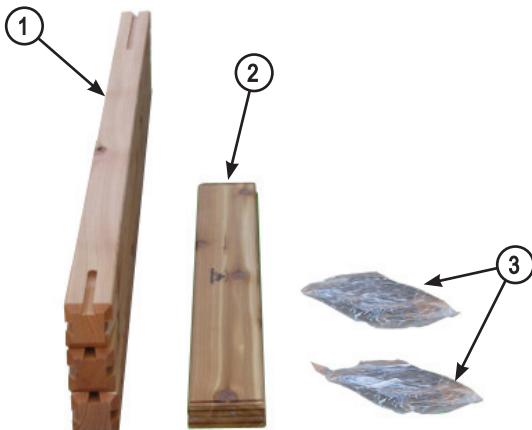

Parts List


ITEM	QTY.	PART #	DESCRIPTION
1	3	7002	Trellis Post, 4" x 4" x 80"
2	2	4501LN	Side Rail, w/Logo Notched Board, 45" x 5-1/2" x 1"
3	2	8007	Trellis Net

2 Post Assembly

Remove one 4" x 4" x 19" post by lifting straight upward and removing from the garden bed.

Install a 4" x 4" x 80" trellis post (Item 1). Align the trellis post slots with the side rails and lower trellis post fully to the ground.

Repeat this procedure for the two remaining trellis posts.

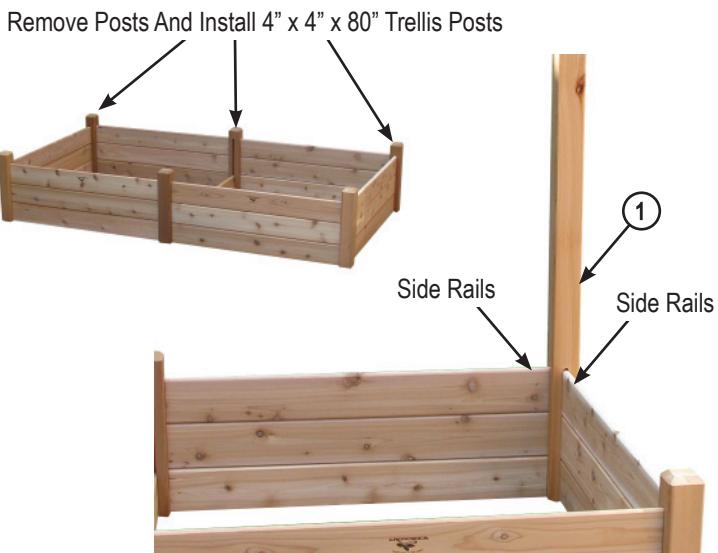

Packaged & Inspected by:


Date:

Continued

3

Weave the trellis net (Item 3) onto the 45" x 5-1/2" side rail (Item 2).


Stretch and secure trellis net across the side rail and lock net into notched ends on each end of the side rail.

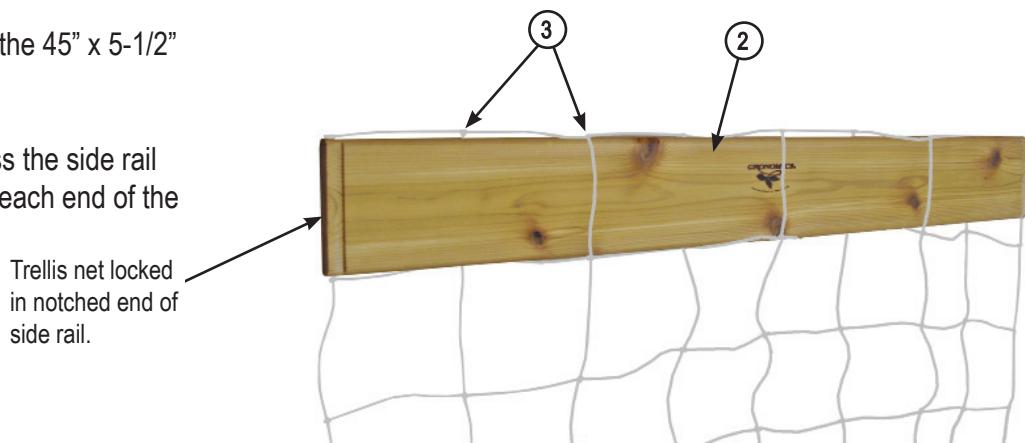

4 Side Rail Placement

Install the 45" x 5-1/2" side rail (Item 2) (with Logo facing the planter box) into the slots on the trellis posts and slide the side rail down.

NOTE: Make sure the net stays seated in the notches on the ends of the side rail when installing side rail and trellis net onto the trellis posts.

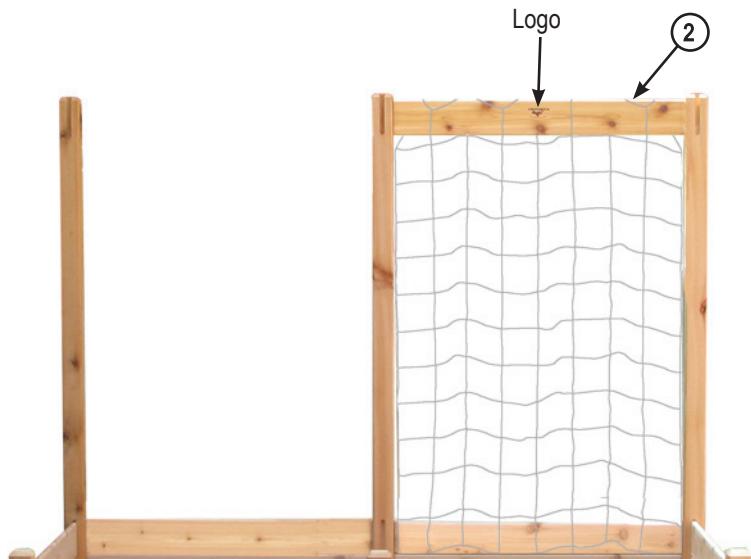

5 Securing Trellis Net

Stretch and secure the trellis net with staples to the garden bed side rail or secure the trellis net to the ground with ground stakes.

Repeat steps 3 - 5 for the second trellis net.

Use ground stakes or staples (supplied in kit) to secure the trellis net.

