

## Installing Your Rails

### Important Notes for your 2x6 Rails


- ***\*\*Important Warning\*\*Do not use for decking because of the smooth finish. Woodguard is not meant to be a “walk on surface”.***
- You can use Woodguard 2x6 for structural support deck framing and or deck railings.
- ***Install Horizontally*** only and avoid installing in the vertical position. If you must install vertically the bottom cap will fill and hold water. You should put 4 each- 1/4” holes in the bottom of the cap for drainage and use a silicone caulking to completely seal the bottom cap once installed on the 2x6. Make sure the cap does not come in contact with the soil as this will void your warranty.
- Always check with your local building department when using Woodguard in structural applications.
- Do not counter sink fasteners when installing.
- When bolting use appropriate washers in conjunction with bolts and nuts.

### Cutting 2x6

- The 2x6 caps are installed with a removable adhesive. Prior to cutting 2x6, remove cap, cut to required length and reinstall cap. Polymer coating may shrink slightly after cutting.

### Fastening 2x6

- You can use appropriate nails or screws for your project and avoid using finish nails.
- The head of the fastener should not penetrate under the coating which will leave a hole in the polymer. Proper fastening will have the head of the fastener seal against the plastic. Do no counter sink fasteners.

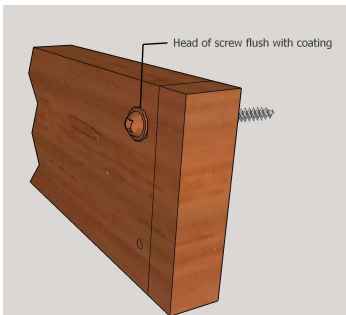

### Installation Hotline

818-523-6603