


Installation Instructions – XR6 TILES

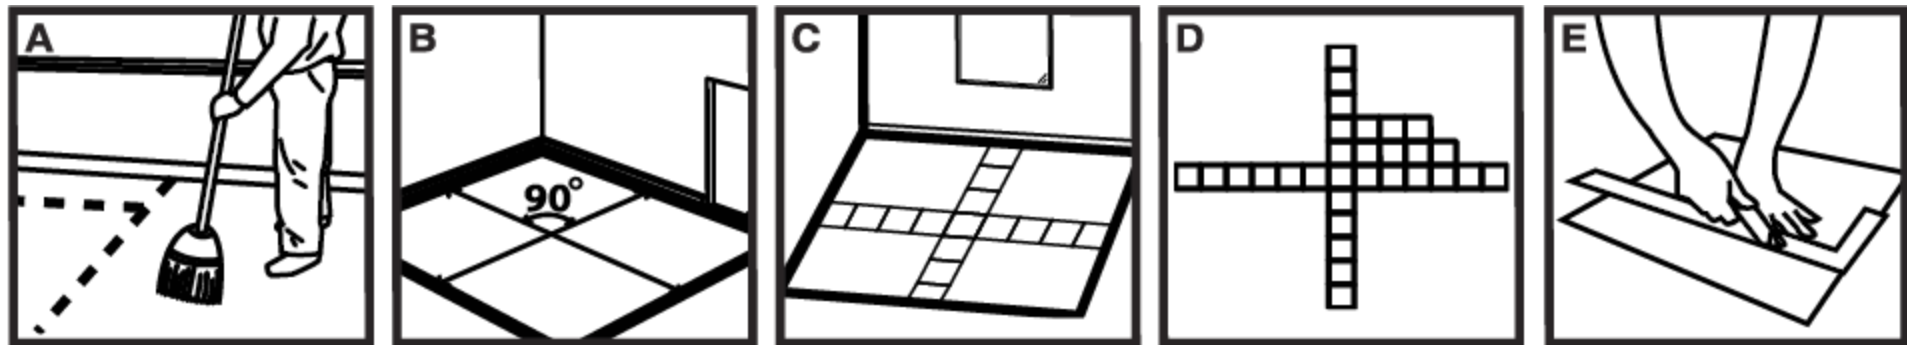

Easy and Fast to Install:

- Please carefully review instructions before installing XR6 Tile
- No special tools required
- XR6 Tile can generally be installed over existing indoor residential flooring that is solid, smooth, dry, level, securely attached and clean

Tools Required:

- Utility knife, fitted with a heavy duty knife
- Straight edge
- Pencil or chalk marker
- Tape measure
- Rubber mallet

Installation Instructions

1. Ensure that the floor surface is smooth, level, dry clean and free from grease and oils. Check for cracks, gapped seams, nails or other damage. Patch or fill any large holes (A).
2. Calculate the center of the room by measuring the length and width of the room and divide the dimensions in two. Mark the center of the room with a pencil or chalk marker.
3. Begin to lay the tiles from the center point of the room in both directions towards the wall (C). Make sure the tiles that meet the wall will be at least half a full tile in width as this will give a better looking installation. If the space between the tile and the wall is less than half a tile wide, adjust the center start point as necessary to achieve this look.
4. Now you can begin to fill in each of the four quadrants that you've create (D).
5. On reaching the walls you will probably need to cut the tiles to fit against the wall. Measure the distance between the last tile and the wall and cut off the excess width of the tile.

NOTE on cutting – Cut tiles using a utility knife with a sharp blade and straight edge (E). To fit tiles around irregular shapes of corners i.e. door jams, pipes etc. Make a pattern from cardboard or heavy paper. Trace the pattern onto the tile and cut with a utility knife.

Cleaning and Maintenance: XR6 Tiles can be cleaned by vacuuming. You can use a damp mop with a mild detergent for more soiled area. Allow floor to dry thoroughly.